

HYD 552

HYD 552

UNITED STATES
DEPARTMENT OF THE INTERIOR
BUREAU OF RECLAMATION

BUREAU OF RECLAMATION
HYDRAULIC LABORATORY


MASTER
FILE COPY

DO NOT REMOVE FROM THIS FILE

WATER MEASUREMENT PROCEDURES
IRRIGATION OPERATORS' WORKSHOP--1965

Report No. Hyd-552

Hydraulics Branch
DIVISION OF RESEARCH

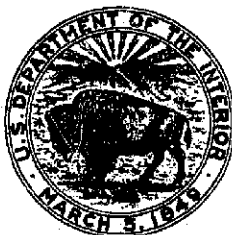

OFFICE OF CHIEF ENGINEER
DENVER, COLORADO

November 15, 1965

HYD 552

ABSTRACT

"Water Measurement Procedures" was written primarily for use in the Irrigation Operators' Workshop classes as a teaching aid in presenting the fundamentals of water measurement to field personnel engaged in irrigation work. Technical material has been simplified to an ultimate degree to provide a clearer understanding of water measurement devices and procedures. Basic hydraulics presented includes the discharge equation, velocity head concept, orifice and weir relationships, and the effect of submergence. Weirs are used to indicate the influence on accuracy of approach flow, turbulence, rough water surface, and poor flow patterns. Factors affecting the accuracy of measurement such as worn equipment, infrequent head measurement, use of wrong measuring device, and others are analyzed. Commonly used devices and methods are discussed including orifices, weirs, venturi meters, flumes, meter gates, constant head turnouts and propeller meters; new devices and methods include vane deflection meters, acoustic and magnetic meters, and the dilution and radioisotope methods of measurement. Hints for troubleshooting poorly operating devices, suggestions to operators on how to do a good job, and a selected reading list for operators are given.

DESCRIPTORS-- *hydraulics/ *hydraulic structures/ *discharge measurement/ *irrigation/ water delivery/ *water measurement/ open channel flow/ errors/ closed conduit flow/ discharge coefficients/ weirs/ orifices/ water meters/ water metering/ irrigation O&M/ turbulent flow/ venturi meters/ instruction/ venturi flumes/ submerged orifices/ radioactive isotopes/ velocity/ field investigations/ flow meters/ bibliographies/ submergence/ instrumentation
IDENTIFIERS-- textbooks/ Irrigation Operators Workshop/ dilution method/ acoustic flow meters/ magnetic flow meters/ constant-head orifices/ vane deflection meters

UNITED STATES
Department of the Interior
Bureau of Reclamation

Office of Chief Engineer
Division of Research
Hydraulics Branch
Special Investigations Section
Denver, Colorado
November 15, 1965

Report No. Hyd-552
Author: A. J. Peterka
Submitted by: H. M. Martin

Water Measurement Procedures
Irrigation Operators' Workshop--1965

This report contains accumulated lecture notes "Water Measurement Procedures" presented during 5 consecutive years of "Irrigation Operators Workshop" meetings conducted by the Bureau of Reclamation, Chief Engineer's Office, in the Denver Federal Center, Denver, Colorado. In previous years, the notes were made available only to the Workshop participants. However, because of increasing general interest and numerous requests for information on water measurement, these notes have been reproduced as a Hydraulics Branch Report to make them more accessible to a greater number of readers.

Bureau of Reclamation
Denver Federal Center

IRRIGATION OPERATORS' WORKSHOP - 1965

WATER MEASUREMENT PROCEDURES

by

Alvin J. Peterka
Hydraulics Branch
Division of Research

CONTENTS

	<u>Page</u>
Foreword	
Need for Improving Water Measuring Devices and Techniques	S4-5
Standard and Nonstandard Devices	S4-6
Basic Principles of Water Measurements	S4-7
Some Basic Hydraulics	S4-8
Derivation of Discharge Equation	S4-8
Derivation of Velocity Head Concept	S4-10
Basic Orifice Relationship	S4-11
Basic Weir Relationship	S4-13
General Aspects of Water Measurement Accuracy	S4-16
Flow Characteristics Reducing Accuracy of Measurement	S4-16
Approach Flow	S4-16
Turbulence	S4-17
Rough Water Surface	S4-19
Velocity of Approach	S4-21
Poor Flow Patterns	S4-23
Exit Flow Conditions	S4-23
Equipment Characteristics Reducing Accuracy of Measurement	S4-24
Weathered and Worn Equipment	S4-24
Poor Workmanship	S4-25
Measuring Techniques Reducing Accuracy of Measurement	S4-27
Faulty Head Measurement	S4-28
Infrequent Measurement	S4-30
Use of Wrong Measuring Device	S4-31
Elaborations on the Basic Water Measuring Devices and Techniques	S4-32
Submerged Orifice	S4-32
Orifice in Pipeline	S4-33
Venturi Meters	S4-37
Venturi Flumes	S4-40
Metergates	S4-43
Sources of Discharge Indication Error	S4-44
Type of gate	S4-44
Stilling-well blockage	S4-44
Gate and gage-opening indicator	S4-44
Approach area	S4-45

CONTENTS--Continued

	<u>Page</u>
Submergence	84-45
Small differential head	84-45
Location of stilling-well intakes	84-46
 Metergate Installation	 84-48
Constant-Head Orifice Turnout	84-50
Discharge Characteristics.	84-51
Discharge Determination Errors	84-52
Effect of Entrance Structure Geometry.	84-55
Current Meter Gaging Stations	84-57
Weirs	84-58
Propeller Meters	84-58
 Flow Patterns.	 84-59
Spiral Flow	84-59
Velocity Profiles	84-61
Propeller & Pipe Size Relationships.	84-62
Propeller Motion	84-63
Meter Screens and Sand Traps	84-65
Head Losses.	84-66
Meter Accuracy	84-66
Effect of Meter Setting	84-67
Effect of Initial Counter Setting	84-67
Effect of Rapidly Varying Discharge	84-67
Effect of Turnout Design.	84-67
 Meter Costs, Maintenance	 84-71
Choice of Meter Size	84-72
 New Measuring Devices and Techniques	 84-73
Vane Deflection Meter	84-73
Dilution Method	84-74
Radioisotope Method	84-77
Acoustic Flowmeter	84-83
Magnetic Flowmeter.	84-85
Conclusions.	84-86
References	84-86
Comparison of Operating Heads Required for Various Systems	84-90

FOREWORD

These notes contain the essential parts of four previous workshop sessions presented in 1961, 1962, 1963, and 1964. A new section on propeller meters has been added; other new developments have been included; and some of the original material has been edited to provide a clearer understanding of water measuring procedures and practices.

Standard and nonstandard devices are defined and their implications in regard to water measurement are discussed.

Water measuring devices and methods are classified under three categories: (1) the velocity device, (2) the head device, and (3) miscellaneous devices including chemical and dye dilution methods, total count radioisotope methods, magnetic methods and sonic methods.

Under "Some Basic Hydraulics," the concepts of the discharge equation and velocity head are developed; these two concepts are used to derive the basic equations for both orifice and weir discharge using the simplest methods possible. Several of the general aspects of water measurement accuracy are also discussed.

Flumes and weirs, probably the most commonly used devices, are used to furnish examples of good and poor water measurement practices. This is done because the majority of irrigation operators are more familiar with these devices and not because it is desired to condemn or praise these structures as measuring devices. Furthermore, the effects of good and bad measurement practices are often visible on weirs or flumes and are not visible in some of the more sophisticated measuring devices.

After a general explanation of the simpler devices has been made, more complicated devices and techniques such as the submerged orifice meter, Venturi meter, metergate, and constant-head orifice turnout measuring device, and propeller meters are described.

Hints are given for troubleshooting metering devices suspected of being inaccurate and instructions are given for selecting the proper size and obtaining proper installation of metergates and constant-head orifice meters.

Progress in water measuring techniques including the chemical dilution and radioisotope methods is reported, and an evaluation of commercially available open channel deflection meter is given. Progress in the development of magnetic and acoustic meters is reported. A list of reference material and a chart showing the head required to operate certain measuring devices are presented.

NEED FOR IMPROVING WATER MEASURING DEVICES AND TECHNIQUES

It is impossible at the moment to overstate the need for an improved water measuring program, not only in your district, project, or region, but nationwide, and even worldwide. The population explosion and the shifting of the population center of the United States toward the West is causing concern in that water needs may eventually limit this movement. According to the latest figures if we account for births, deaths, immigrants, and emigrants, we have a new person arriving on the scene every 10 seconds; 8,000 a day; 3,000,000 a year. By the end of the century the population will have doubled. Twice as many people--the same amount of water. Within the next decade, every water supply, not only those in the West but throughout the United States, will be critically examined to determine quantity, use, and waste. Plans will be formulated for extending the use of the water.

One way to increase the available water, of course, is to find new water sources. This is not always possible and is usually costly. The other way is to conserve and equitably distribute the water now developed and available. This latter course is usually possible and less expensive. We are interested in the latter course because this is our business and, as all of you know, more extensive use of the available water can be made if all measuring devices are accurate and dependable at all times and the best water management procedures are followed at all times. It is, therefore, important that every attempt be made to upgrade existing water measuring devices, not only in ditches, laterals, and canals, but in the supply systems as well. Every cubic foot of water saved as a result of improving the measuring devices is more valuable than a similar amount obtained from a new source because the saved water can be produced at considerably less cost.

Accuracy in water measurement is therefore of prime importance in the operation of any water distribution system. Even though a surplus of water may now exist on your project, it is time to begin accurate accounting of what happens to your water. A recent experience on a project actively engaged in upgrading water measurement devices and procedures will serve as a good example. A water user entitled to 1 cubic foot per second had been receiving up to 5 cfs because water had been plentiful and no accurate measuring device had been installed at his turnout. When a new meter was installed and 1 cfs was delivered, he complained that his new concrete field distribution system would not operate properly and much of his acreage would have to go without water until he could change the elevation and slope of his ditches.

This actual occurrence illustrates another point which is important in water measurement. Practically all measuring devices, when in rundown condition or when improperly installed, deliver more water than they indicate they are delivering. The very nature of most measuring devices makes it impossible for a device to deliver less water than it indicates. For this reason, water accounting records may not show a proper division between water used and water lost through seepage or waste. Proper evaluation of losses is necessary to establish the economic advisability of providing canal linings. Canal linings obviously cannot help to recover water lost through poor measuring equipment or procedures.

The purpose of this presentation is to discuss the factors in flow measurement devices which affect the accuracy of discharge measurement. To accomplish this, it is necessary to understand the basic flow principles involved and to know how each flow factor can influence the flow quantity indicated. By upgrading existing measurement devices or by properly installing and maintaining new devices, considerable quantities of water can be made available for new uses. This "new" water can be produced at considerably less cost than can a similar quantity be developed from a new source.

STANDARD AND NONSTANDARD DEVICES

It has been said that a waterlogged boot which is partially blocking the flow in a ditch can be a measuring device--if it is properly calibrated. Certainly the boot would be a nonstandard device because no discharge tables or curves are available from which to determine the discharge. Many other devices including certain weirs, flumes, etc., are also nonstandard because they have not been installed correctly and, therefore, do not produce standard discharges. Although these commonly used devices may appear to be standard devices, closer inspection often reveals that they are not, and like the boot, must be calibrated to provide accurate measurements.

A truly standard device is one which has been fully described, accurately calibrated, correctly installed, and sufficiently maintained to fulfill the original requirements. Standard discharge tables or curves may then be relied upon to provide accurate water measurements.

Any measuring device, therefore, is nonstandard if it has been installed improperly, is poorly maintained, is operated above or below the prescribed limits, or has poor approach (or getaway) flow conditions. Accurate discharges from nonstandard structures can be obtained only from specially prepared curves or tables based on calibration tests such as current meter ratings.

Calibration tests can be quite costly when properly performed. Ratings must be made at fairly close discharge intervals over the complete operating range, and curves and/or tables prepared. It is, therefore, less costly and usually not too difficult to install standard devices and maintain them in good condition. Standard discharge tables may then be used with full confidence.

In maintaining a standard structure it is only necessary to visually check a few specified items or dimensions to be sure that the measuring device has not departed from the standard. In maintaining a nonstandard device it is difficult to determine by visual inspection whether accuracy is being maintained except by recalibration.

BASIC PRINCIPLES OF WATER MEASUREMENTS

To upgrade existing water measuring devices and improve the quality of installation of new devices it is necessary to understand some of the basic principles which influence the quantity of water passed by a measuring structure. Most devices measure discharge indirectly, i.e., velocity or head is measured directly and prepared tables are used to obtain the discharge. Measuring devices may be classified, therefore, in two groups: (1) velocity type and (2) head type. Those using the velocity principle include:

- A. Float and stopwatch
- B. Current meters
- C. Clausen-Pierce weir gage (or stick)
- D. Propeller meters
- E. Flow boxes
- F. Vane deflection meters

When the velocity (V) principle is used, the area of the stream cross-section (A) must be measured and the discharge (Q) computed from $Q = AV$.

Devices using the head principle include:

- A. Rectangular weirs
- B. V-notch or multiple notched weirs
- C. Cipoletti weir
- D. Parshall flume
- E. Metergates
- F. Orifice or venturi meters

When the head (H) principle is used, the discharge (Q) may be computed from an equation such as the one used for a sharp-crested rectangular weir of length L,

$$Q = CIH^{3/2}$$

The area of the cross-section (A) does not appear directly in the equation but C, a coefficient, does. C can vary over a wide range in a nonstandard installation but it is well defined for standard installations.

Special methods and devices may also be used and these include dilution methods which utilize chemicals or radioisotopes, acoustic or magnetic meters, Pitot tubes, tapered-tube-and-float devices, and many others which are not commonly used. In the dilution method the discharge is determined by calculating the quantity of water necessary to dilute a known quantity of concentrated chemical, dye, or radioisotope solution, injected into a flowing stream, to the strength obtained by sampling the stream after thorough mixing has taken place. Chemical analysis, color comparison, or gamma ray counting may be used to determine the degree of dilution of the injected sample. In the acoustic meter the variation in velocity of a sound pulse produced by the water velocity is used to determine the average water velocity of the flow. In the magnetic meter the flowing water disturbs the lines of force in a magnetic field to produce a voltage that can be related to the discharge. Pitot tubes and tapered-tube-and-float devices utilize the velocity head to indicate velocity.

SOME BASIC HYDRAULICS

DERIVATION OF DISCHARGE EQUATION


The volume of a cube (Figure 1) may be found by multiplying a times b times c

a times b gives the area A

$$2 \times 2 = 4 \text{ sq ft}$$

A times c gives the volume

$$4 \times 2 = 8 \text{ cu ft}$$

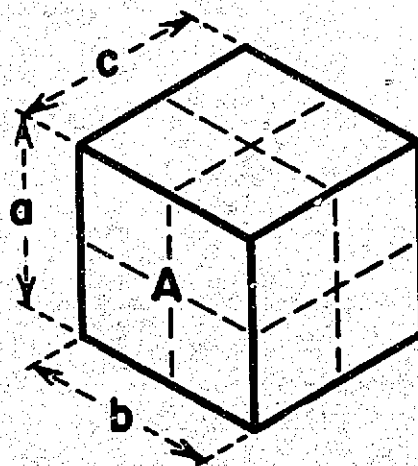

$$a \times b = \text{Area (A)}$$

$$A \times c = \text{Volume}$$


Figure 1

The volume of a cylinder (or pipe) may be similarly found (Figure 2). If the A for the cylinder is 2 sq ft and l is 4 ft then

area, A, times l gives the volume

$$2 \times 4 = 8 \text{ cu ft}$$

Figure 2

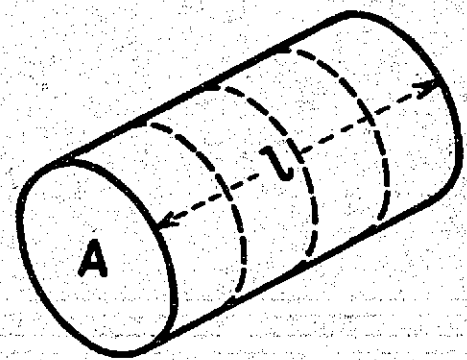

$$A \times l = \text{Volume}$$

The measurement of discharge is actually a volume measurement and can be calculated in the same way using different terms

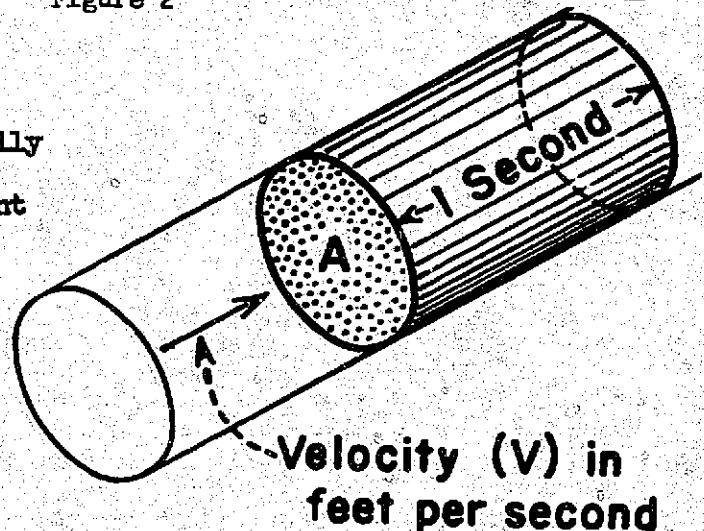


Figure 3

Instead of using l, as before, substitute the velocity v (Figure 3) and,

$$\text{Discharge} = \text{Area} \times \text{Velocity}$$

or

$$Q = AV$$

Since "Area" units are in square feet and "Velocity" units are in feet per second

$$Q = \text{square feet times feet per second}$$

$$Q = \text{cubic feet per second}$$

Therefore, the discharge Q in cubic feet per second is equal to the Area of the flow cross section in square feet times the Velocity in feet per second.

The first basic equation is

$$Q = AV \quad \dots (1)$$

DERIVATION OF VELOCITY HEAD CONCEPT

It has been found by direct measurement that an object (including water) falling from rest will fall 16.1 feet in the first second. Because of the continuing acceleration caused by gravity, the object will fall 64.4 feet in 2 seconds, etc., as shown in Table 1.

Table 1

Time in seconds :	Vertical fall feet :	Instantaneous velocity :
1	16.1	32.2
2	64.4	64.4
3	144.9	96.6
4	257.6	128.8
5	400.0	161.0

At the end of the first second the velocity will be twice the vertical fall distance (because the object started from rest at zero velocity) or 32.2 feet per second, Table 1. Therefore, the acceleration due to gravity is 32.2 feet per second per second.

Since the acceleration due to gravity, g , is constant, the velocity values in Table 1 increase 32.2 for each succeeding second.

An equation to express these facts is

$$V = \sqrt{2gH} = \sqrt{2g} \sqrt{H} \quad \dots (2)$$

where g is the acceleration due to gravity and H is the height of fall.

Substituting values from Table 1

$$V = 8.02 \sqrt{16.1} = 32.2$$

$$V = 8.02 \sqrt{64.4} = 64.4, \text{ etc.}$$

The equation is therefore seen to be valid.

After squaring both sides, Equation 2 becomes

$$v^2 = 2gH \quad \text{or} \quad H = \frac{v^2}{2g} \quad \dots (3)$$

The latter expression is often used to express velocity head, i.e., the head necessary to produce a particular velocity.

BASIC ORIFICE RELATIONSHIP

Equations 1 and 2 can be used to develop an equation for the flow through an orifice (a hole in the side or bottom of a container of water, Figure 4).

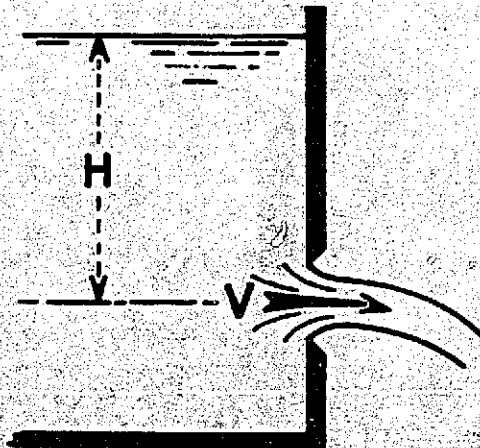


Figure 4

To find the velocity of flow in the orifice, use Equation 2, $V = \sqrt{2gH}$. Then using the size or area of the hole, the quantity of water being discharged, Q , can be determined using Equation 1, $Q = AV$. This can be accomplished in one step, however, if the two equations are combined.

Inserting the value $\sqrt{2gH}$ for V in $Q = AV$ gives

$$Q = A \sqrt{2gH}$$

... (4)

the equation for the theoretical discharge through an orifice. This equation assumes that the water is frictionless and is an ideal fluid. Since water is not an ideal fluid, a correction must be made.

The jet of water, after passing through the orifice, continues to contract, and if the orifice edges are sharp, the jet will appear as shown in Figure 5.

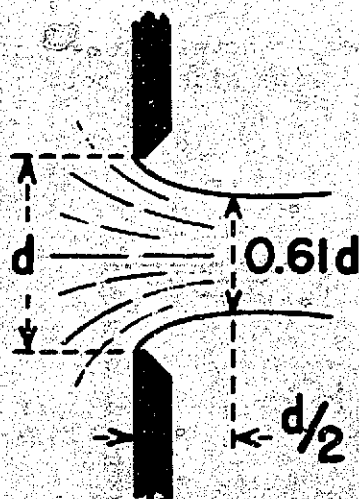


Figure 5

To explain, at one-half of the orifice diameter downstream from the sharp edge, $d/2$, the maximum jet contraction will occur and the cross-sectional area of the jet of water will be only about six-tenths of the area of the orifice. The maximum velocity also occurs at this point, and so Equation 4 must contain a coefficient "C" (in certain cases 0.61) to determine the quantity of water being discharged.

$$Q = CA \sqrt{2gH}$$

... (5)

For a coefficient of 0.61, the equation would become

$$\begin{aligned}
 Q &= 0.61 A \sqrt{2g} \sqrt{H} \\
 &= 0.61 A 8.02 \sqrt{H} \\
 &= 4.89 A \sqrt{H}
 \end{aligned}$$

The value 0.61 is an approximate value and should not be used in practice, however, until calibration tests have established it as a proper value for the particular application at hand.

BASIC WEIR RELATIONSHIP

Equations 1 and 2 can also be used to develop an equation for flow over a weir (a sharp-edged blade that measures discharge in terms of overflow depth or head, Figure 6).

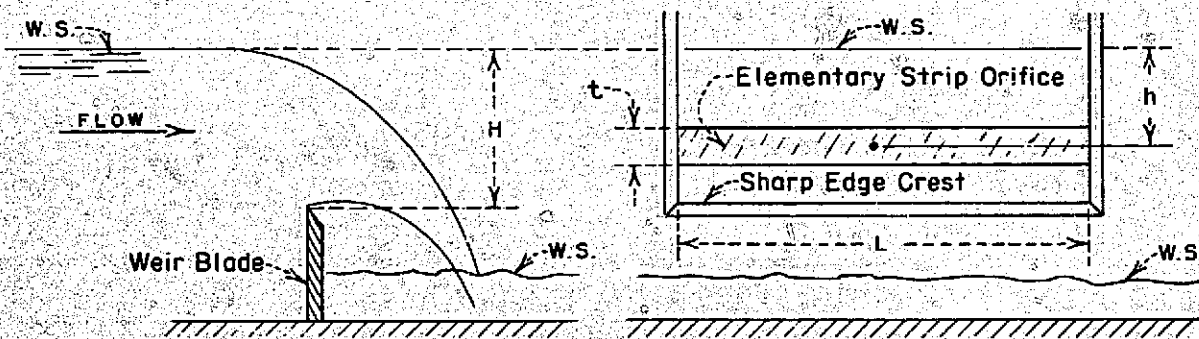


Figure 6

The weir flow is divided into small elementary horizontal strips and each is considered to be a long narrow rectangular orifice of length (L), height (t), and a flow producing head (h). The area (a) of each strip is

$$a = tL$$

The velocity (V) of each element is expressed by Equation 2:

$$V = \sqrt{2gh}$$

Since $q = VA$ by Equation 1, the discharge (q) of each element is:

$$q = tL\sqrt{2gh}$$

To obtain the total discharge (Q) over the weir, the sum of all elementary discharges (q) must be taken. For example, the flow is divided into two elementary strip orifices, Figure 7.

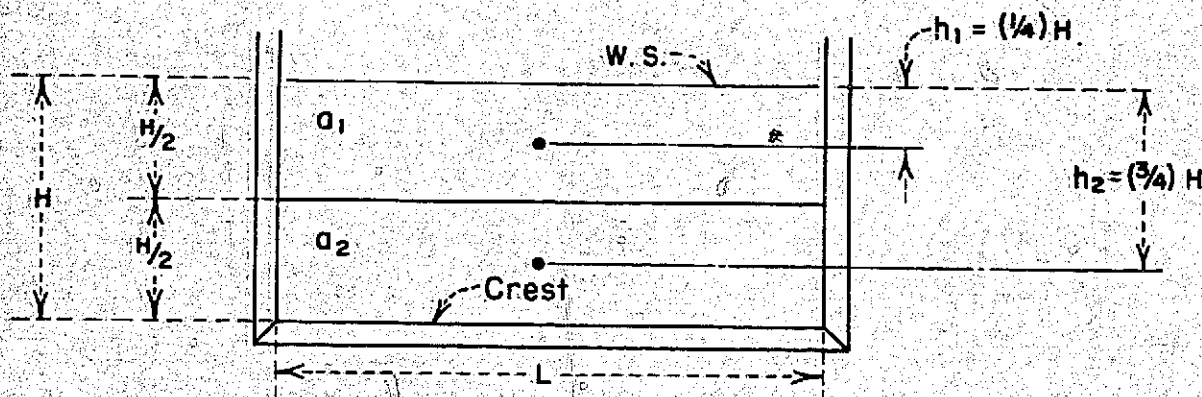


Figure 7

By Equation 2,

$$V_1 = \sqrt{2gh_1} = \sqrt{2g\left(\frac{1}{4}\right)H}$$

$$V_2 = \sqrt{2gh_2} = \sqrt{2g\left(\frac{3}{4}\right)H}$$

and the areas of the elements are equal and expressed by

$$a_1 = a_2 = L\left(\frac{H}{2}\right)$$

By Equation 1 and addition, the total discharge (Q) over the weir is given by

$$Q = a_1 v_1 + a_2 v_2$$

$$Q = L \left(\frac{H}{2} \right) \sqrt{2g \left(\frac{1}{4} \right) H} + L \left(\frac{H}{2} \right) \sqrt{2g \left(\frac{3}{4} \right) H}$$

Taking $(\sqrt{2g} \cdot LH \sqrt{H})$ out of each expression on the right-hand side:

$$Q = \left(\frac{1}{2} \sqrt{\frac{1}{4}} + \frac{1}{2} \sqrt{\frac{3}{4}} \right) (\sqrt{2g} \cdot LH \sqrt{H})$$

and

$$\left(\frac{1}{2} \sqrt{\frac{1}{4}} + \frac{1}{2} \sqrt{\frac{3}{4}} \right) = K = 0.683$$

As more and more strips are used in the analysis K approaches the value 0.667. Therefore,

$$Q = \frac{2}{3} \sqrt{2g} \cdot LH \sqrt{H}$$

Introducing a constant (C') to account for contraction and friction losses, a more accurate discharge formula is:

$$Q = \frac{2}{3} \sqrt{2g} \cdot C' LH \sqrt{H}$$

By regrouping and letting

$$C = \frac{2}{3} \sqrt{2g} \cdot C'$$

$$Q = CLH \sqrt{H}$$

or

$$Q = CLE^{3/2}$$

... (6)

This relationship is the basic weir formula and can be modified to account for weir blade shape and velocity of approach. However, C must be determined by calibration tests carefully conducted. C usually varies from about 3.3 for a broad-crested weir to about 3.8 or more for a sharp-crested weir.

The two examples given indicate that discharge determination methods are a mixture of rationalized thinking and coefficient evaluation. The equations are useful in making calibrations because they reduce the number of calibration points required to make up a discharge table. However, the equations alone will not suffice without sufficient testing to establish the value of C .

GENERAL ASPECTS OF WATER MEASUREMENT ACCURACY

In this portion of the text general aspects of water measurement accuracy will be considered. The performance of weirs and flumes will be used to illustrate flow and accuracy principles because the average irrigation operator is more familiar with their use. Also, many of the factors which adversely affect accuracy are visible on these devices and are invisible on closed system devices. Many of the facts and principles established for weirs and flumes also apply to other water measuring devices. These principles will be mentioned and elaborated upon later when the more sophisticated meters and techniques are considered.

FLOW CHARACTERISTICS REDUCING ACCURACY OF MEASUREMENT

In inspecting a water measuring station to judge or evaluate its probable accuracy, it should be determined whether the device is a head or velocity measuring station. This is the key to the order and importance of other observations. In either case, the first observation should concern the visible flow conditions just upstream from the measuring device.

Approach Flow

Extremely large errors in discharge indication can occur because of poor flow conditions in the area just upstream from the measuring device. In general, the approaching flow should be the same as tranquil flow in long straight canals (without obstructions) of the same size. Any deviation from a normal horizontal or vertical flow distribution, or the presence of water surface boils, eddies or local fast currents, is reason to suspect the accuracy of the

measuring device. Errors of 20 percent are not uncommon and may be as large as 50 percent or more, if the approach flow conditions are very poor. Sand, gravel, or sediment bars submerged in the approach channel, weeds or riprap obstructions along the banks or in the flow area can cause unsymmetrical approach flow. Other causes may be too little distance downstream from a drop, check, turnout or other source of high velocity or concentrated flow, a bend or angle in the channel just upstream from the measuring device, a too rapid expansion in the flow section, or an eddy tending to concentrate the flow cross section.


Figure 8 shows an example of a poor approach to a weir. The high-velocity, turbulent stream is approaching the weir at a considerable angle. Head measurement is difficult because of the high velocity approach flow and the waves on the surface. This weir will not discharge a "standard" quantity of water consistent with the measured head.

Standard weir installations for rectangular, Cipoletti, and 90° V-notch weirs are shown in Figure 9. The velocity of approach to a weir should be less than 0.5 foot per second. This value is obtained by dividing the maximum discharge by the product of channel width B and depth G measured at a point $4H$ to $6H$ upstream from the blade.

Turbulence

Turbulence is the result of relatively small volumes of water spinning in a random pattern within the flow mass as it moves downstream. It may be recognized as water surface boils or 3-dimensional eddies which appear and disappear in a haphazard way. Because of this local motion within the general motion of the flow mass, any particle of water may at any given instant be moving forward, sideways, vertically, or even backward. In effect, then, the water is passing a given point with a start and stop motion rather than with a uniform velocity which is ideal. It may be said that turbulent water does not flow as a train of railroad cars on a level track, but rather as a train of cars coupled with elastic bands, traveling over a series of rises, dips, and horizontal curves. Thus, fewer or more cars may pass a given point over identical short periods of time, depending on the observation point chosen. Turbulent water flows in the same manner, Figure 8.

Excessive turbulence will adversely affect the accuracy of any measuring device but is particularly objectionable when using current meters or propeller meters of any kind. Turbulence can be objectionable even without the "white water," caused by air entrainment, which is often associated with it. Turbulence is usually

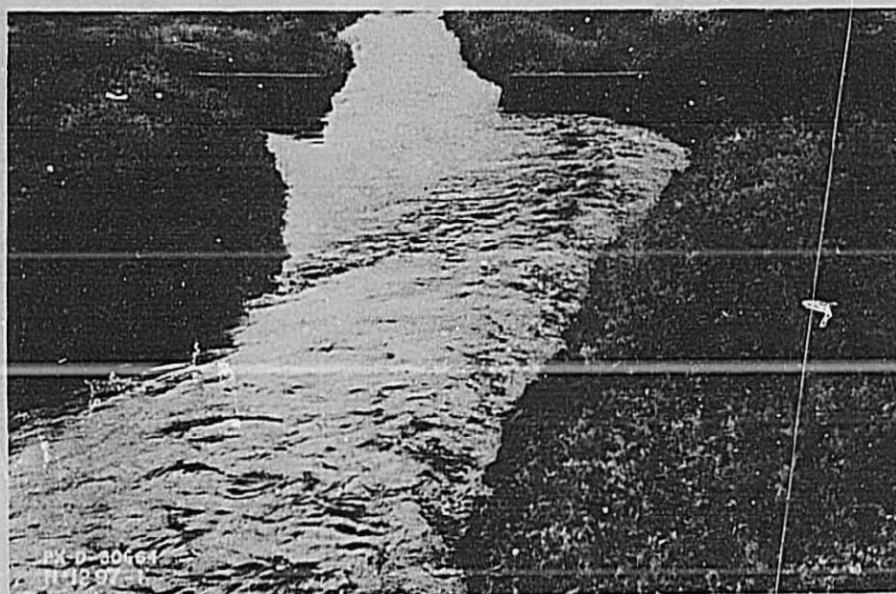

Poor approach flow conditions upstream from weir. The high-velocity, turbulent stream is approaching the weir at a considerable angle. Head measurement is difficult, and weir does not discharge a "standard" quantity. PX-D-30664

Figure 8

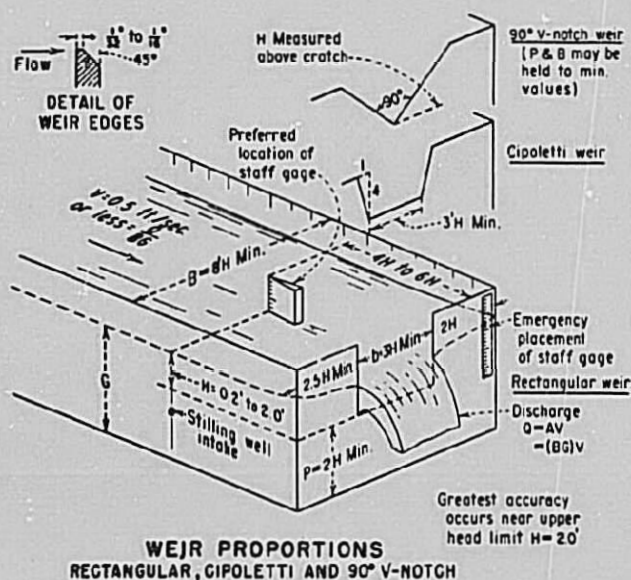


Figure 9


caused by a stilling basin or other energy dissipator immediately upstream, by a sudden drop in water surface or by obstructions in the flow area such as operating or nonoperating turnouts having projections or indentations from the net area. Shallow flow passing over a rough or steep bottom can also be the cause. Weeds or riprap slumped into the flow area or along the banks, or sediment deposits upstream from the measuring device also can cause excessive turbulence.

Measuring errors of up to 10 percent or more can be caused by excessive turbulence and it is absolute necessary that all visible signs of turbulence be eliminated upstream from a measuring device.

Rough Water Surface


A rough water surface, other than wind generated waves, can usually be eliminated by reducing turbulence or improving the distribution of the approach flow. A rough water surface can cause errors in discharge measurements when it is necessary to (1) read a staff gage to determine head, or (2) determine the cross-sectional area of the flow. A stilling well will help to reduce errors in head measurement but every attempt should be made to reduce the water surface disturbances as much as possible before relying on the well.

Errors of 10 to 20 percent are not uncommon if a choppy water surface makes it impossible to determine the head accurately. It is sometimes necessary to resort to specially constructed wave damping devices to obtain a smooth water surface. Figure 10 shows a schematic of an underpass type of wave suppressor successfully used in both large and small channels.

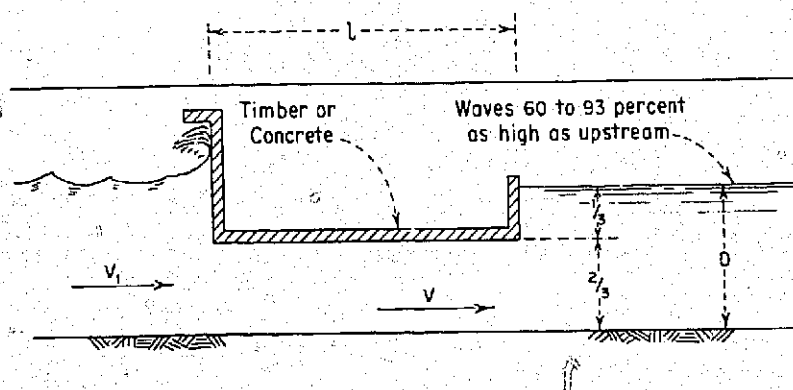


LENGTH L	PERCENT WAVE REDUCTION
1D TO 1.5D	60 TO 75
2D TO 2.5D	80 TO 88
3.5D TO 4.0D	90 TO 93

Figure 10
UNDERPASS WAVE SUPPRESSOR SECTION

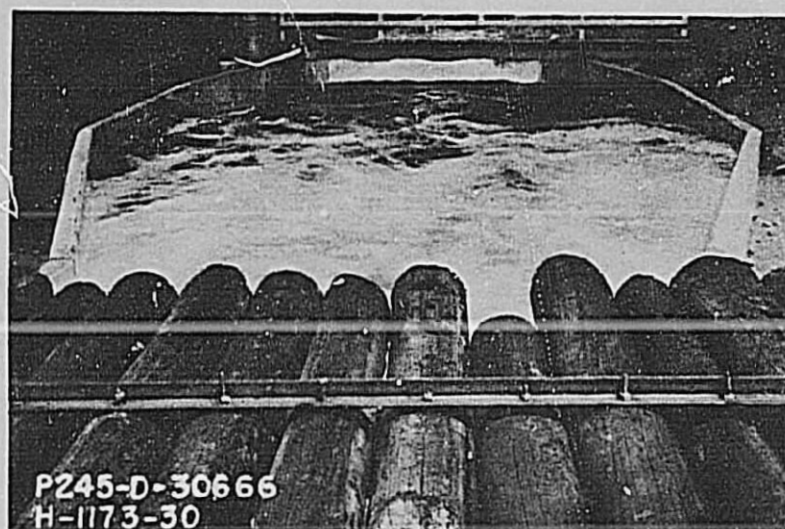

Turbulence and waves in a Parshall flume produced by an outlet works stilling basin made accurate discharge determination impossible. Log raft in foreground, used in futile attempt to quiet the flow, is inoperative. P245-D-30666

Figure 11

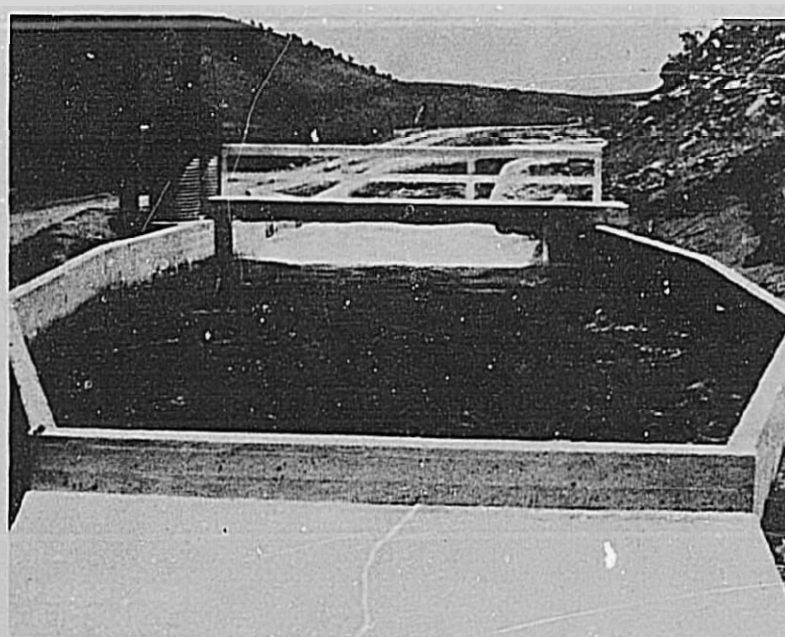


Underpass-type wave suppressor significantly reduces turbulence and waves in Parshall flume, making accurate discharge determination a routine matter. Compare with Figure 4. P245-D-30663.

Figure 12

The channel may be either rectangular or trapezoidal in cross section. Waves may be reduced as much as 93 percent by constructing the suppressor four times as long as the flow is deep. A slight backwater effect is produced by the suppressor for the most effective vertical placement. The suppressor may be supported on piers, can be constructed of wood or concrete, and need not be watertight. The design of several other types of suppressors, along with sample problems, is covered in Engineering Monograph No. 25, available through the Chief Engineer's Office, Denver, Colorado. Figures 11 and 12 (before and after) show the effectiveness of an underpass wave suppressor at a Parshall flume measuring station.

Velocity of Approach

It can be observed that as flow approaches a weir the water surface becomes lower on a gradually increasing curve, Figure 13.

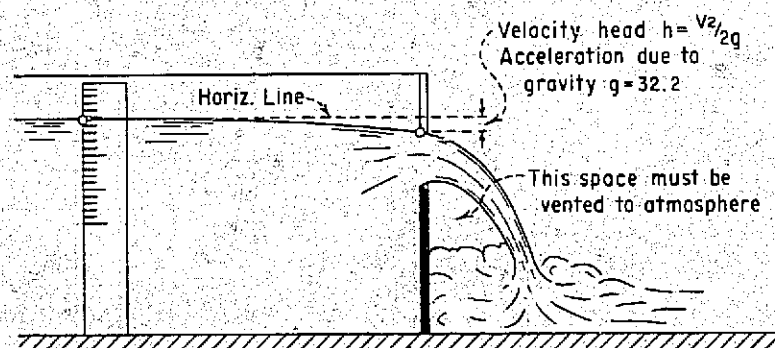

SECTION ON LONGITUDINAL CENTERLINE

Figure 13

At the weir blade, the water surface is considerably lower than say, 5 feet upstream. The difference in elevation between the two circled points on the surface of the approach flow is called the velocity head and represents the potential required to produce the increase in velocity between the points. The relation between head (h) and velocity (V) is expressed as


$$h = \frac{V^2}{2g}$$

g is the acceleration due to gravity, 32.2 (feet per second per second).

A drop in water surface of 0.1 foot is not uncommon just above a weir and (from the equation above) represents an increase in velocity of 0.8 foot per second. If the head on the weir is measured too close to the weir, the head measurement can be 0.1 foot too small. For a weir 6 feet long and discharging 7 cubic feet per second, the corresponding error in discharge would be about 35 percent, assuming that the indicated or reported discharge was 5.1 second-feet.

Standard weir tables are based on the measured head on the weir (velocity head negligible) and do not compensate for excessive velocity head. Any increase in velocity above standard conditions, therefore, will result in measuring less than the true head on the weir and more water will be delivered than is measured.

Causes of excessive velocity head include (1) too shallow a pool upstream from the weir, (2) deposits in the upstream pool, Figure 14, and (3) poor lateral velocity distribution upstream from the weir, Figure 8.

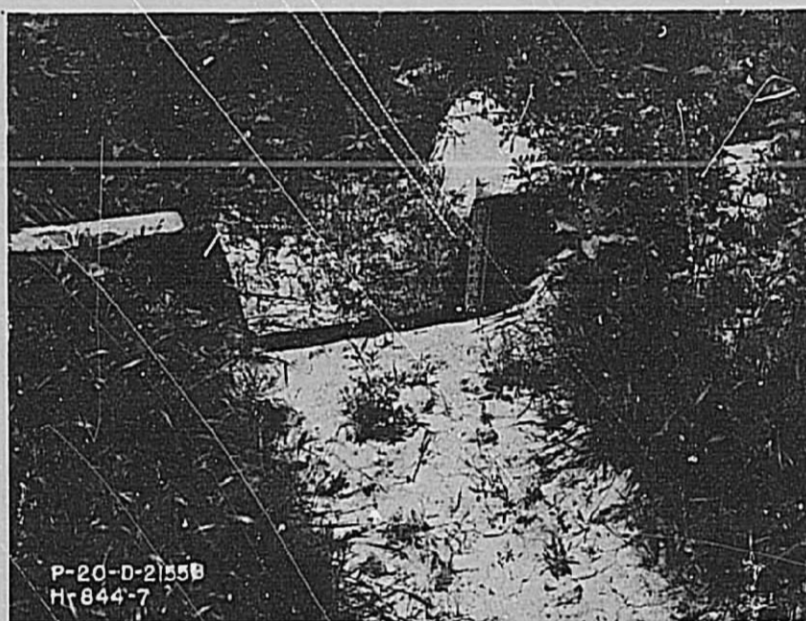

Sediment deposits have reduced the depth of the weir pool sufficiently to increase the velocity of approach to well above the desirable level. The head gage should not be located close to the weir blade. The weeds should be removed and the "edge" of the weir should be sharp. Discharges over this weir will be larger than indicated in "standard" tables. P-20-D-21558

Figure 14

Poor Flow Pattern

It is often found that the poor flow distribution which exists upstream from a measuring device cannot be resolved on the basis of any one of the above-discussed causes. The best solution then is to assume that several or more basic causes have together caused the difficulty. Starting with the easy factors, work through the list, improving each probable cause of poor flow patterns until the desired flow conditions are obtained.

Operating or nonoperating turnouts located just upstream from a measuring device may cause poor approach conditions as may bridge piers, channel curves, or a skewed measuring section. Relocating the measuring device may be the only remedy in these cases.

Submerged weeds or debris can cause excessive turbulence or local high velocity currents. Eddies adjacent to the shore line can cause the flow approaching a weir to contract into a narrow band. Sediment bars deposited from inflow or from sloughing banks can also produce undesirable flow conditions. More drastic remedial measures include deepening the approach area, widening the approach to make it symmetrical, or introducing baffles or other devices to spread the incoming flow over the entire width of the approach. Surface waves are usually very difficult to reduce or eliminate by ordinary procedures. These may require special treatment, as discussed under "Rough Water Surface."

Exit Flow Conditions

Exit flow conditions can cause as much flow measurement error as some of the approach flow problems. However, in practice, these conditions are seldom encountered. In general, it is sufficient to be sure that backwater does not occur sufficiently to submerge or tend to submerge a device designed for free flow. Occasionally, a Parshall flume is set too low and backwater submerges the throat excessively at high discharges. Extremely large errors in discharge measurement can be introduced in this manner. The only remedy is to raise the flume, unless some local obstruction downstream can be removed to reduce the backwater. Weirs should discharge freely rather than submerged, although a slight submergence (the backwater may rise above the crest up to 10 percent of the head) reduces the discharge a negligible amount (less than 1 percent). Whenever a weir operates at near submergence the operation should be checked. Submergence may not affect the discharge as much as the possible lack of nappe ventilation as a result of the rising backwater. Gates calibrated for free discharge at partial openings should not be submerged nor should eddies interfere with the jet of water issuing from the gate. Gaging stations should be

kept free of deposited sediment bars or other obstructions to prevent backflow or eddies from interfering with the uniform flow conditions which should exist in the cross section being measured. The underside of weir nappes should be ventilated sufficiently to provide near atmospheric pressure beneath the nappe; between the under nappe surface and the downstream face of the weir, Figure 12.

If the nappe clings to the downstream side of the weir (does not spring clear) the weir may discharge 25 percent more water than the head reading indicates. An easy test for sufficient ventilation is to part the nappe downstream from the blade for a moment with the hand or a shovel, to allow a full supply of air to enter beneath the nappe. After removing the hand or shovel, the nappe should not gradually become depressed (over a period of several or more minutes) toward the weir blade. If the upper nappe profile remains the same as it was while fully ventilated, it may be assumed that the weir has sufficient ventilation.

EQUIPMENT CHARACTERISTICS REDUCING ACCURACY OF MEASUREMENT

Measuring devices themselves may be at fault in producing measurement errors rather than the flow conditions discussed in the previous section. The faults may be divided into two types--those caused by normal wear and tear, and those resulting from poor installation.

Weathered and Worn Equipment

An unwelcome but fairly common sight on older irrigation systems are weir blades, which were once smooth and sharp, in a sad state of disrepair. Edges are dull and dented; the blade is pitted with large rust tubercles--weir plates are discontinuous with the bulkheads and are not vertical. Weir blades have sagged and are no longer level. Staff gages are worn and difficult to read. Stilling well intakes are buried in sediment or partly blocked by weeds or debris. Parshall flumes are frost heaved and out of level. Meter gates are partly clogged with sand or debris and the gate leaves are cracked and warped.

These and other forms of deterioration are often the causes of serious errors in discharge measurements. This type of deficiency is difficult to detect because normal wear and tear may occur for years before it is apparent to a person who sees the equipment frequently. On the other hand, it is readily apparent to an observer viewing the installation for the first time.

It is imperative, therefore, that the person responsible for the measuring devices inspect them with a critical eye. His attitude

should be--I am looking for trouble--not, I will excuse the little things because they are no worse today than they were yesterday.

Measuring devices which are rundown are no longer a standard measuring device, and indicated discharges may be considerably in error. To be certain of the true discharge, they should be rehabilitated and/or calibrated.

Repairing or refurbishing a rundown measuring device is sometimes a difficult or impossible task. Fixing the little things as they occur will prevent, in many cases, replacing the entire device at great cost at some later date. Regular and preventive maintenance will extend the useful life of measuring devices.


Poor Workmanship

Contrasting with the measurement devices which were once accurate and dependable and have deteriorated, are those which, because of poor workmanship, were never a standard device. These include devices which are installed out-of-level or out-of-plumb, those which are skewed or out of alignment, those which have leaking bulkheads with flow passing beneath or around them, and those which have been set too low or too high for the existing flow conditions. Inaccurate weir blade lengths or Parshall flume throat widths, insufficient or nonexistent weir nappe ventilation, or incorrect zero setting of the head or staff gage can also be the cause of measuring errors.

A transverse slope on a weir blade can result in errors, particularly if the gage zero is referenced to either end. The error can be minimized by determining the discharge based on the head at each end and using the average discharge. Errors in setting the gage zero are the same as misreading the head by the same amount. At low heads a zero setting error can result in errors up to 50 percent of the discharge or more. A head determination error of only 0.01 foot can cause a discharge error of from 5 percent on a 90° V-notch weir, to over 8 percent on a 48-inch Cipoletti weir (for a head of 0.20 foot). The same head error on 6- and 12-inch Parshall flumes can result in 12 and 6 percent errors, respectively, for low heads.

Weir blades which are not plumb or are skewed will show flow measurement inaccuracies of measurable magnitude if the weir is out of line by more than a few degrees. Rusted or pitted weir blades or those having projecting bolts or offsets on the upstream side can cause errors of 2 percent or more depending on the severity of the roughness. Any form of roughness will cause the weir to discharge more water than indicated. Rounding of the sharp edge of a weir or

reversing the face of the blade also tends to increase the discharge. On older wood crests a well rounded edge can cause 15 to 25 percent or more increase in discharge, Figure 15.

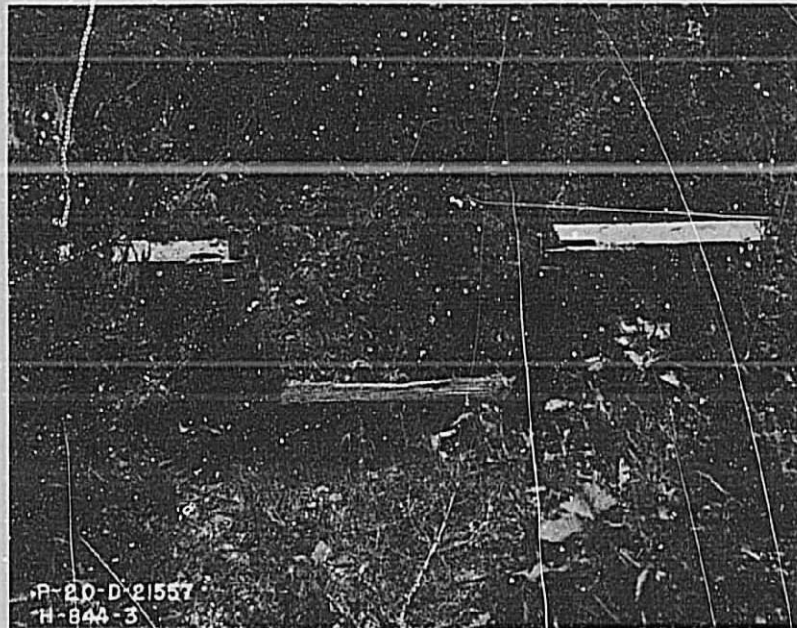

The well rounded edge on this once sharp-crested weir will increase the discharge well above "standard." The weeds are also undesirable as is the weir gage which projects into the flow area. P-20-D-21557.

Figure 15

Pressure readings are needed to determine discharges through certain types of meters. Piezometers, or pressure taps as they are sometimes called, must be regarded with suspicion when considering accuracy of flow measurements.

Piezometers must be installed with care and with a knowledge of how they perform, otherwise the pressure values they indicate can be in error. For example as shown in Figure 16, the three piezometers will indicate different pressure readings (water levels) because of the manner in which flow passes the piezometer opening. Unless the piezometer is vertical as in Y, the water elevation will be drawn down as in X, or increased as in Z. Rough edges or surfaces in the vicinity of the piezometer can also result in erroneous

indications in that they deflect the water into or away from the piezometer opening. The higher the pipe velocity, the greater the error will be.

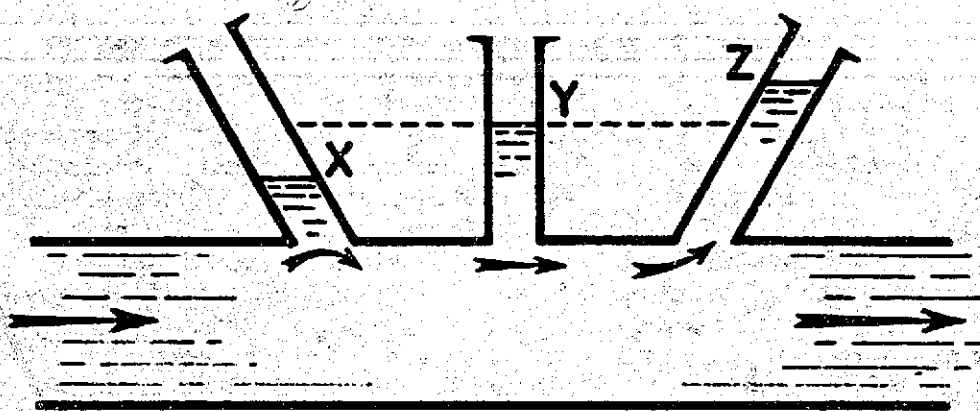


Figure 16

Note: Piezometer openings above are shown larger than they should be constructed in practice. Always use the smallest diameter opening consistent with the possibility of clogging by foreign material.

The effect of a few deficiencies often found in measuring devices has been given to illustrate the degree of error to be expected in making ordinary measurements under ordinary conditions. Other effects have not or cannot be stated as percent error without an exact definition of the degree of fault or deterioration. The examples given should be sufficient, however, to emphasize the importance of careful and exact installation practices, as well as regular and prompt repair or rehabilitation of the devices after they have been installed.

MEASURING TECHNIQUES REDUCING ACCURACY OF MEASUREMENT

It is possible to obtain inaccurate discharge measurements from regularly maintained equipment properly installed in an ideal location, if poor measuring techniques are used by the operator. Measurement of head is very important and some of the techniques now in use are not compatible with the relationships between head and discharge known to exist.

The frequency of head measurement is also important and may be the cause of inaccurate water measurement. These and other related miscellaneous techniques are discussed in the next paragraphs.

Faulty Head Measurement


Measurement of the head on a weir seems to be a simple matter but can be difficult under all but ideal conditions. The head is the height of water above the blade edge (or crotch of a V-notch) measured at a point where the velocity head (or velocity of approach) is a negligible value, Figure 9. In practice this means a point located four to six times the head upstream from the center of the weir blade. If the head is measured farther upstream, the head necessary to produce flow in the approach channel (water surface slope) may be inadvertently included to give a larger head measurement. If the head is measured closer to the weir blade, some draw-down (caused by increased velocity near the weir) may occur and less than the true head may be measured. If the head is measured at the side of the approach channel, more or less than the true head may be measured depending on the geometry of the approach pool, Figures 9 and 13.

The practice of placing staff gages on weir bulkheads or on bank-side structures should be investigated in each case to be sure that a true head reading can be obtained. Placing a rule or a Clausen-Pierce gage on the weir blade also gives an erroneous reading. The taking of head measurements when debris or sediment has a visible effect on the flow pattern can also result in faulty head determination, Figure 17. Measuring head, when the measuring device has obviously been damaged or altered, is also to be avoided.

Figure 18 shows a weir performing properly for the discharge shown. At larger discharges the unsymmetrical approach pool may produce undesirable conditions.

The principles described above also apply to head measurements on Parshall flumes, metergates or any other device dependent on a head measurement for discharge determination.

Improper gage location, or an error in head measurement in a Parshall flume can result in very large discharge errors. Throat width measurements (and weir lengths) can also produce errors although these errors are usually small because of the relative ease of making accurate length measurements. (Operators should measure lengths in the field and not rely on values stated or shown on drawings.) Readings obtained from stilling wells, whether they are visual or recorded, should be questioned unless the operator is certain that the well intake is not partially or fully clogged. Data from an overactive stilling well can also be misleading, particularly if long period surges are occurring in the head pool. In fact, all head determinations should be checked to be sure that

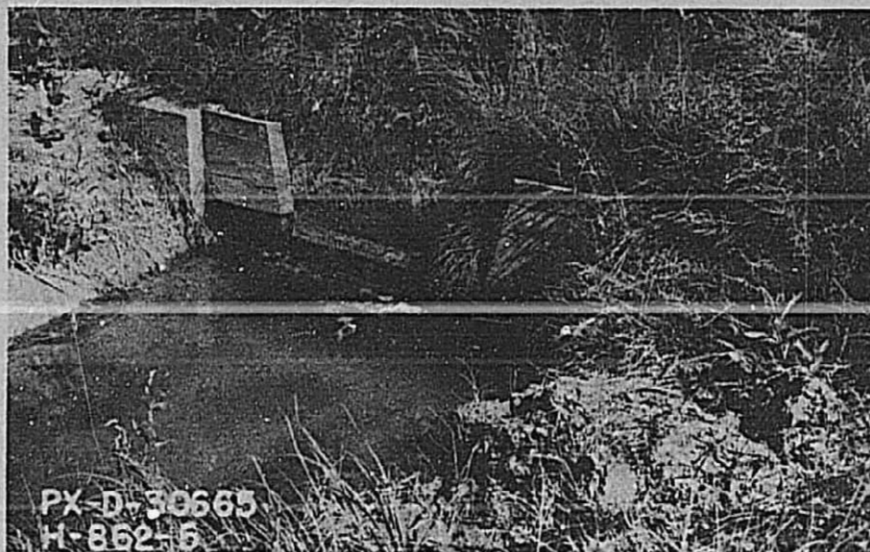

Weeds protruding through the opening and sediment in the approach pool will result in inaccurate discharge determinations. PX-D-30665.

Figure 17



Cipoletti weir operating with good flow conditions in the approach pool. Flow is well distributed across wide pool and shows no evidence of excessive turbulence. Accurate or "standard" discharges can be expected under these conditions. POAX-D-18350.

Figure 18

the instantaneous reading is not part of a long period surge. Sufficient readings, say 10, should be taken at regular time intervals, say 15 seconds, and averaged to obtain the average head. More readings may be required if it is apparent the pool is continuing to rise or fall. If this is too time consuming the cause of the instability should be removed.

Readings from gages or staffs which may have slipped or heaved should be avoided. Periodic rough checks can sometimes be made with a carpenter's level or square from a reference point on another structure.

In short, it is desirable that each operator understand the measurement he is trying to make, and then critically examine each operation to be sure that he is measuring what he intends to measure. He should try to find fault with every step in making a head measurement and try to improve his technique wherever possible.

Infrequent Measurement

When a head or velocity measurement is made to determine discharge, it can be concluded that the measured discharge occurred only at the moment of the measurement. It cannot be concluded that the discharge was the same even 5 minutes later or 5 minutes earlier. Therefore, water deliveries can be accurate only if enough measurements are made to establish the fact that the discharge did or did not vary over the period of time that water was being delivered.

In many systems, measurements are made only once a day, or only when some mechanical change in supply or delivery has been made. Problems introduced by falling head, rising backwater, gate creep or hunting are often ignored when computing a water delivery. The problem is not a simple one, at times, and there are many factors to consider in determining the number of readings to be made per day or other unit of time. If the discharge in the supply system is increasing or decreasing, it will be necessary to take more than a single reading. If the rate of rise is uniform the average of two readings, morning and night, would be better than one. If the rate of change is erratic, frequent readings may be necessary. If a great many readings are known to be necessary, a recording device may be justifiable.

Sometimes when the discharge in the supply system remains constant, the water level or velocity reading change because of a change in control, or because checks have been placed in operation. Temporary changes in discharge in the main supply system may occur for example because water, in effect, is being placed in storage as a result

of the rising water level. Conversely, the discharge may temporarily increase in parts of the system, if the operating level is being lowered. The changing water level may make it necessary to take more frequent head readings.

Here again, the operator should try to visualize the effect of any change in discharge in the supply system, upstream or downstream from a measuring device, and attempt to get more than enough readings to accurately compute the quantity of water delivered.

USE OF WRONG MEASURING DEVICE

Every water measuring device has limitations of one kind or another and it is impossible to choose one device which can be used in all locations under all possible conditions. It is to be expected, therefore, that for a given set of conditions there may be several devices which would be suitable, but none could be considered entirely satisfactory. If flow conditions change or are changed by modified operations, an original device, which was marginal in suitability, may be found to be totally inadequate. It is possible, too, that the wrong device was selected in the first place. Whatever the reason, there are instances where accurate measurements are being attempted using a device which cannot, even with the greatest care, give the desired results. The operator should call attention to such a situation and attempt to have remedial measures taken.

For example, a weir cannot be expected to be accurate if the head is appreciably less than 0.2 foot, or greater than about one-third of the weir blade length. Large measurement errors can be expected (departure from standard), if these limits are exceeded appreciably. If a weir is submerged appreciably by backwater, large errors may be introduced depending on other factors. In view of uncertainties which cannot be explained satisfactorily, submerged weirs should be avoided wherever possible. Parshall flumes should not be operated at more than the critical degree of submergence (80 percent); in fact, they should not be submerged at all, unless provisions have been made in the flume for a downstream head measuring well, and the method of computing submerged discharges from the published "Free Flow" tables is thoroughly understood. This is explained in detail in Bulletin No. 426-A, March 1953, "Parshall Flumes of Large Size," by R. L. Parshall, U.S. Department of Agriculture, Fort Collins, Colorado.

Propeller meter devices should not be permanently installed where weeds, moving debris, or sediment are apt to foul the meter or grind the bearings. Submerged devices, such as metergates, should not be used where a moving bedload can partly block the openings.

In short, it is necessary to analyze the flow conditions to be encountered at a particular site, and only then, select the measuring device which can best cope with the unusual condition to be encountered.

ELABORATIONS ON THE BASIC WATER MEASURING DEVICES AND TECHNIQUES

SUBMERGED ORIFICE

For a free-flow orifice, Figure 5, the discharge equation was shown to be $Q = 4.89 A \sqrt{H}$.

If the head H on the orifice was 4 feet and the area of the orifice was 2 square feet, the discharge would be

$$Q = 4.89 \times 2 \times \sqrt{4} = 19.6 \text{ cfs}$$

If an orifice is discharging into a ditch, there may be some back-water to prevent free-flow conditions as shown in Figure 19.

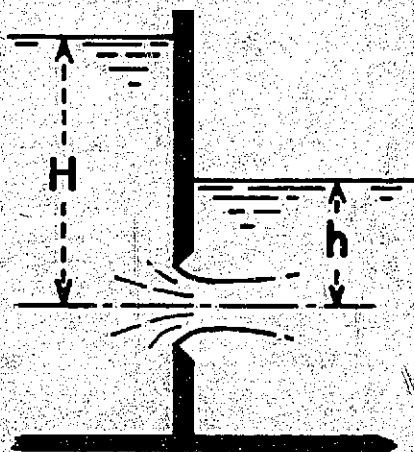


Figure 19

Since the head H is pushing water through the orifice and the head h is attempting to hold it back, h must be subtracted from H before using a head value in the equation.

$$Q = CA \sqrt{2g(H-h)} \quad \dots (6)$$

In the preceding problem, if h was 1 foot, the discharge would be

$$Q = 4.89 \times 2 \times \sqrt{3} = 17.1$$

or a reduction of 2.5 cfs from the 19.6 cfs computed without submergence.

ORIFICE IN PIPELINE

If an orifice is placed in a pipeline as shown in Figure 20, there is almost certain to be a backwater effect, and it will be necessary to measure both the upstream and downstream heads. Since there is no free water surface in a full pipe, piezometers or pressure taps must be used to obtain the necessary data.

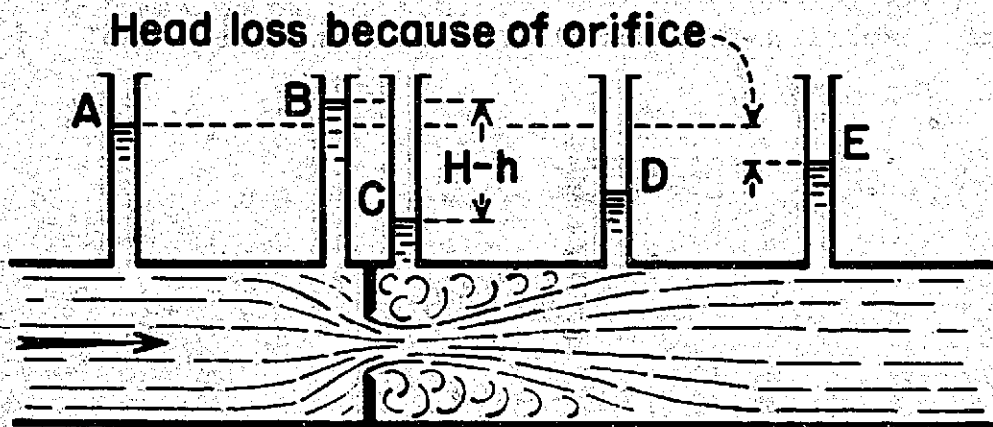


Figure 20

Piezometers are no more than small diameter standpipes in which water rises sufficiently to balance the pressure inside the pipe. The accuracy aspects of piezometers have been discussed, Figure 16, in this paper.

If piezometers were placed in a pipe as shown in Fig. 20, the differential pressure $H - h$ (between B and C) would be the head producing flow to be used in the orifice discharge equation. The head at A would

be lower than at B because some of the total head would be used up in producing the velocity in the pipe. At B the velocity of flow would be nearly zero, and so the true head would be indicated by the piezometer. The pressure at C would be very low because of the high velocity. At D some head recovery would occur because of the reduction in velocity caused by the spreading of the orifice jet.

At E normal pipe flow has been reestablished and the loss A - E represents the head lost because of the disturbances in the flow caused by the orifice. Energy in the flow was converted to heat as a result of turbulence in the flow and extra friction losses at the orifice plate and pipe boundaries.

Orifice discharges may be calculated with reasonable accuracy if all the factors affecting the flow are evaluated and the coefficient "C" is adjusted accordingly. For example, the graph in Figure 21 shows the variation in C to be expected for various combinations of pipe size and orifice diameter.

The orifice coefficient is seen to be 0.61 (in the solid line curve) when the orifice is 0.2 of the pipe diameter or less and increases to 1.0 when the orifice is 0.9 of the pipe diameter. It would therefore appear that large orifices would be preferable to small. This is not necessarily so, however, because large orifices give such a small differential that the error in reading the head is a large part of the differential. Also the head tends to fluctuate severely so that at times it may appear that there is a reverse differential.

Thus, orifice installations should provide sufficient head (and/or differential) to make head reading errors negligible in terms of the differential head. In fact, it has been shown that the head on a freely discharging orifice should be at least twice the diameter of the orifice. For lower heads, the coefficient falls off rapidly and may be as low as 0.2.

Rounding of the sharp edge of a circular orifice may be the cause for considerable error in determining discharges. A 1-inch-diameter circular orifice rounded to a radius of 0.01 inch will discharge 3 percent more water than a sharp edge. This is because the contraction is not as great with a rounded edge as with a sharp edge. (Note that this is a very slight degree of rounding.)

In general, the percent increase in C (or discharge) due to rounding, equals three times the percent that the radius of rounding is of the diameter of the orifice.

The dotted line curve shows coefficients (for $H-h=3$ feet) obtained from a careful volumetric calibration of five orifices 1-1/2 inch,

2-3/8-inch, 3-7/8-inch, 6-inch, and 8-1/2-inch used in a 12-inch pipeline as a laboratory metering system. The departure of the coefficient from the generally accepted solid line curve is considerable.

The broken line curve shows coefficients for five orifices 1-1/4-, 1-3/4-, 2-3/8-, 3-3/8-, and 4-3/8-inch used in an 8-inch pipeline having an 8- to 5-1/2-inch reducer placed upstream from the orifice. The 8-inch pipe size was used to compute the ratio plotted as the abscissa in the sketch. Here, again, is a departure from the generally accepted coefficient curve and if a coefficient had been assumed from the solid line curve, serious discharge measuring errors of perhaps as much as 15 percent could have occurred.

Because of the many factors which affect orifice discharges, it is usually desirable to calibrate an installation by volumetric measurements, current meter, Pitot tube, or other primary means. This may not be possible, and it may then be necessary to improvise a calibration. Another objection to the use of orifice meters is that the head loss caused by the meter may be excessive. Losses may run as high as one or more velocity heads. One velocity head is equal to the head required to produce the velocity in the pipe upstream from the orifice determined from Equation 3.

Orifice meters are not generally available from commercial supply houses, and it is not ordinarily possible to buy a meter complete with piezometers and head or differential head gages.

When a submerged orifice is used in an open ditch, the area of the orifice should be no more than about one-sixth the ditch cross-sectional flow area to minimize velocity of approach effects. This is roughly equivalent to using an orifice-to-pipe-size ratio, Figure 21, of about 0.25; coefficient 0.62. A high velocity of approach means that some of the head (which is to be measured) has been converted to velocity and cannot be measured directly. To account for this head the velocity must be determined, converted to head, and added to the measured head.

The height of the rectangular orifice should be considerably less than the width to minimize the effect of variable head on the orifice coefficient. The submerged orifice equation (6) may be used along with a coefficient of 0.61-0.62.

If the velocity of approach is excessive (head has been converted to velocity and cannot be read on the staff gage), the velocity head (use the average velocity in the ditch upstream from the orifice and convert to H by $\frac{v^2}{2g} = H$) must be added to the measured head.

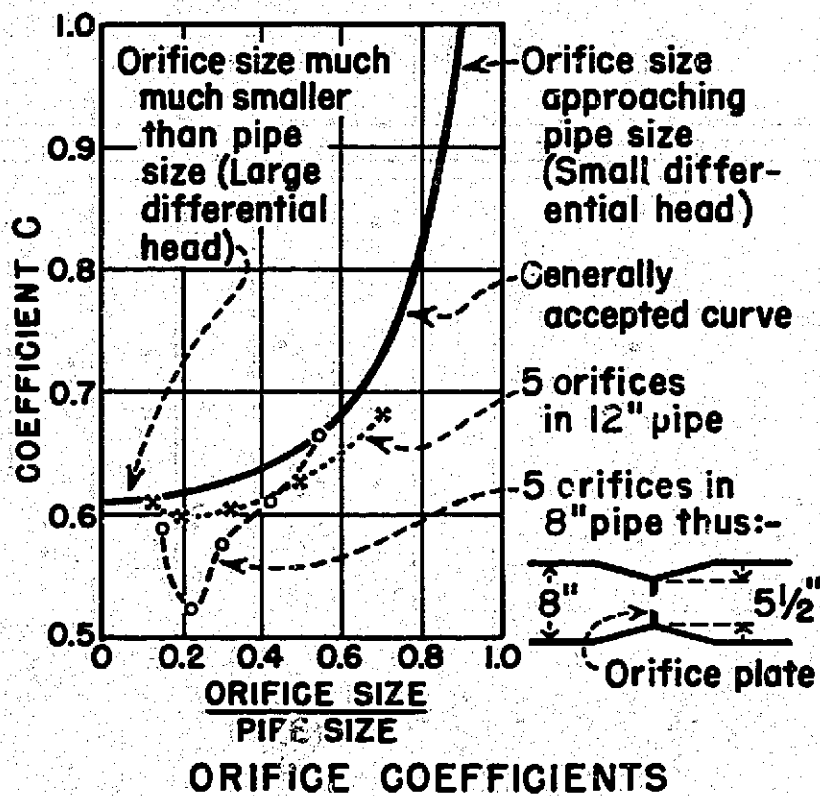


Figure 21

If the orifice is suppressed (hindered by floor, walls, or other) from a normal approach flow pattern, use the equation

$$Q = 0.61 (1 + 0.15r) A \sqrt{2gH} \quad \dots (7)$$

where r is the ratio, length of suppressed portion of perimeter of orifice divided by total perimeter.

Discharges for standard rectangular orifices are given in Table 29 and correct coefficients for suppressed orifices in Table 30 of the Water Measurement Manual. Other information on submerged orifices is given in Chapter IV of the Manual.

VENTURI METERS

The Venturi meter is basically a streamlined orifice meter and was devised to reduce the head loss produced by the orifice meter. The meter consists primarily of a constriction in a pipe with a curved approach to the constriction and a gradual expansion to the pipe diameter as shown in Figure 22.

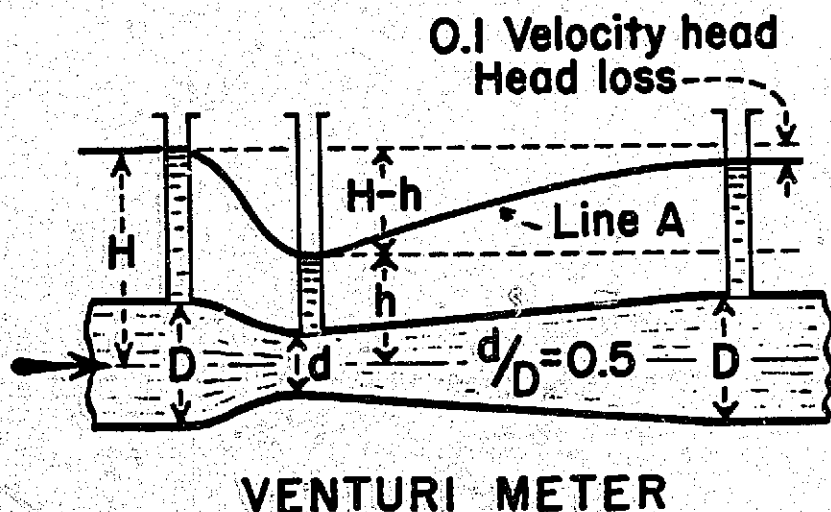


Figure 22

A typical Venturi meter is shown in the sketch for a constriction of one-half the pipe meter ($d/D = 0.5$). The piezometric head are shown as H and h and the differential used to determine meter discharges as $H-h$. The head loss is shown at the downstream

piezometer as being about 0.1 velocity head, considerably less than for an orifice of the same size. Line A shows the elevation of the water surface which would be indicated if an infinite number of piezometers were installed in the meter to indicate the variation in pressure from point to point.

Although tables are usually used, the curve in Figure 23 shows a typical rating curve for a commercial 8-inch Venturi meter (8-inch pipe).

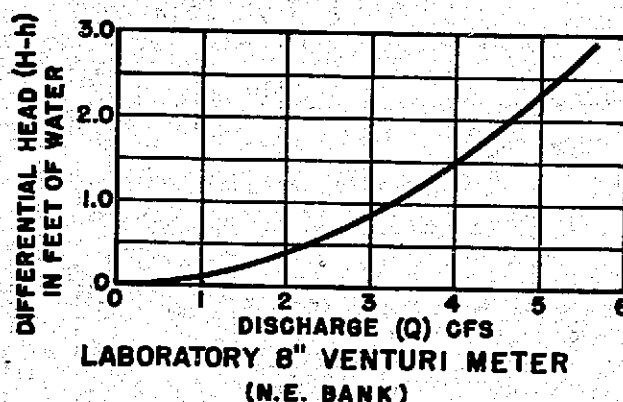


Figure 23


Of particular interest and concern is the shape of the lower portion of the rating curve. A differential head of only 0.1 produces a discharge of 1 cfs. It would be difficult to measure 0.1 foot accurately because of the usual fluctuations; and, consequently, it would be difficult to say whether the discharge was 0.7, 1.0, or 1.2 cfs. The meter should not be used, therefore, for discharges less than 2.5 cfs where the differential head is about half a foot. For discharges of 3 to 5 cfs, the 8-inch meter could be expected to be extremely accurate. If a discharge of 1 cfs must be measured accurately, a smaller Venturi meter should be used. An orifice meter has the same characteristic rating curve, and the above statements apply to orifice meters as well.

Venturi meters are available commercially in a range of sizes and can be purchased with an accompanying set of discharge tables or curves. Venturi meters must always be calibrated because it is impossible to calculate discharges accurately.

Venturi meters are usually machined castings and are relatively expensive, although cheaper cast concrete has been successfully

used in some cases. Some success has been achieved in constructing meters from standard pipe fittings which can be screwed or bolted together. Two standard pipe reducers with a standard gate valve between them makes a satisfactory measuring device which has been found to be accurate to ± 1.7 percent. Some of the early work on this subject is contained in a Master of Science Thesis, 1942, "Hydraulic Characteristics of Simplified Venturi Meters," by R. A. Elder, Oregon State University, Corvallis, Oregon.

Concrete meters (Figure 24) have been constructed and used by the Fresno Irrigation District, Fresno, California. The Fresno meter consists of a length of standard concrete pipe into which has been formed a circular throat section to give a reduction in area so that the principle of the Venturi meter is applicable for the measurement of flow.

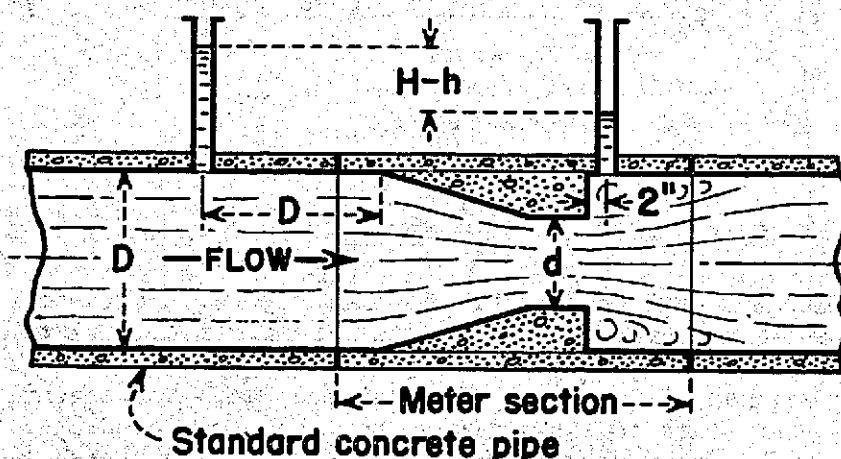

FRESNO IRRIGATION FLOWMETER

Figure 24

Meters are available in 8-, 10-, 12-, 14-, 16-, 18-, 20-, and 24-inch sizes (D). Accurate laboratory calibrations have been made for the 8-, 10-, 12-, and 18-inch sizes. Head loss versus discharge curves are also available for these sizes. The losses range from 0.2 foot for the 8-inch meter discharging 1 cfs, 0.4 foot for a 10-inch meter discharging 2 cfs, 0.7 foot for a 12-inch meter discharging 4 cfs, to 0.9 foot for an 18-inch meter discharging 10 cfs. A report, Restricted Hydraulic Laboratory

Report No. Hyd-340, gives the results of extensive tests on these meters, and is available to Bureau employees from the Technical and Foreign Services Branch, Bureau of Reclamation, Denver Federal Center, Denver, Colorado.

VENTURI FLUMES

The familiar Parshall flume (Figure 12) belongs to a large class of water measuring devices known generally as Venturi flumes used in open channel installations. These devices depend upon contraction of the flow either by tapering the side walls of the flume, by changing the elevation of the flume bottom, or both. Parshall flumes incorporate a floor drop along with the converging of the side walls.

Venturi flumes are of two types the "free-flow" type where a simple head reading is required to determine discharge and the "submerged" type which requires two head readings to account for the backwater depth effect and determine the discharge. The latter type is sometimes called a "critical depth flume" and/or a "standing wave flume." The former is sometimes called the "true Venturi" type. The Parshall flume is an example of a Venturi flume that is often used in either category or both.

When head must be conserved the flat-bottomed Venturi flumes are more desirable than flumes having vertical configurations in the floor. If the canal is trapezoidal, the flat-bottomed Venturi flume can also be made trapezoidal for convenience of construction or placement. But, like all measuring devices they should be either calibrated before use or be constructed exactly the same as an existing flume (standard device) that has been calibrated.

From studies made on Venturi flumes it has been found that for any given flume, each value of the discharge (Q) has a unique and corresponding head (H). The results of these studies indicate that the relation between discharge and head may be expressed in the general form:

$$Q = K H^n$$

where the coefficient (K) and the exponent (n) are predominantly dependent upon the geometry of the flume. When the values of (K) and (n) are determined from actual measurements, the device is said to be calibrated.

The USBR has studied the flat-bottomed trapezoidal Venturi flume shown in Figure 25.

This particular flume was studied for discharges ranging from 0.5 to 5 cfs. The discharge equation for this flume was found to be

$$Q = 3.5 H^{2.18}$$

Studies of other flumes of both larger and smaller sizes will be continued and will be directed toward standardizing the flumes in terms of geometry and in providing rating tables for general use.

Small flat-bottomed trapezoidal Venturi flumes were studied by A. R. Robinson and A. R. Chamberlain, "Trapezoidal Flumes for Open-Channel Flow Measurement," ASAE, Volume 3, No. 2, 1960. This study presents the calibration test results on seven flumes with side slope (θ) ranging from 30 to 60°, throat bottom width varying from 0 to 4 inches, and contraction angle (ϕ) varying between 8 and 22°. The discharge range covered by these flumes is from 0.02 to 2.0 cfs.

If flumes of this type are to be built and used without field calibration the dimensions and limitations discussed in the article should be carefully followed.

Flat-bottomed Venturi flumes can be made of concrete, metal, or wood. However, the use of wood should be avoided wherever possible because the effect of warpage can be severe. Regardless of the material used for construction the flumes should be sufficiently rigid to prevent bowing caused by earth pressure from back filling.

For best results the flat-bottomed flume should be set flush with respect to the bottom of the incoming canal. If possible, the cross section of the canal and the start of the converging portion of flume should match. If matching is not possible transitions to the flume can be made of concrete, metal, wood, or gravel large enough to resist movement with the flow.

The head measuring station should be located just upstream from the start of the convergence in the flume, Figure 25. If a stilling well and hook gage are used, the pressure tap or piezometer should be placed about 2 inches above the bottom of the flume to prevent sediment and other debris from plugging the lines to the stilling well. Staff gages may also be used to measure the head. To indicate the necessary accuracy for a head determination (in terms of discharge error) the following table may be used. This table is for the flume size shown in Figure 25.

Error in head reading feet	Discharge error range percent
0.005	1 to 2
0.010	2 to 6
0.020	4 to 10

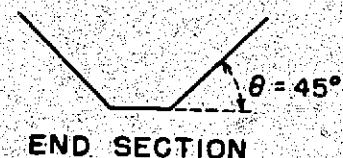
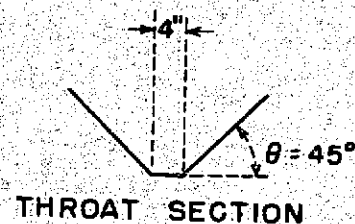
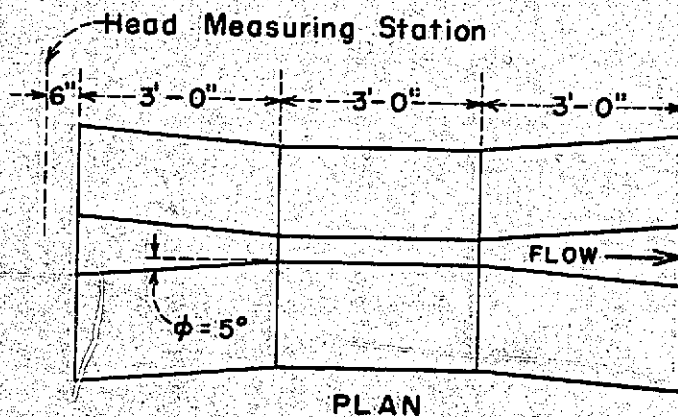


Figure 25

In an ordinary installation the velocity of approach to a Venturi flume would not have an effect on accuracy. Excessive flow velocity at the flume entrance can cause errors of up to 4 percent, however, and some care in installation and maintenance is required if the Venturi flume is to be considered an accurate measuring device.

Reasonable entrance velocities will result in no measurable discharge errors. If the water surface just upstream from the flume

Venturi flumes are calibrated in a channel having a horizontal bottom. Field installations should approximate this condition if accuracy is important.

A metergate is basically a modified submerged orifice arranged so that the orifice is adjustable in area, Figure 26.



Although it should be possible to compute the discharge, this is rarely done because there are usually too many departures from standard definable conditions for which correction coefficients are not known. Metergates are usually purchased from a commercial supplier who supplies a discharge table. Ordinarily, the tables give a good accounting of the flow, but in some instances, errors of 18 percent or more have been found.

If a discharge error is suspected, the installation should be thoroughly checked to be sure that it complies with the essential conditions shown in the above sketch, particularly that there is no blockage of flow and that the outlet is sufficiently submerged to make the pipe flow full. The many factors affecting metergate performance and accuracy are described in detail in the following paragraphs. These suggestions apply particularly when the gate is operated at large openings (50 percent or more) and/or with small upstream submergence (1D or less).

Sources of Discharge Indication Error

Type of gate. The discharge table being used should be checked to be sure that it applies to the metergate in question. Tables for round bottom gates will not work with square bottom gates, or vice versa, except at the wide-open position. Be sure that the table being used is for the brand of gate, model number, or other identifying symbols.

Stilling well blockage. If there is no blockage of flow at the gate or in the pipe, make sure that the stilling wells are open. A bucket of water poured into the well should readily drain out or, if the gate is in operation, the water level in the well should rapidly return to the head indicated before the water was added. As a matter of general maintenance, it would be a good idea to flush the wells occasionally, push a probe through the piping, and flush again. Any difference in readings before and after cleaning might indicate the need for further flushing and cleaning. Staff gages or scales should also be checked to be sure they have been installed at the proper zero position and that they have not become displaced vertically.

Gate and gate opening indicator. Be certain that the gate opening indicator, whether it is the rising stem on the gate or some other device, has not become displaced to give a false gate opening indication. Check the installation of the gate on the end of the pipe. The gate must seal when closed. Too much clearance may allow an excess of water to flow between the gate or frame and the end of the pipe, changing the flow pattern and indicated head in the downstream stilling well.

Approach area. Weeds, trash, or sediment in the approach to the gate can change the pattern of flow sufficiently at the gate leaf to produce sizable discharge errors. The flow along the side-walls (wing walls) has more effect on discharge than the flow along the bottom. Be sure that flow can follow the sidewalls without interference. Large amounts of sediment deposited in the area just upstream from the gate can upset the normal flow patterns as can waterlogged trash, rocks, or other submerged material. The approach area should be cleaned and reshaped, if necessary, until no flow lines or velocity concentrations are visible on the water surface.

Submergence. The water level at the gate should be at least one pipe diameter (preferably two) above the crown of the pipe during operation (flow measurement). As previously shown for the orifice, considerable error results when the head is less than one diameter above the top of the pipe. The pipe outlet must also be sufficiently submerged to make the pipe run full. Usually, if the pipe length is standard, at least six or seven diameters (discussed later), the submergence need be only about 6 inches above the crown of the pipe. Unless the pipe runs full at the outlet, the downstream head-measuring stilling well may not contain enough water to indicate the true differential pressure across the metergate, and serious discharge measuring errors can occur.

Small differential head. Large errors in discharge determination can be introduced if the differential head (difference in water surface elevation between the two stilling wells) is small. For example, in reading the two water surface elevations in the stilling wells, an error of 0.01 foot could be made in each reading, giving a differential of 0.10 foot instead of 0.08 foot. The difference in indicated discharges would be about 0.12 cfs for a discharge of 1.10 through an 18-inch metergate open 5 inches, an error of about 11 percent.

If the gate opening was reduced to 2 inches and the upstream pool could be allowed to rise to pass the same discharge, the differential head would be 0.40 foot and the same head-reading error of 0.02 foot would indicate a change of only 0.03 cfs. The error in discharge determination would be reduced from about 11 percent to less than 3 percent.

If the pool level cannot be elevated as described and it is necessary to operate continually with small differential heads, it would be well to consider installation of a smaller gate. This would allow operation in the upper ranges of capacity where the differential head is larger. If a smaller gate cannot

pass the required maximum flow, it might be necessary to use two small gates in place of one large one.

Aside from head-reading errors, it is desirable to operate with larger differentials because (1) the flow is more stable and the water surface in the stilling wells does not surge as badly and (2) the higher velocity through the meter prevents a reduction in orifice coefficient (as discussed for the orifice meter).

Other methods of achieving a larger differential might include reducing the backwater level, if excessive, or reducing the pipe length, if it is considerably longer than six or seven diameters, to reduce the backwater effect; change the location of the downstream stilling well and recalibrate the meter (discussed later).

Location of stilling well intakes. Because the discharge is directly related to the difference in water levels in the two stilling wells, it is essential that the stilling well intakes (pressure taps or piezometers) be located exactly as they were when the meter was calibrated.

The upstream intake should be located in the headwall several inches (at least) from the gate frame, several inches (at least) from any change in headwall alignment in plan (see sketch), and at an elevation such that the intake will be covered at minimum operating level. The opening should be flush with the surface of the headwall and the piping arranged so that a cleaning probe may be pushed through for cleaning purposes. The pipe should slope continuously downward from well to headwall to prevent air locks in the system. If air is suspected in the piping, it may be flushed by pouring water into the well at a rapid rate to force the air out through the intake end, taking care not to entrain air in the pouring process.

The downstream piezometer (pressure tap) should be located on the centerline of the top of the pipe, exactly 1 foot downstream from the downstream face of the gate. The intake pipe must be flush with the inside surface of the pipe (grind off any projections beyond corrugated or smooth surface) and absolutely vertical (the effect of tilted piezometers is illustrated in Figure 16).

As shown in Figure 27, the rate of change in pressure is very rapid in the region of the downstream pressure tap and any displacement of the tap from the location used during calibration will result in large discharge determination errors.

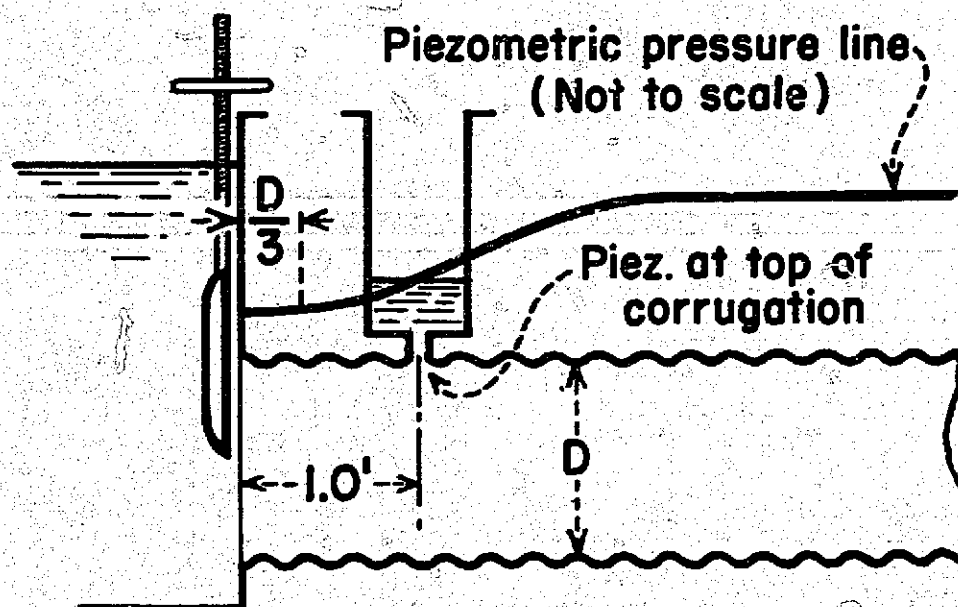


Figure 27

A better location for the downstream piezometer would have been $D/3$, measured from the downstream face of the gate. The pressure gradeline here is lower and flatter. Minor variations in piezometer locations would not result in major measuring errors. However, if the piezometer is moved to this point (to increase differential head), the meter must be recalibrated because the published tables will not apply.

Laboratory tests have been conducted on metergates to determine the coefficient of discharge C_d for a pressure tap located at $D/3$, as discussed. This curve shown in Figure 28 is valid for all sizes of metergates under certain standard conditions. These include:

1. Approach channel floor sloping upward, 2:1, toward gate with downstream end of floor $0.17D$ below pipe entrance invert.
2. Flaring entrance walls, 8:1, starting $D/4$ distance from edges of gate frame.
3. Zero gate opening set when bottom of leaf is at invert of entrance.
4. Upstream submergence is greater than D .
5. Downstream end of pipe is submerged to make pipe flow full.

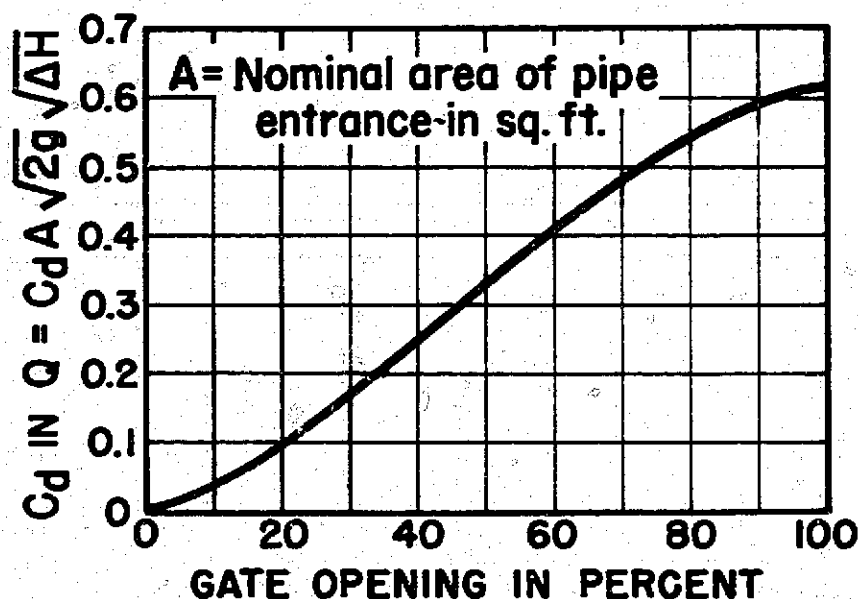



Figure 28

It should be noted that the coefficient C_d is a different coefficient than the C used in the orifice equation. C_d is used with A which in this case is the area of the pipe and not the gate opening. Discharges may be computed from this equation with an accuracy of $\pm 2\frac{1}{2}$ percent. The degree of downstream submergence does not affect the accuracy of the meter if water rises sufficiently in the downstream well to obtain an accurate reading and the pipe runs full at the outlet.

Metergate Installation

Metergates have been found to be set too low, too high, or the wrong size of gate was employed. To aid in the proper selection of gate size and the elevation at which the gate should be placed, the following suggestions are given in the drawing in Figure 29. The metergate entrance structure should be as described in the preceding discussion.

An analysis of other factors that influence metergate performance and accuracy, in cases where the installation is not standard, is given in Hydraulic Laboratory Report No. Hyd-471, dated March 15, 1961, "Flow Characteristics and Limitations of Screw Lift Vertical Metergates." This report covers various entrance problems effects of submergence, velocity and gate design, and gives rating curves for 18-, 24-, and 30-inch gates for both confined and unconfined approaches.

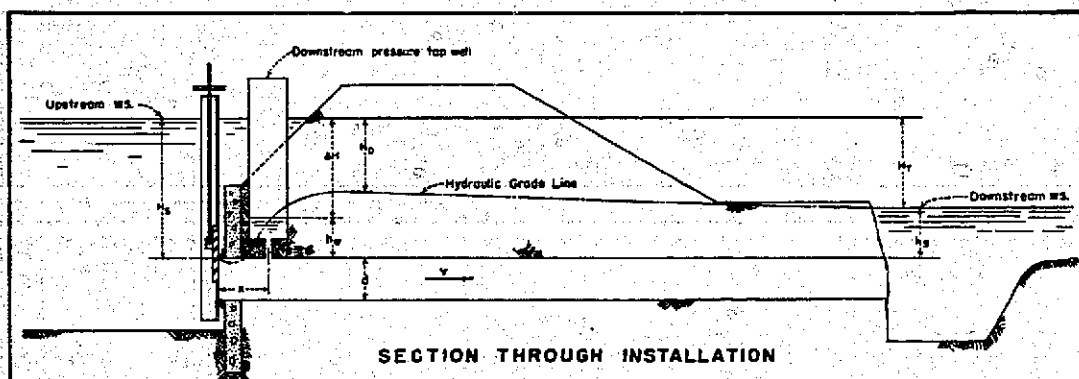

SECTION THROUGH INSTALLATION

DETERMINATION OF METERGATE INSTALLATION

GIVEN

1. Upstream water surface El. 100.0.
2. Downstream water surface El. 98.0.
3. Turnout discharge, $Q = 8 \text{ cfs}$.
4. Depth of water in downstream measuring well, h_w , should be 6 inches above crown of pipe.
5. Length of metergate pipe, 50 feet.
6. Submergence of metergate inlet, H_1 , should be equal to or greater than d above the crown of the pipe.

FIND

1. SIZE OF METERGATE (One of two methods may be used)

- a. Where downstream scour may be a problem. Select exit velocity that will not cause objectionable scour, say 4 feet per sec. From $A = \frac{Q}{V} = \frac{8.00}{4} = 2.00$, $d = 16 \frac{1}{8}$ inches. Requires 20-inch metergate.
- b. Where scour downstream is not a problem. Assume metergate to be operated at openings up to 75 percent. (The influences of entrance design, upstream submergence and downstream pressure tap location are minor for these openings.) (Figures 15 and 16). For 75 percent gate opening coefficient of discharge, $C_d = 0.5$, and maximum $\Delta H = 1.85 H_1$ (Figures 17, 18 and 19). $\Delta H = 1.85 (1.0) = 1.85 \text{ ft}$. From $A = \frac{Q}{C_d V} = \frac{8.00}{0.5 \times 4} = 4.00$ sq. ft. Area of pipe, $A = \frac{\pi d^2}{4} = 4.00$, $d = 22.6$ inches. Requires 24-inch metergate, $d = 24$ inches.
- c. Check capacity of gate using 24-inch metergate. $H_1 = H_2 - H_f$, H_f is friction loss from pressure recovery point to pipe exit. $H_f = f \frac{L}{d} \frac{V^2}{2g}$. Where f is coefficient of friction, L is length of pipe, d is pipe diameter and V is velocity in pipe. From $V = \frac{Q}{A} = \frac{8.00}{4.00} = 2.00$ ft/sec. Assume f for concrete or steel pipe as 0.025. $H_f = 0.025 \frac{50}{24} \frac{2.00^2}{2 \times 32.2} = 0.01$ feet. $H_1 = 1.0 - 0.01 = 0.99$ feet. In order to have a measurable water surface in the downstream well for all gate openings and downstream tap position the installation should be designed for maximum ΔH . From Figures 17, 18 and 19, $\Delta H_{\text{max}} = 1.85 H_1$. $\Delta H = 1.85 (0.99) = 1.85$ feet. Using this adjusted value of ΔH , turnout capacity at 75 percent gate opening, $Q = 0.5 (2.00) (1.85) = 1.85 \text{ cfs}$. 24-inch metergate is adequate.

2. ELEVATION AT WHICH METERGATE SHOULD BE PLACED.

- a. To meet upstream submergence requirement, H_1 of 1.00, crown of pipe entrance should be set at El. $100.0 - d = 98.5$.
- d. To meet requirement of water surface 6 inches above crown of pipe in downstream well, elevation of crown of entrance would be set at El. $100.0 - \Delta H - h_w = 100.0 - 1.45 - 0.50 = 98.04$, say El. 98.0. Depth requirement for measurable water surface in downstream well is governing factor and gate should be set with crown of entrance not higher than El. 98.0.

3. MAXIMUM CAPACITY OF METERGATE (Full open)


- C_d for full gate opening with downstream pressure tap of $x = 75$ (12 inches from entrance on 18-inch gate) is about 0.75 (Figure 15). $\Delta H = 1.0 (0.75) = 0.75$ feet. From $Q = C_d A V$. $Q = 0.75 (1.767) (1.02) (0.75) = 0.93 \text{ cfs}$.

SCREW LIFT VERTICAL METERGATE INSTALLATION CRITERIA AND EXAMPLE

Figure 29

CONSTANT-HEAD ORIFICE TURNOUT (CHO)

The constant-head orifice turnout, Figure 30, is essentially a submerged orifice-meter type of measuring device. The upstream or orifice gate controls the discharge while the downstream or turnout gate controls the submergence on the upstream gate.

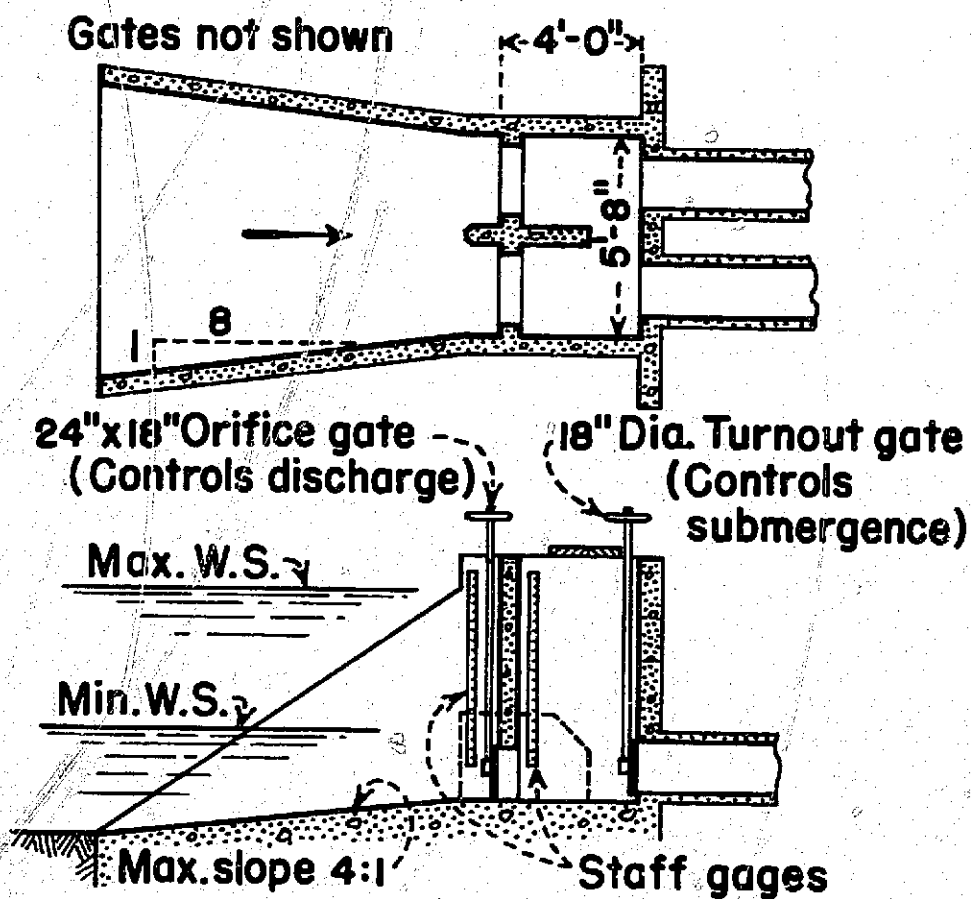

PLAN I CONSTANT HEAD ORIFICE TURNOUT

Figure 30

As a means of standardizing the device, it was arbitrarily decided to always submerge the orifice gate sufficiently to produce a 0.2-foot difference in water surface elevation (differential head) across the upstream or orifice gate.

The constant-head orifice is usually operated as follows: The orifice gate opening for the desired discharge is obtained from the discharge table and set. The turnout gate is adjusted until the differential head across orifice gate is at the required constant head of 0.2 foot. The discharge will then be at the desired value. Two standard sizes of constant-head orifice meters have been calibrated and the discharge values are given in Tables 32 and 33 of the Water Measurement Manual.

The 10-second-foot capacity turnout is designed to operate with the canal water surface from 21 inches to 6 feet above the orifice gate seat. Minimum operating depth is 18 inches. This turnout uses a rectangular 24- by 18-inch screw lift vertical gate for the orifice gate and an 18-inch-diameter screw lift vertical gate for a turnout gate; two sets of gates are used side by side in the turnout structure which employs 18-inch-diameter pipe.

The 20-second-foot capacity turnout is designed to operate with the canal water surface from 27 inches to 6 feet above the orifice gate seat. Minimum practical operating depth is about 24 inches. This turnout uses a rectangular 30- by 24-inch screw lift vertical gate for the orifice gate, a 24-inch-diameter screw lift vertical gate for the turnout gate; two sets of gates are used side by side and discharge into 24-inch-diameter precast concrete pipe.

Discharge Characteristics

The discharge through a constant-head orifice turnout may be computed from the orifice equation

$$Q = CA \sqrt{2gH}$$

where

- Q = discharge in cfs
- H = differential head on orifice gate (0.2H)
- A = area of orifice gate opening in square feet
- C = coefficient of discharge
- g = acceleration due to gravity (32 ft/sec/sec)

The coefficient "C" determined in 98 tests on 6 different designs of turnout, for a complete range of gate openings and canal water surface elevations is shown in Figure 31.

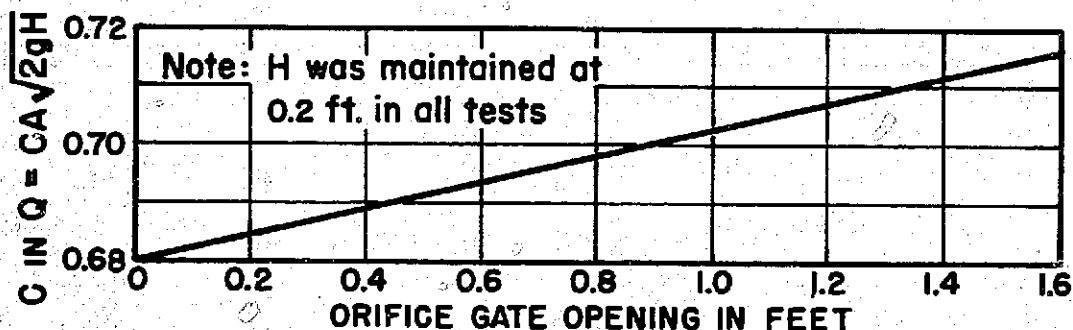


Figure 31

The discharge tables (referred to above) were prepared from this curve. Single barrel and double barrel tests gave the same discharge coefficients.

When only one of the two orifice gates is open, it is desirable to open the turnout gate directly below the opened orifice gate. The head should be read on the sidewall of the pool next to the open gates. An incorrect head reading will be obtained if the gages on the sidewall opposite the open gate is used. If both turnout gates are opened with only one orifice gate open, an incorrect head reading will be obtained on all gages.

More consistent results will be obtained if the downstream gage is relocated adjacent to the orifice gate instead of adjacent to the turnout gate. Any arrangement of open and closed gates that produces a tilted water surface between the orifice and turnout gates should be avoided because of the difficulty of determining the head by any means.

Discharge Determination Errors

Since the principle of operation of the constant-head orifice turnout is to maintain a constant differential of 0.2 foot across the orifice gate, it is extremely important that this differential be determined accurately in the field if accurate discharge determinations are to be expected. The equation for discharge may be written

$$Q = CA \sqrt{2g} \sqrt{H}$$

where H is 0.2 foot.

If an error of 0.01 is made in reading each gage, H could be as small as 0.18 foot or as large as 0.22 foot. The error in discharge would be proportional to the square root of the head or

$\sqrt{0.18} = 0.4243$	Difference	
$\sqrt{0.20} = 0.4472$	0.0229	0.0224
		average
$\sqrt{0.22} = 0.4690$	0.0218	

and

$$\frac{0.0224}{0.4472} \times 100 = \pm 5 \text{ percent}$$

For an error of 0.02 foot in reading each gage the discharge determination error would be ± 10 percent.

It is, therefore, apparent that accurate discharge measurements can be obtained only if great care is used in determining the differential head. Some operators have complained that it is next to impossible to read a staff gage accurately when looking downward into a dark hole at a steep angle at a choppy water surface which may also be surging. Since there is a good bit of truth in this statement, two suggestions are given to help obtain a better differential head reading.

The staff gages could be mounted in stilling wells made from a suitable length of commercially available transparent plastic pipe. This would prevent the choppy water surface from interfering with making an accurate reading. The wells should be quickly removable for cleaning. If surges are causing the water level in the well to rise and fall, a wood bottom having a 3/8-inch hole drilled in it could be fastened in the well. This would allow the well to average the surges and provide a more dependable head determination.

A second method would make use of a portable manometer constructed to be temporarily mounted on the transverse concrete wall between the staff gages. The portable manometer would be constructed as shown in Figure 32.

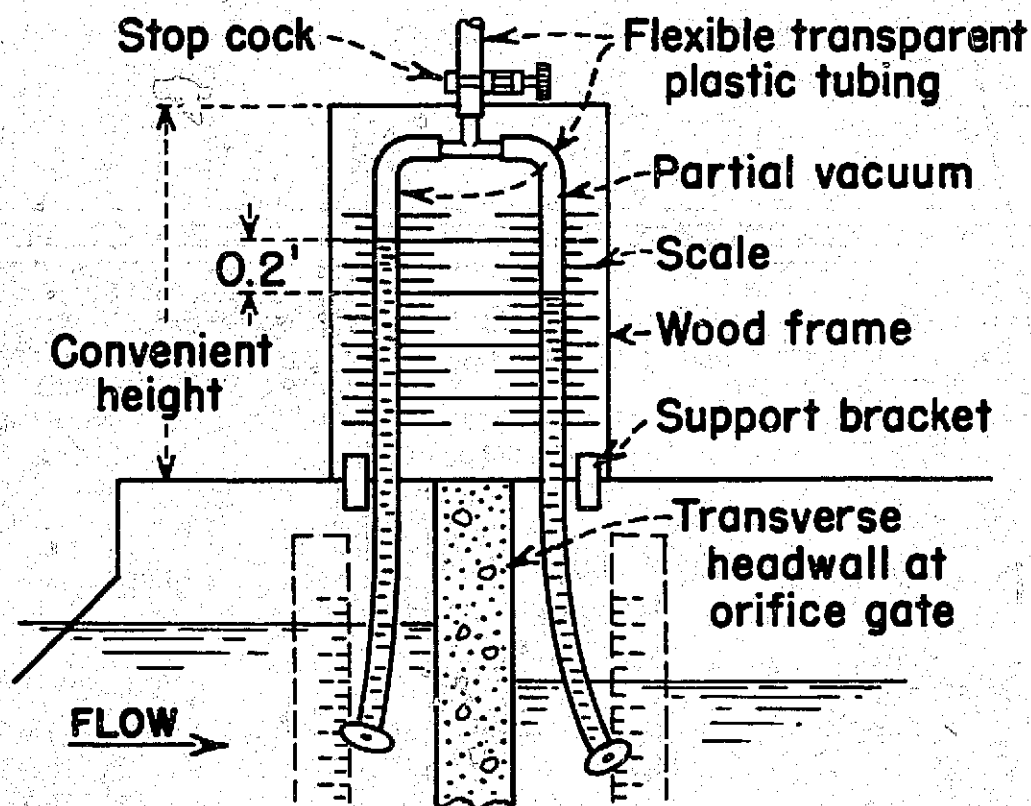


Figure 32

Flexible transparent plastic tubing is slipped over a metal tee (soldered copper tubing) so that both legs are interconnected at the top and lead to a stem fitted with a stopcock. Water is sucked up into the manometer to the desired height for ease of reading and the stopcock tightened to hold the water columns up. The partial vacuum, applied equally to each water column, does not change the differential head. The metal disks with small holes ($\pm 1/8$ inch) drilled in them may not be necessary but will help to stabilize the water columns if surges are a problem. The disks should be thin ($1/16$ inch or less) and several inches in diameter. Rubber stoppers with a preformed hole might be used in place of the disks if the velocity past the hole is not too great. The inside diameter of the tubing should be several times greater than the diameter of the hole in the rubber stopper or metal disk to obtain significant damping action on the water columns in the tubing.

The differential head for normal operation may be increased if difficulty still exists in setting, reading, or maintaining the 0.2-foot standard differential. Discharges may be calculated using the coefficient for the orifice gate opening actually used and the differential head actually measured. Turbulent flow conditions or a reduced submergence at the turnout gate will not affect the discharge if it is possible to obtain a true downstream head. To be certain of the accuracy of these higher differential head discharges, it would be desirable to check several gate settings using a current meter or other calibration method to measure the discharge. This displacement, if any, of the coefficient curve from the values given for the 0.2-foot differential could be determined from calculations, and a new coefficient curve drawn parallel to the one shown. Only a few accurate check points would be required because the curve shape would necessarily be the same as for the 0.2-foot curve.

Other errors in discharge measurement might be caused by other factors such as discussed for metergates and orifices.

Effect of Entrance Structure Geometry

The preceding sketch of the constant-head orifice turnout indicates 8:1 flaring walls in plan on the entrance or approach structure and a 4:1 sloping floor. The floor slopes downward away from the orifice gate, Plan 1, Figure 30. Other common installations are shown in Figure 33, each has 8:1 flaring walls in plan.

Selection of the type of entrance for a new installation will usually be limited by the relative elevations of the canal bottom and the pipe invert. If there is any choice in the matter, however, it should be noted that Plans 1 and 2 provide the best operating structures. Flow conditions with these entrances are steady and smooth and the differential head is not difficult to read. When the entrance is partially constricted as in Plans 3 and 4, by an adversely sloping floor, the flow pulsates and the surface is rough. Surges and boils upstream from the turnout gates tilt the water surface and make the head difficult to read.

It has been noticed that some structures in the field are now of the Plan 4 type, even though they were Plan 2 type when installed. Sediment and debris have collected near the entrance to the turnout and maintenance crews have cleaned for only a short distance upstream, producing the sharp downward slope to the orifice gate. More extensive pool cleaning would improve the ease of obtaining head readings and might improve the accuracy of the measurement.

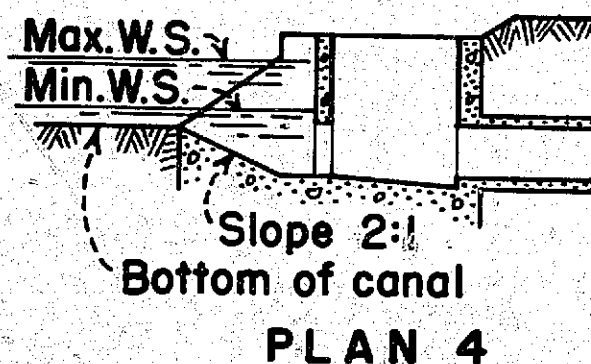
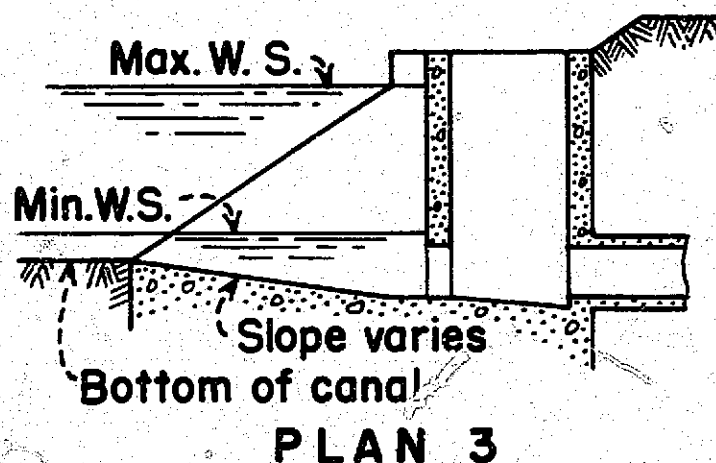
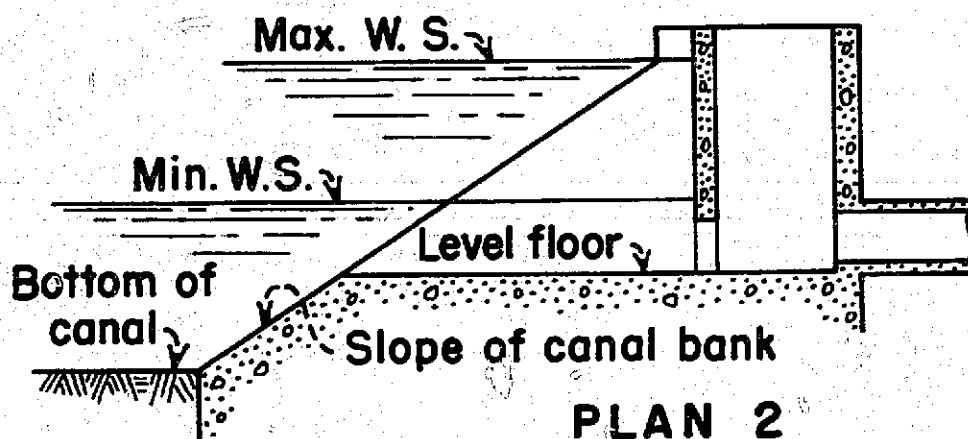


Figure 33

CURRENT METER GAGING STATIONS

The current meter technique uses the velocity principle to obtain a value of discharge. Therefore, enough readings must be taken to insure accurate values for both the area of the flow section and the average velocity.

In selecting a site for a gaging station or a location for a meter or any other propeller device, it is important that smooth uniform flow exist upstream (to some degree downstream) from the location at all times. The approach to the site should be straight for several hundred feet or more and, to the eye, the surface velocity should be the same across the entire width of the section. The cross section of the site should be typical of the sections upstream and downstream and should be in stable material. Locations where banks or bottom can erode or where sediment is known to deposit, should not be used. A site where meters can be operated from the upstream side of a bridge is desirable because a cableway or other crossing need not be constructed. In general, the site should produce flow conditions that meet the requirements discussed under the section, "Flow Characteristics Reducing Accuracy of Measurement."

A staff gage and a water stage recorder should be installed and carefully referenced to some meaningful datum. In operating the station, a standard procedure should be established and followed for each measurement. Procedures are given in detail in the Bureau's Manual for Measurement of Irrigation Water and in Reference No. 7 in the section "References" in this paper.

Current meters should be in good mechanical condition and should have a recent calibration or calibration check. The use of two meters during a measurement can show up meter deficiencies if they exist. Careful handling of meters by experienced personnel will help to insure good ratings. Careful plotting of a stage-discharge relationship curve for each gaging station will help to evaluate the accuracy of each gaging measurement as it is made and will help to establish confidence in the station.

After the station is put into operation, the cross section should be checked periodically and maintained in its original condition. Sediment bars should be removed from the bottom and corrections to the net section made, if erosion occurs on the bank or bottom. If the water surface is raised or lowered by checking, careful time records should be kept to determine when the staff gage or water stage records are an indication of the discharge.

WEIRS

Since weirs were frequently used as examples in "General Aspects of Water Measurement Accuracy," they will not be elaborated upon in this portion of the text. They have been specifically referred to under the headings of: Approach Flow, Turbulence, Velocity of Approach, Exit Flow Conditions, Weathered and Worn Equipment, Poor Workmanship, Faulty Head Measurement, and Use of Wrong Measuring Device.

PROPELLER METERS

Propeller meters have been in use since about 1913 and are of many kinds, shapes, and sizes. They are used submerged near the ends of pipes or conduits or "in-line" in pressurized pipe systems. Many meter designs and modifications for special conditions and purposes are available from manufacturers and it is therefore impractical to try to discuss all makes and models. All propeller meters have certain common features, faults, and advantages, however, which can be analyzed to provide a better understanding of meter operation. A thorough comprehension of meter principles, their inherent limitations and advantages, and the operating experiences of many users may be beneficial when purchasing, installing, operating, and maintaining meters for a field installation. The information presented herein has been gathered from project and water district personnel, letters, reports, inspections, complaints, and from laboratory and field tests conducted specifically to evaluate propeller meter performance. Much information, some good and some doubtful has been sifted to emphasize basic material and eliminate incorrect or conflicting statements. An attempt has been made to eliminate material which applies only or particularly to one make of meter or to one specific installation. The material presented applies to all meters, in general, and to all installations, except as noted.

Propeller meters utilize a multibladed propeller (2 to 6 blades) made of metal, plastic or rubber, rotating in a vertical plane and geared to a totalizer in such a manner that a numerical counter can totalize the flow in cubic feet (perhaps to within 10 cubic feet), acre-feet, or any other desired volumetric units, and/or an indicator to show the instantaneous discharge, in cubic feet per second, acre-feet per day, or any other desired units. The propeller, designed and calibrated for operation in a pipe or conduit, should always be fully submerged, that is, the pipe or conduit must be flowing full. The propeller diameter is always a fraction of the pipe diameter; usually varies between 0.5 to 0.8 of the diameter of the pipe. Compound flow meters have more than one propeller and are more complicated in design. Meters are available for a range of pipe sizes from 2 to 72 inches in diameter.

The measurement range of the meter is usually about 1 to 10; that is, the maximum discharge the meter can indicate or totalize is about 10 times the minimum that the meter can handle. The meter is ordinarily designed for use in water flowing at from 0.5 to 17 feet per second although inaccurate registration may occur for the lower velocities in the 0.5 to 1.5 ft/sec range.

The meter size is usually stated in terms of the pipe diameter. For example, a 24-inch meter might have a 12-inch-diameter propeller for use in a 24-inch-diameter pipe. Thus, the principle involved in measuring discharges is not a displacement principle as in certain municipal water meters or indicating devices used on gasoline service station pumps, but rather a simple counting of the revolutions of the propeller as the flow passes the propeller and causes it to rotate. Anything that changes the frictional resistance of the propeller, the number of revolutions in a given time, or the relationship between pipe and propeller areas, therefore, affects the registration or accuracy of the meter. The many factors affecting propeller rotation are discussed in the following pages.

Flow Patterns

The accuracy of a propeller meter (in new condition) is primarily dependent upon the similarity of the flow patterns in the vicinity of the propeller during calibration and during regular use. Factors which change the flow pattern approaching or leaving the propeller will change the accuracy or registration of the meter.

Spiral flow

A poor entrance to a turnout pipe, elbows, fittings, unsymmetrical approach flows and many other factors can produce spiral flow in a pipe. The propeller meter, because it has a hub at the center of the pipe and a revolving propeller, is therefore very sensitive to water flowing in a spiral pattern. Significant errors in registration can result when the meter is used in spiral flow. Depending on the direction of rotation of the flow with respect to the pitch and direction of rotation of the propeller, the meter will over or under register. Flow straightening vanes inserted in the pipe upstream from the meter will help to eliminate errors resulting from this cause. The meter manufacturer usually has specific instructions regarding the size and placement of vanes and these should be followed when installing a propeller meter. It is usually suggested that vanes be several pipe diameters in length and that they be located in a straight, horizontal piece of pipe just upstream from the propeller. The horizontal pipe should be seven diameters

or more in length. Vanes are usually made in the shape of a + sign to divide the pipe into equal quarters as shown in Figure 34.

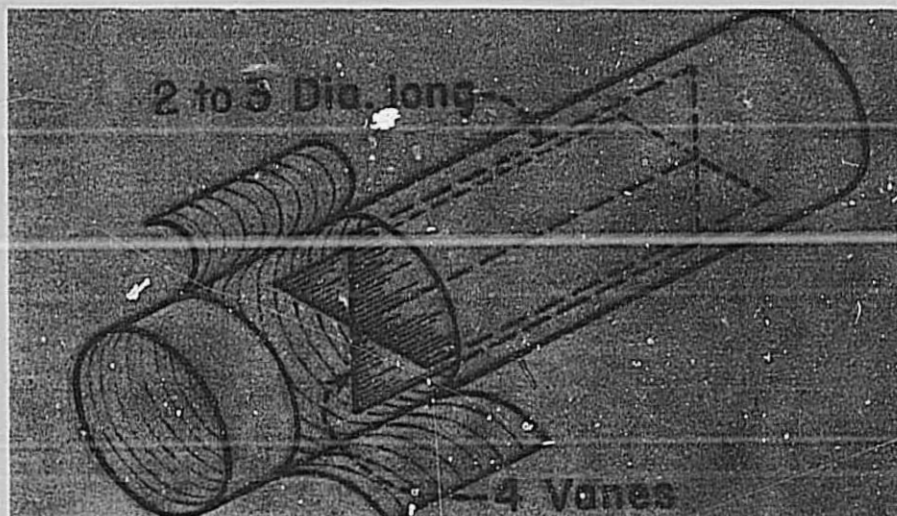


Figure 34

Laboratory experiments have shown that vanes of this type (used where no spiral flow exists) may reduce registration by 1 to 2 percent compared to readings made with the vanes removed. This is because the area taken up by the vanes tends to reduce the velocity near the center of the propeller. Some manufacturers have suggested the use of vanes which do not meet in the middle but divide the pipe into thirds as shown in Figure 35.

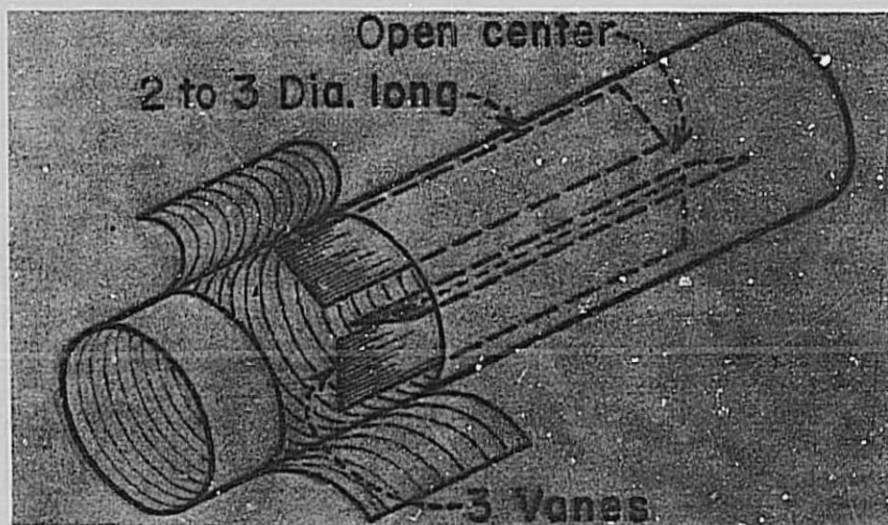


Figure 35

Because of the open flow area in the center of the pipe there is less disturbance to the flow pattern in the center of the pipe. One or more diameters of clear space between the downstream end of the vanes and the propeller helps to nullify any adverse effects caused by either type of vane.

If straightening vanes are not used, a long length of straight, horizontal pipe (30 or more diameters long) may be required to reduce registration errors. Venting the pipe to the atmosphere just downstream from the control gate, if this is possible, may help to reduce spiral flow.

Velocity profiles

In any pipe--even a very short one--the friction between the inside flow surface of the pipe and the water is greater than the internal friction of the water. This results in the water in the center area of the pipe having a higher velocity than the water near the boundary.

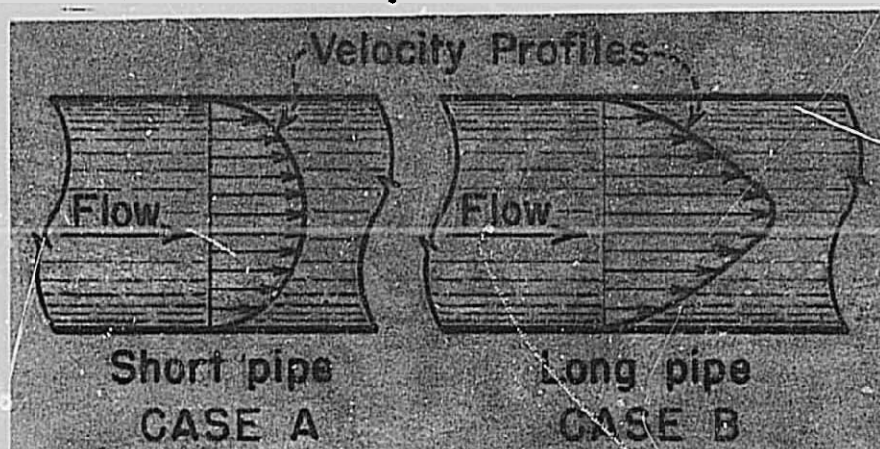


Figure 36

In a short pipe the velocity profile would be similar to Case A, Figure 36; in a longer pipe the profile would look as shown in Case B. In the latter fully developed velocity profile the difference between the center and edge velocities is quite large but is stable and does not increase further. It is obvious therefore that the propeller, which receives its impetus from the central area of the pipe, will receive different total forces for Cases A and B above, and that a greater number of revolutions will occur in the long pipe, Case B. On the other hand, less force, and fewer revolutions (under registration), will occur for Case A. Laboratory tests have shown that long turnouts or pipes (30 or more diameters long) have fully developed

velocity profiles and give 3-4 percent greater registration than short pipes, 6-10 diameters long. Rough or corrugated pipes tend to produce the Case B velocity profile in shorter lengths than smooth wall pipes. No exact data are available to define every situation, however.

Control gates, such as the slide gate often used at a turnout entrance, may affect the flow pattern and/or the velocity profile in a short pipe. For example, tests have shown that for a 24-inch pipe turnout 23 feet long from gate to meter, in the 5-cfs range, a full gate opening resulted in an indication of 96 percent of the true discharge. When the same discharge was put through a 6-inch gate opening, the meter indicated 100 percent of the actual discharge. The 4 percent difference in discharge was the maximum effect noted in these tests.

It is apparent, therefore, that changes in velocity distribution in the pipe cross section, that make the distribution significantly different from that used during the meter calibration, will cause a change in meter registration. Changes may be either plus or minus with respect to the original discharge calibration. Inspection and analysis of the flow conditions upstream from the meter may prove beneficial in trouble shooting a field installation suspected of giving incorrect meter registrations. Checking the flow distribution in a cross section just upstream from the meter with a Pitot tube would conclusively establish whether a poor velocity pattern was present. Meters are never calibrated with poor velocity patterns in the pipe.

Propeller and Pipe Size Relationships

Meters should always be used in pipes of the proper or recommended diameter. The meter manufacturer can supply this information. However, a discussion of the relative effects of propeller diameter will be helpful in understanding the trends in over and under registration where a meter is used in a pipe larger or smaller than the recommended size. Propeller diameters vary between 0.5 and 0.8 of the pipe diameter. It is therefore not always possible to determine the proper pipe size by measuring the propeller diameter.

In visualizing the effects of a larger or smaller pipe on the accuracy of a given propeller meter, Cases A and B of Figure 36 will be helpful. Depending on the type of velocity profile in the proposed larger or smaller pipe, the propeller will tend to intercept higher velocities (overregister) or lower velocities (underregister) and will be in error depending on the change in

the average velocities intercepted. No numerical values can be given because different meter manufacturers have different propeller designs. For example, propeller tips are affected differently by varying absolute velocity values; also, different clearance requirements between the propeller and the pipe wall produce different register values. Items that are important for one propeller shape may not affect another. Tests have shown, however, that the larger the pipe diameter with respect to the propeller diameter, the more a change in velocity profile will affect the meter registration. Thus, meters having propellers nearly the diameter of the pipe they are to be used in should provide most accurate results. Conversely, propellers that are half or less than the pipe diameter will give the least accurate results.

It has been established in laboratory tests that changes in registration for two pipe sizes will be minor if, for both pipe sizes, the propeller diameter is 75 percent or more of the pipe diameter. In all cases, registration errors will be less in rough wall pipe because the rough wall helps to establish quickly a fully developed velocity profile.

Even when it is established that the differences in velocity profiles intercepted by the propeller will be negligible, the meter must be corrected (change in gear ratio or other means) to account for the change in pipe diameter.

Propeller Motion

Since the meter head, in effect, counts the number of revolutions of the propeller to indicate the discharge, any factor that influences the rate of propeller turning can affect the meter registration. Practically all propeller effects are negative; that is, they reduce the number of propeller revolutions which would otherwise occur and result in under registration. More water is therefore delivered than is indicated or paid for.

Propellers are usually designed to turn on one or more bearings. The bearings are contained in a hub and are protected from direct contact with objects in the flow. However, water often can and does enter the bearing. Some hubs trap sediment, silt, or other foreign particles, and after these work into the bearing a definite added resistance to turning of the propeller becomes apparent. Some propellers are therefore designed for flow-through cleaning action so that particles do not permanently lodge in the bearings.

Silt has been found to be particularly damaging to bearings. It is present in many flows and as a result many otherwise satisfactory meters have been rendered unfit for service. Figure 37

shows the wear in the worm gear teeth of an in-line meter laboratory tested for 2,200 hours in fairly clear water.

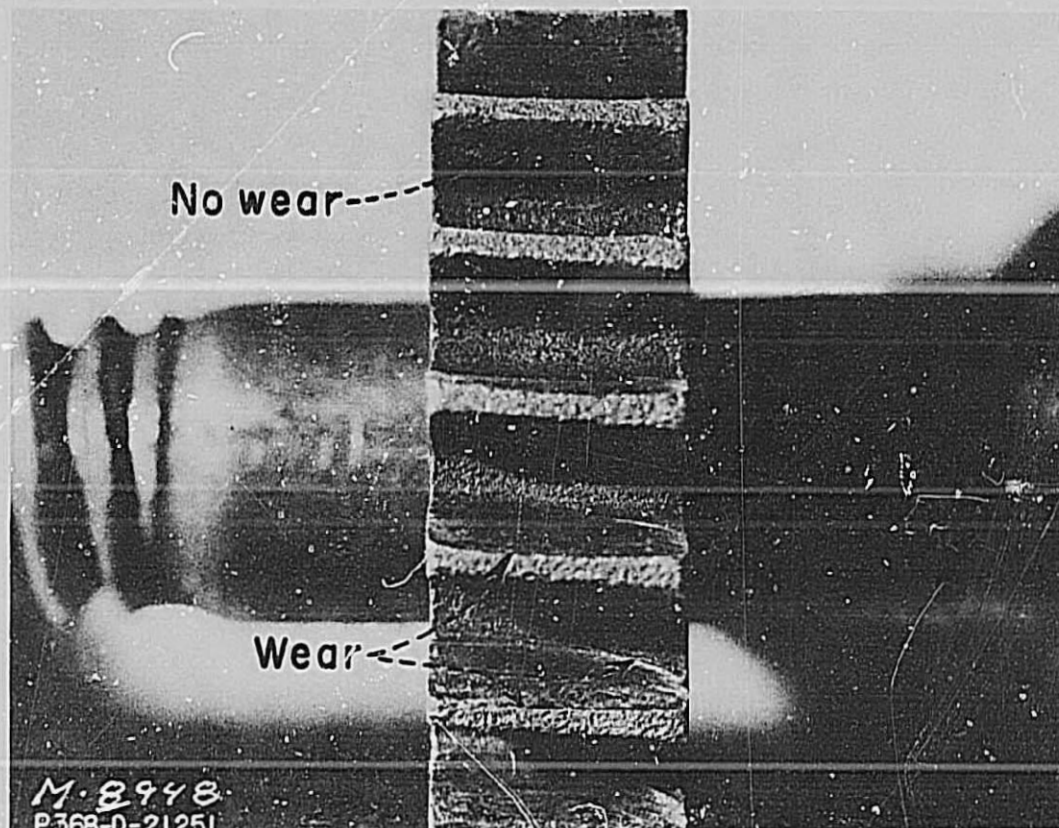


Figure 37. Flowmeter gear teeth worn on one face--
2,200 hours of operation

In another laboratory controlled test a flow containing 5,000 parts per million of silt and very fine sand (0.005-0.15 mm) was used to test a medium size open-flow propeller meter. In less than 2 hours of operating time silt particles had collected in the bearing and produced propeller binding. After 5 acre-feet of water had passed the meter, 22 grams of silt (dry weight) were found in the propeller hub and bearing housing. (A 50-cent piece weighs about 12 grams.) A check of the propeller showed that it turned intermittently and slower than when new, in water flowing at 0.5 ft per sec and less.

After 45 acre-feet of water had passed the meter the unit was disassembled; bearing wear was easily visible. Holes were drilled

through the bearing assembly. Less silt was then found to accumulate. In effect, when the hub could be drained, less bearing damage was evident but bearing wear was not eliminated. Sand traps may be necessary in field installations to reduce the amount of sediment (bedload) reaching the meter.

Care should be taken in lubricating meter bearings. Use of the wrong lubricant (perhaps none should be used) can increase the resistance to propeller motion, particularly in cold water. It should also be established that the lubricant is reaching the desired bearing or other surfaces after it is injected. For some meters, the manufacturers did not recommend lubrication of the bearings.

Although propellers are designed to pass (to some degree) weeds, moss, and other debris there is a limit to the amount of foreign material that can be tolerated in the flow. Even moderate amounts of floating moss and/or weeds can foul a propeller unless it is protected by screens. Heavy objects can break the propeller. With larger amounts, or certain kinds, of foreign material in the water even screens may not solve the problem.

Meter Screens, Sand Traps

Screens to protect meter propellers are usually designed for a particular type of turnout on a particular canal, and to handle a particular type and size of debris; however, screens have certain common features which seem to be universally desirable and which help to prevent head losses across the meter and improve the quality of water measurement.

Screens usually consist of a metal frame, covered with wire mesh, which fit into a slot at the upstream end of the turnout. Double screens (set a foot or more apart in small turnouts) are usually desirable so that protection is provided while one screen is being removed and cleaned. The wire mesh usually varies from 1- by 1-inch (No. 9 wire) to 1/4-inch galvanized hardware cloth. Openings of 1/2 inch seem to be most successful and popular. Another common size is 5 by 5, or 5 by 4 mesh, and 19-20 gage wire.

Small screens may be set on a slope but larger screens should be set in the vertical position so that a winch (sometimes portable) can be used to raise and lower the screen for cleaning. Cleaning may be done by broom, wire brush, or water jet. Reverse flow through the screens may also be used but provisions must then be made for wasting the cleaning water. In large turnouts from canals, traveling screens may be used to remove debris and reduce the trash problems at the meter.

Screen area should be a minimum of 8-10 times the area of the flow cross section; in many installations the screen area is 15-20 times the flow area and this has not been found excessive. Where sizable head losses cannot be tolerated the screen area should be large, the cleaning frequent, or both.

Sand traps, to catch the bedload (sand and gravel that moves along the bottom), should be arranged so that the trapped material can be flushed along the main canal--not into the turnout. Settling basins to trap the larger particles of suspended sediment (suspended in the flowing water) may be helpful at a meter installation. To remove suspended sediment the velocity of the approaching flow must be reduced to allow sediment to settle out. To accomplish this, fairly large and relatively costly settling basins are required. The advice of an expert should be obtained before considering a facility of this type.

Head Losses

The head loss across a propeller meter is usually considered to be negligible, although there is evidence that losses for open-flow meters may run as high as two velocity heads. This is equivalent to 0.6 foot of lost head in a 24-inch-diameter pipe carrying 8 cfs. The losses for certain in-line compound and other type meters may be as high as 6 to 8 feet of head. In general, however, losses are low but it has not been established exactly what the usual losses are.

In many cases, turnout losses including losses through the pipe entrance, screens, sand trap, pipe, etc., are large enough to make the losses at the meter seem negligible. Some allowance for meter losses should be made during turnout design, however, and the meter manufacturer can usually supply the necessary information.

Meter Accuracy

The accuracy of most propeller meters, stated in broad terms, is within ± 2 to 5 percent of the actual flow. Greater accuracy is sometimes claimed for certain meters and this may at times be justified. On the other hand, it is sometimes difficult to repeat calibration tests under controlled conditions in a laboratory within ± 2 percent. A change in lubricating practice or lubricant, along with a change in water temperature can cause errors of this magnitude. A change in line pressure (the head on the turnout entrance) can cause errors of from 1 to 2 percent.

Effect of meter setting

The setting of the meter in the turnout may be responsible for sizable errors if the meter is not carefully positioned. A meter (24-inch-diameter pipe, 12-inch-diameter propeller, 8-cfs discharge) set with the hub center 1 inch off the center of the pipe showed an error of 1.2 percent. When the meter was rotated 11.5° in a horizontal plane ($1/4$ inch measured on the surface of the 2-1/2-inch-diameter vertical meter shaft housing) the error was 4 percent; for 25° the error was 16 percent (under registration). Setting the meter (shaft housing) in a nonvertical position would introduce the same degree of error.

Effect of initial counter setting

Meter manufacturers recognize that meters tend to underregister after they have been in use for a time and some meters are set to read 101.5 percent of the actual flow as their initial registration. This is done in anticipation that the meter will read correctly (100 percent of the actual flow) during the middle portion of the meter's life. Meters which are readjusted to record a particular flow (the lower end of the scale) with greater accuracy may cause registration errors of up to 10 to 15 percent at greater flows (the high end of the scale).

Effect of rapidly varying discharge


Meters are most accurate when a near constant discharge is to be measured. Considerable error can be introduced by varying the flow rate greatly or quickly. Registration accuracies may vary from 97 to 102 percent of true measurement as a result of continually varying the flow over a significant range during the measurement period. The greatest error always occurs for low flows (at the lower end of the meter capacity scale). Propeller meters are always most dependable and accurate when used in uniformly flowing clean water and a closed system.

Effect of turnout design

The exact position of the meter in the turnout and the arrangement of the turnout are responsible for sizable differences in meter registration. Since the relative location of the meter with respect to the entering flow can vary, the intercepted velocity profile can vary and different meter registrations can occur. Figure 38 shows the range of accuracies that exist for three different types of turnouts.

METER REGISTRATION ACCURACY - PERCENT

$$\left(A = \frac{\text{DISCHARGE INDICATED BY METER}}{\text{TRUE DISCHARGE}} \times 100 \right)$$

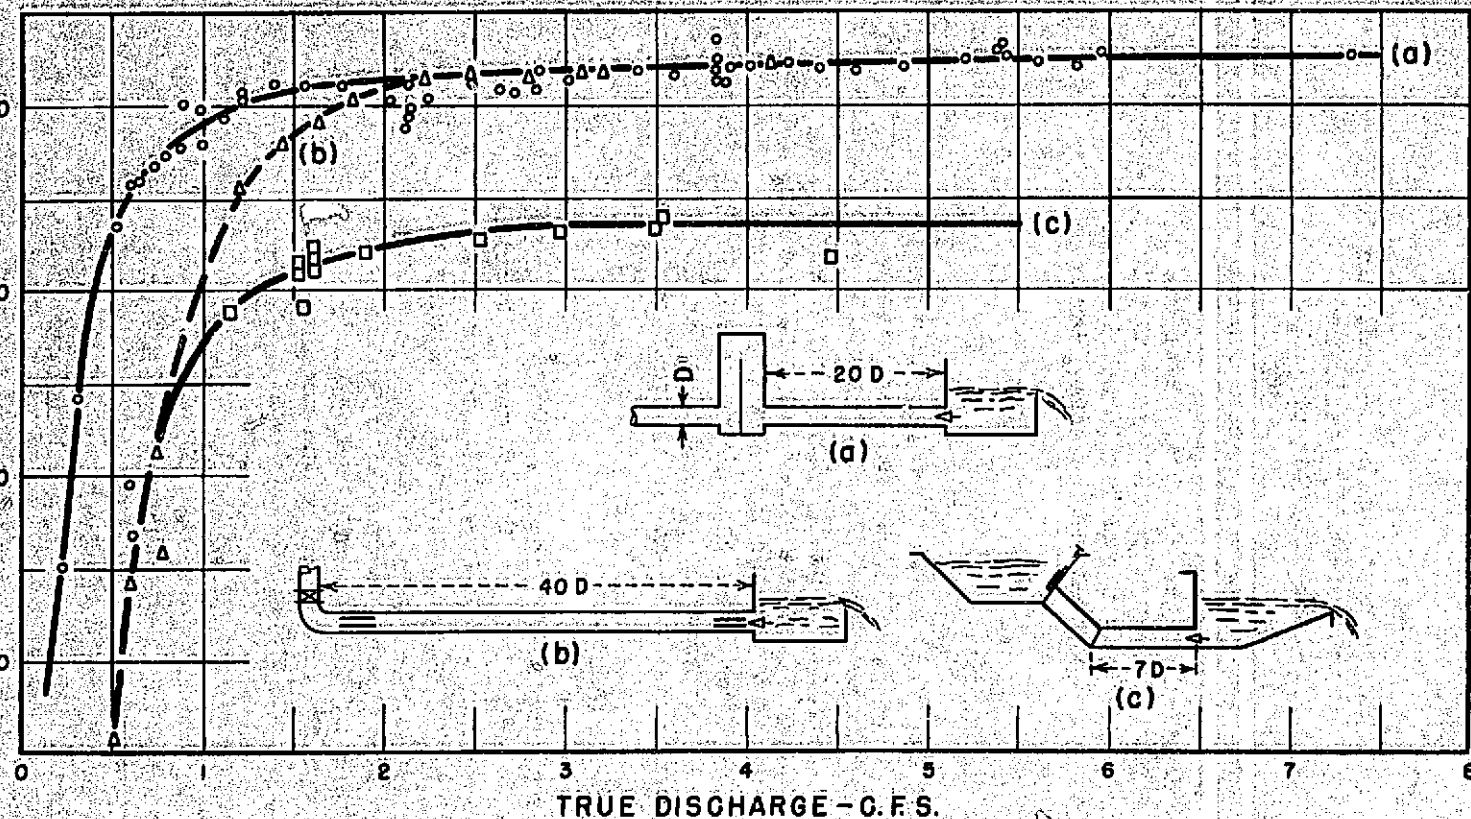


NOTES

- (a) Calibration with surge tank, straightening vanes, and 20 diameters pipe.
 - △ (b) Calibration with straightening vanes and 40 diameters pipe.
 - (c) Calibration in model turnout, with 7 diameters pipe.
- Meter with 6-inch propeller.

STUDY OF IRRIGATION TURNOUTS
EFFECT OF METER SETTING
ON REGISTRATION ACCURACY





Figure 38

69-75

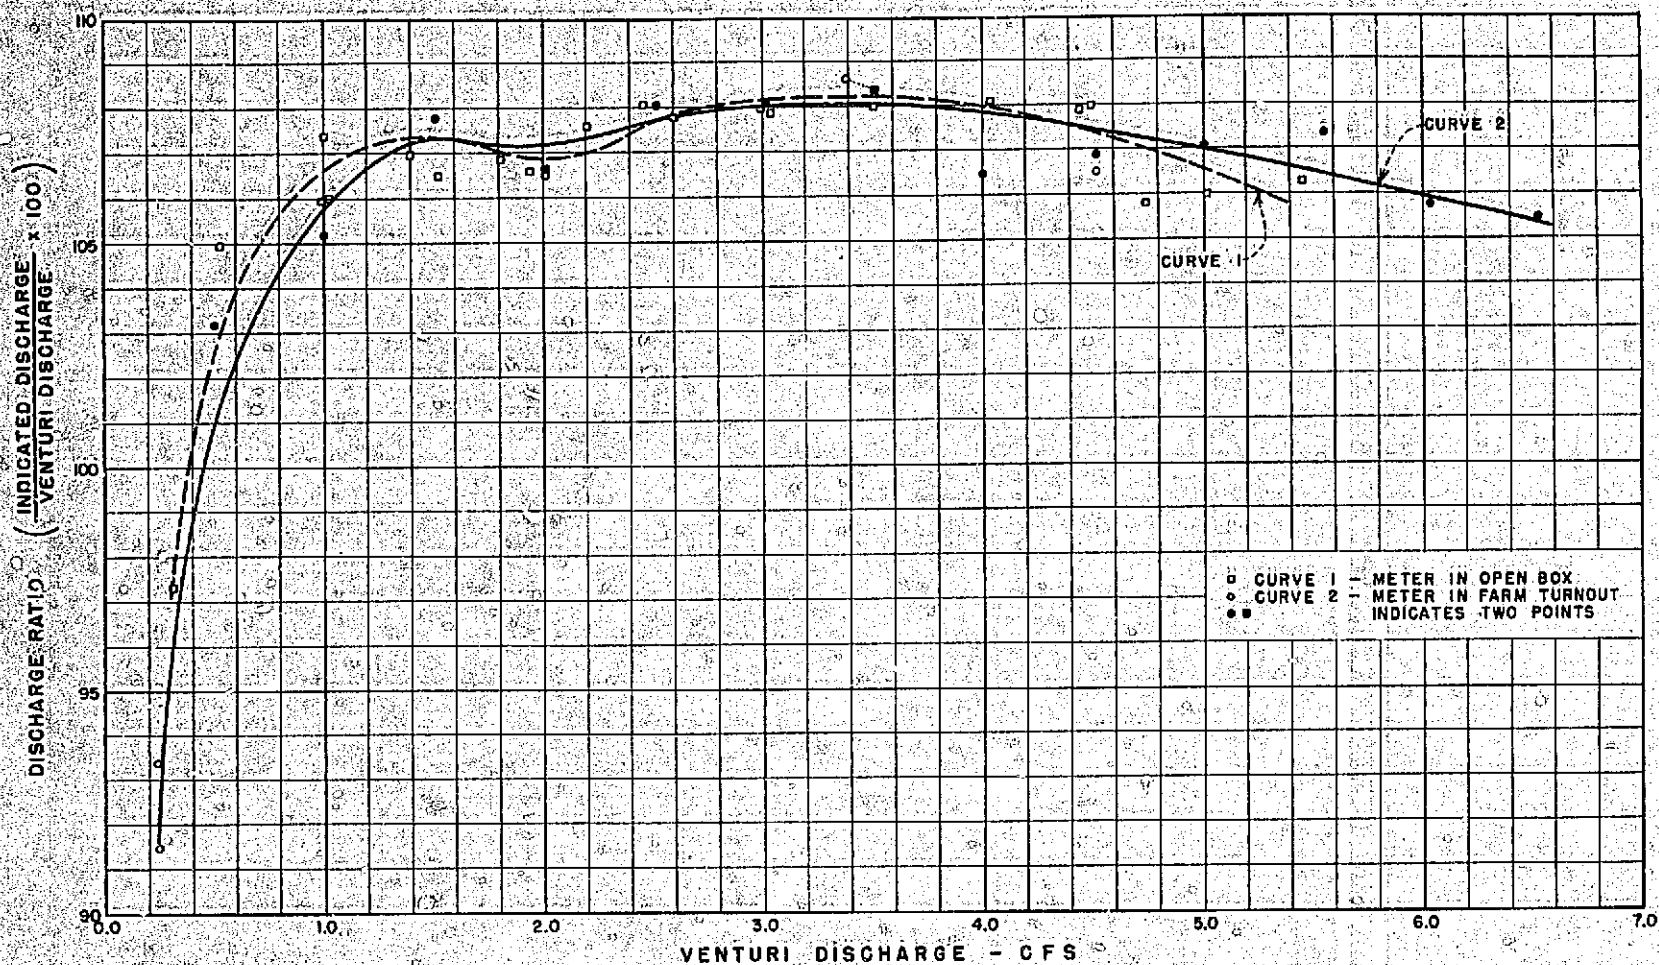

OPEN FLOW METER TURNOUTS
METER CALIBRATION CURVES - OPEN BOX AND FARM TURNOUT

Figure 39

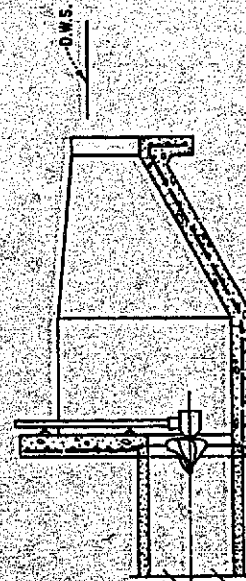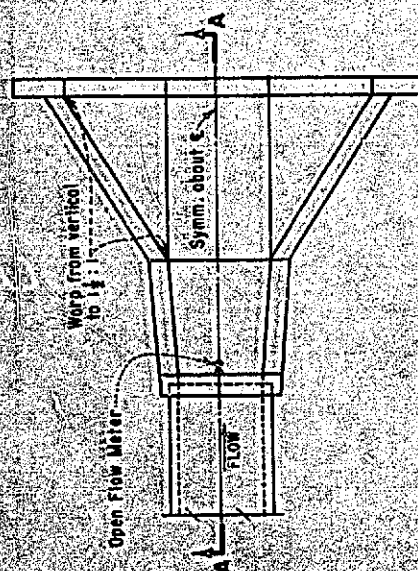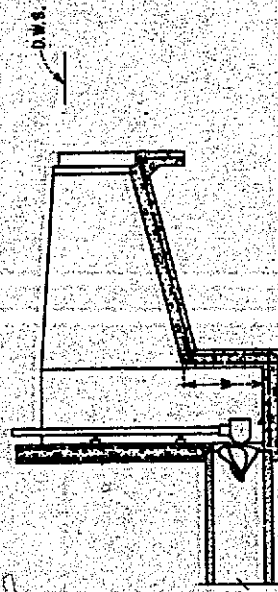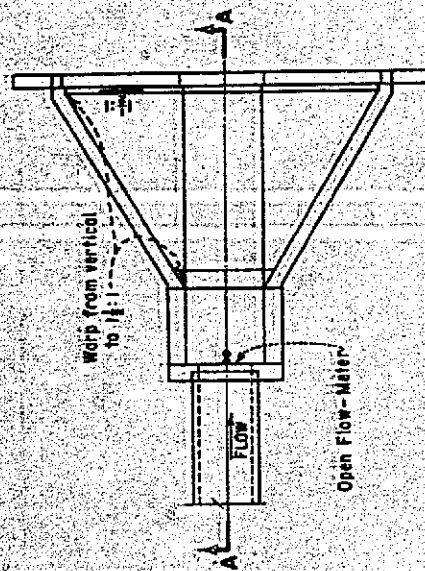

OPEN FLOW METER TURNOUTS
FARM TURNOUT STRUCTURES

Figure 40

The geometry of the outlet box downstream from the flowmeter may also affect meter accuracy. If the outlet is sufficiently constructed to cause turbulence, boils and/or white water the meter registration may be affected.

Curve 1 of Figure 39 shows a meter calibration where the pipe discharges into a large open box that has no backwater or other effect on the meter except to keep it submerged. Curve 2 shows the calibration for the same meter using the outlet structure shown in the sketch of Figure 40. This outlet structure (shown to scale) is believed to be the smallest that can be built without significantly affecting the meter calibration. The vertical step is as close to the meter as is desirable. Larger outlet structures--those providing more clearance between the meter and the vertical step--would probably have less effect on the registration. More rapidly diverging walls (in plan) should be avoided since they tend to produce eddies over the meter and/or surging flow through the turnout. This has been observed as a continuously swinging indicator hand which follows the changing discharge through the meter. The surging may often be heard as well as seen. As previously discussed, large registration errors can occur when rapidly or continually changing discharges are being measured.

Meter Costs, Maintenance

Propeller meter and maintenance costs are difficult to state in terms of dollars but some relative figures may be of value in making rough estimates. A propeller meter installation may cost two or three times more than a weir, depending on labor rates, and be somewhat less costly than, say, a Venturi meter. Two-thirds of the cost usually is for the meter (and other equipment such as screens, etc.) and one-third is for installation. The propeller meter will require more maintenance than a weir or a Venturi meter. Propeller meters may require continuous maintenance which may amount to as little as \$10 to \$25 per year or several times more. In some meters a single bearing may cost up to \$75. To offset these costs, meters have paid for themselves in as short a time as 2 months, based on the value of the water they have saved. In other areas where water is relatively plentiful they have never paid out.

Hundreds of propeller meters bought for regular use have been taken out of service and stored in warehouses because of various troubles, either because the meter did not serve the purpose for which it was purchased, or because it became unreliable or inoperable after a period of service. Propeller bearing trouble is the most common problem and may be difficult to overcome except

by means of a well-planned maintenance program. In districts where maintenance is accepted as inevitable, and where bearings and spare parts are stocked for immediate use, the maintenance costs and problems seem to be minimum. In other districts where personnel are unfamiliar with meter mechanisms, and where spare parts are ordered on a one-at-a-time basis, the maintenance costs are high. In some cases users expect to replace bearings--they do not consider the need for bearing replacement to be a defect in the meter; in other areas a bearing failure is cause for permanently removing the meter from service. Experience has shown that maintenance costs can be reduced by establishing a regular maintenance program which includes lubrication and repair of meters; screen cleaning, repair, and replacement (about every 2 years); sand trap cleaning; and general maintenance of the turnout and its approaches. In a regular program many low-cost preventive measures can be made routine and thereby reduce the number of higher cost curative measures to be faced at a later time.

Choice of Meter Size

Many meters have been retired from service without ever having accomplished their original purpose, simply because a larger than necessary meter was purchased and the meter was not able to record the usual smaller daily flows. In attempting to use an existing turnout pipe (pipe sizes may not have any relationship to the discharge to be measured) a large meter was purchased to fit the existing pipe. The meter could then handle the maximum possible flow through the turnout but was too large to handle the small flows that were the usual daily requirement. In some districts it has been necessary to state the minimum flow that can be delivered and measured; the user is then expected to arrange his water use so that smaller discharges are not necessary. Care should be taken not only to match the meter to the pipe size but to match the meter to the proper discharge range. It may be necessary to reduce the turnout pipe size as a result, but the savings in purchasing a smaller meter might help to offset this cost. If possible, the meter size should be selected so that usual operation will occur in the midrange of the meter.

The velocity in the pipe should be above 1.5 feet per second for best performance. If sediment is present in the water, the velocity should be even higher to minimize the added friction effect produced by worn bearings. A meter that operates continually in the lowest range (or highest) will not be as accurate as one that operates in midrange.

NEW MEASURING DEVICES AND TECHNIQUES

VANE DEFLECTION METER

A portable vane flowmeter is on the market and, according to the manufacturer's claims, the meter is accurate and useful. The meter has been evaluated from comprehensive tests made under simulated field conditions in the Hydraulic Laboratory and the claims of the manufacturer were found to be quite truthful. The meter is indeed an accurate and useful device.

The portable deflector vane rests in permanent brackets mounted in a 6-foot-long ditch liner, either rectangular or trapezoidal in cross section, set in an earth ditch. Therefore, one meter head will service any number of ditches of the same general flow capacity having liners and brackets permanently installed. About 30 sizes of meter and ditch liner are available. Each meter handles a wide range of flows in a given size of ditch and automatically compensates for different combinations of velocity and depth. There is negligible loss of head caused by the ditch liner or meter. Instantaneous discharges only may be read; no totalizing device is available. Installation is simple and the cost is reasonable, especially if several or more ditches can be served with one meter.

Since the meter works on the deflection principle, wind effects on the exposed portion of the meter can cause serious measurement errors unless precautions are taken. A wind break made from a piece of plywood was found to be effective in minimizing wind-caused errors.

Under ideal conditions the meter was found to be accurate to 1.6 percent, and to about 3 percent under less favorable conditions. Wind produced errors of up to 100 percent but simple precautions eliminated practically all of this error.

The meter is durable, well constructed, and should retain its original factory calibration indefinitely. Interchangeable calibrated scales are available from the manufacturer to indicate cfs, gpm, miners inches, acre-feet per day, etc.

The complete evaluation of the meter is available to Bureau employees in a restricted report, Hydraulic Laboratory Report No. R-Hyd-10, dated July 20, 1962. This may be obtained by writing to Technical and Foreign Services Branch, Bureau of Reclamation, Denver Federal Center, Denver, Colorado.

DILUTION METHOD

In making the usual water measurement it is necessary to measure head, velocity, cross-sectional area, depth, meter revolutions or some factor(s) that may be difficult to measure, because the measurement must be made in, on, over, or beneath the flowing water. One method of determining discharge that circumvents the need for making difficult measurements is the dilution method. In this method a substance in concentrated form is introduced into the flowing water and allowed to thoroughly mix. At a downstream station a sample is taken, and from the degree of dilution of the concentrate the discharge is computed. Since only the quantity of water necessary to accomplish the dilution is involved, there is no need to measure velocity, depth, head, cross-sectional area or any of the other hydraulic factors usually considered in a discharge measurement.

Many different substances have been used in dilution tests. Chemicals, including ordinary salt, have been used and the dilution has been evaluated by the change in the ability of the flowing water to conduct an electric current. Or chemicals such as sodium dichromate have been utilized and the quantity in a sample determined by means of chemical analysis or flame photometer determination. Sodium dichromate has been recommended for use in many waters because it is stable and chromium ions do not ordinarily appear in natural waters. Dyes have been used to color the water and colorimeters and comparators have established the dilutions by comparing the samples with standard concentrated or dilute solutions.

Fluorescein dye, Rhodamine B dye, or Pontacil Pink dye have been used. The latter two are very stable, do not occur in nature and can be simply and accurately detected by means of a fluorometer in very low concentrations (one part in a million or better is claimed).

Radioisotopes are also being used in dilution tests and the degree of dilution is determined by counting the gamma ray emissions from the diluted isotope solution (the downstream flow) using Geiger counters or scintillation counters. Since the counters can at best account for only the emissions in the sphere of influence surrounding the counter device, and since the understanding of the radioisotope method involves complete comprehension of the laws of probability and of mathematical and physical derivations beyond the scope of this paper, no attempt will be made here to explain directly the theory behind the radioisotope method of making discharge measurements. However, considerable comprehension of the method may be had by understanding the principles

involved in making a dilution discharge determination. Figure 41, "Dilution Method of Measuring Discharge," illustrates schematically the use of the dilution method.

A relatively large quantity of chemical or dye, called a tracer, is dissolved in a small quantity of water and placed in a bottle so that the tracer solution can be discharged into the flowing water at a known rate. A canal is illustrated in Figure 34 but a pipe or pressure penstock could also have been shown. In either case the discharge to be measured is referred to as Q .

The concentration $\left(\frac{\text{weight of tracer}}{\text{weight of water}}\right)$ of tracer in the bottle is a ratio C_1 . The rate of injection (cubic feet per second) is q_1 . To account for any tracer which might already be in the upstream flow, the original tracer concentration will be called C_0 . At the downstream station shown in the figure it will be assumed that thorough transverse mixing of the tracer with the flow has taken place. Since no flow has entered the canal during the mixing of the tracer and since no loss of flow has occurred, including seepage losses, the upstream Q is the same as the downstream Q plus the quantity of added tracer. The concentration of tracer at the downstream station is C_2 .

The above conditions may be stated in a simple relationship--the canal discharge Q multiplied by the concentration of upstream tracer C_0 , plus the injection rate q_1 multiplied by C_1 the tracer concentration in the bottle, are equal to the quantity Q plus q_1 multiplied by the concentration C_2 at the downstream station. In other words

$$QC_0 + q_1 C_1 = (Q + q_1) C_2$$

or

$$QC_0 + q_1 C_1 = QC_2 + q_1 C_2$$

Rearranging terms

$$QC_0 - QC_2 = q_1 C_2 - q_1 C_1$$

Simplifying

$$Q(C_0 - C_2) = q_1(C_2 - C_1)$$

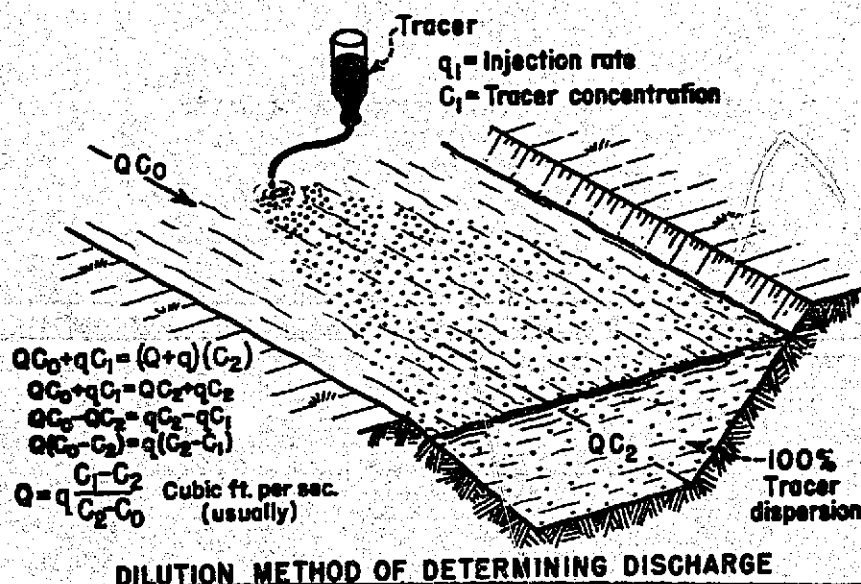


Figure 41 PX-D-43065

Dilution method of measuring discharge

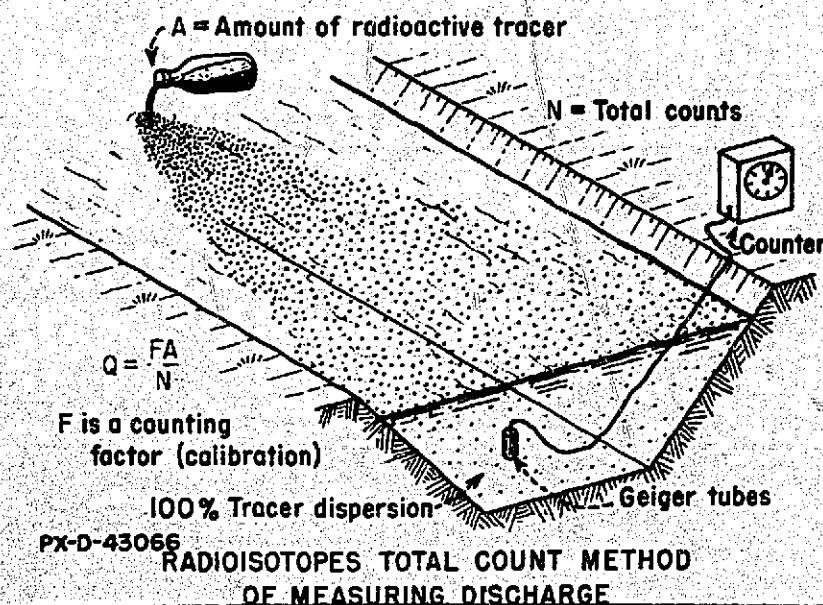


Figure 42 PX-D-43066

Radioisotope method of making a discharge measurement

or

$$Q = q_1 \frac{(C_2 - C_1)}{(C_0 - C_2)} \quad \dots (8)$$

In effect, Equation (8) states that the discharge in the canal (pipe conduit or other) may be obtained by multiplying the injection rate of the tracer by a ratio obtained from three concentration values. There is no need to know or measure canal velocity, depth, cross section or any of the usual hydraulic elements. A thorough understanding and realization of these facts is the key to understanding the dilution method of measuring discharges.

RADIOISOTOPE METHOD

Radioisotopes may be used in place of a chemical or dye tracer and the same general procedures followed. Figure 42, "Radioisotopes Total Count Method of Measuring Discharge," shows all the elements necessary to make a radioisotope discharge measurement. The following explanation may help to explain the procedures. In the "pulse" or "total count" method a known amount of radioisotope A (corresponding to $C_1 q_1$) is introduced into the flow in a relatively short time. At the measuring station downstream where the radioisotope is thoroughly mixed, the concentration of the radioisotope tracer is determined from the gamma ray emissions detected and counted by Geiger-Muller or scintillation detectors. Where C_2 was a constant of concentration in the chemical dilution Equation (8) the concentration of radioactivity in the pulse is a variable with respect to time. Thus, C_2 in the latter case must be measured with respect to time. In mathematical terms this may be written

$$Q = \frac{C_1 q_1}{\int C_2 dt} = \frac{A}{\int C_2 dt} \quad \dots (9)$$

In preparing for a discharge determination test, the Geiger or other counters must be calibrated, taking into account the exact conditions under which the counters will be used. The counters are submerged in a large container filled with a mixture of water and radioisotope of known concentration. The container must be large enough that any further increase in volume would not change the counting rate. Determination of the counting rate in this manner simulates the action of the counter in a canal where the

container is, in effect, infinite in size. If F is the calibration or correction coefficient for a specific counting system in a specific location, the counting rate R for a solution having a concentration C_1 is

$$R = FC_1$$

and

$$C_1 = \frac{F}{R}$$

Substituting in Equation (9)

$$Q = \frac{A}{\int \frac{R}{F} dt} \quad \dots (10)$$

Since the total number of gamma rays (counts) N , counted during the passage of a pulse of tracer is

$$N = \int R dt \quad \dots (11)$$

substitution of (11) and (10) gives

$$Q = \frac{FA}{N}$$

in which

Q = volume per unit time (cubic feet per second)

F = counts per unit of radioactivity per unit volume
per unit of time (counts per second)(millicuries
per cubic feet)

A = total units of radioactivity to be introduced for
each discharge measurement (millicuries)

N = total counts (number).

In preparing A, a large known quantity of isotope (gold-198-- salts dissolved in aqua regia) in liquid form is divided into parts known as aliquots, using a portable field laboratory containing a standardized counting system. The individual parts, A, are usually contained in 1 pint plastic bottles and are transported to the test site in numbers sufficient for the discharge measurements.

In making a measurement in a canal the bottles are handled with tongs about 3 feet long and the isotope is introduced into the canal by pouring onto the water surface. Sometimes the isotope is contained in glass bottles which are smashed in an impact device below the surface of the water. When possible the isotope is introduced at a point where turbulence can aid in the mixing, Figure 43. Turbulent water aids dispersion and thorough mixing of the radioisotope with the flowing water.

To obtain a total count, N, the counts received from natural sources such as cosmic rays (usually called background) must be measured before and after a test and the background count subtracted from the overall totals indicated. Therefore, counting is usually started well before the time of arrival of the diluted isotope and is continued long after the isotope has departed. Recording of the counting is not usually stopped until the background has receded to pretest levels.

Geiger counters (in a bundle) and a portable decade scaler for totalizing the gamma ray emissions are shown in Figure 44. Figure 48 shows the easy-to-read numbers on the portable decade scaler which indicate the total count.

Thorough mixing of the isotope with the flowing water is of primary importance in obtaining accurate measurements. In canals it is very difficult to obtain sufficient mixing because of the lack of turbulence, a characteristic of a well-designed canal. The isotope tends to string out in a long line rather than extend itself laterally. Studies are presently being made (throughout the world) to determine the length of canal or river needed to obtain satisfactory mixing. Equations are being derived and investigated to determine whether it is possible to predict the lengths required for a given set of initial conditions. Less difficulty in obtaining satisfactory mixing has been experienced in natural streams and in pipelines because of the higher velocities which usually prevail and the correspondingly greater intensity of turbulence. It may be necessary to use turbulence inducers when working in canals, particularly if they are checked up, or are discharging at less than maximum capacity. In a typical canal discharging 300 to 600 cfs the required mixing length in a recent set of tests was found to be less than 2,000 feet. In other



Figure 43 P-212-D-36460 NA

Turbulent water aids dispersion and mixing of the radioisotopes and water

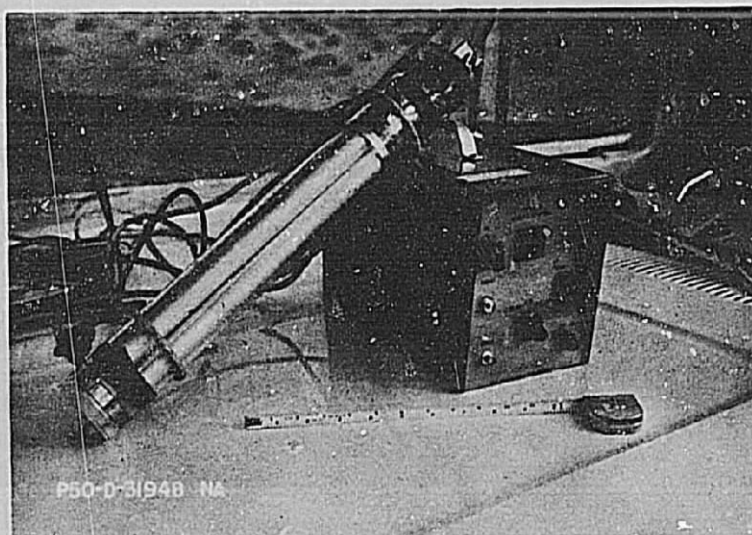


Figure 44 P-50-D-31948

Radioisotope detection and counting devices being developed and used
in Bureau of Reclamation tests

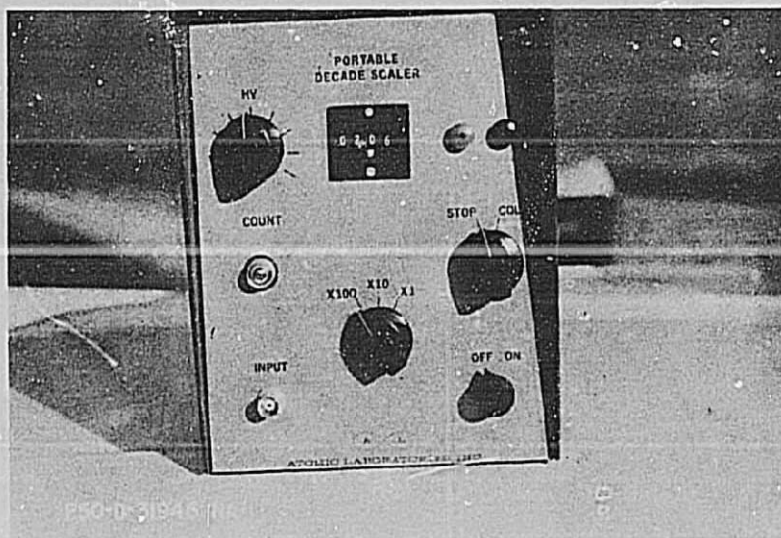


Figure 45 P-50-D-31946 NA

Dial on portable decade scaler indicates total count



Figure 46 P-50-D-31943 NA

Radioisotope detector and counter installed for canal discharge measurement

canals insufficient mixing has occurred in a length of 5,000 feet. It would be desirable to reduce the required length as much as possible in order to increase the number of possible test sites and also because absorption of isotope by materials such as earth, concrete or sediment might adversely affect the accuracy of the measurement.

The radioisotope used in Bureau of Reclamation tests is Gold-198. This isotope was selected because it has a half-life of 65 hours, can be detected in weak concentrations, is cheap, and is easy to obtain. In the concentrations used, the isotope is practically harmless after it is introduced into the flow. In case of an accident only a few days would be required to dissipate half of its radioactivity (half-life) and in another few days half of the remaining activity would be dissipated. No danger to human, animal, or fish life exists, however, since the radioactive material is handled in such a way by licensed personnel that only small quantities are concentrated in any one area. Concurrence of all public health agencies is always obtained before any tests are run.

Other isotopes which have been used by other investigators and which could be used in discharge determination tests are: iodine-131, sodium-24, and bromine-82, but these are more expensive and have certain other less desirable characteristics. The latter costs about \$3.75 per millicurie.* The minimum cost of Gold-198 (depending on quantity purchased) is about 6 cents per millicurie. In terms of a field test, the minimum cost of Gold-198 is about 60 cents per 1,000 cfs to be measured; the quantity of isotope used is based on obtaining statistical counting accuracy within about 2.6 percent. (If there are too few emissions to count the background count becomes a significant part of the total count; also, the lower the total count the greater the chance for error.)

Greater possible statistical accuracy, which may or may not always be justified, could raise the cost to as much as \$5 per 1,000 cfs of discharge. Considering practical limits, very little gain in possible statistical accuracy can be expected when more than \$2 worth of Gold 198 is used per 1,000 cfs.

The accuracy of the results achieved in using isotopes to measure canal discharges in over 100 tests has, in general, been encouraging. If thorough transverse mixing of the isotope with the flow can be assured, measurement accuracy of 99 percent can be achieved. Comparisons of isotope discharge determinations with "operational" discharges, current meter measurements, or other means, have been used to evaluate the isotope tests. It is believed that the isotope method shows real promise of becoming a routine method

*Recent price changes may affect this figure. The relative costs of various isotopes would remain approximately the same, however.

having guaranteed accuracy limits which are comparable to other devices and methods. Figure 46 shows the detection and counting equipment in operation on a medium-size canal.

The greatest deterrent to obtaining consistently accurate measurements has been the inability to obtain thorough transverse mixing. Work on this phase of the problem is continuing, both as a research subject in the laboratory and as a test problem in the field. Tests on devices to produce or introduce turbulence into canal flows have not been made, mainly because every attempt is being made to keep the measuring procedure and equipment as simple as possible. However, it may be necessary to provide turbulence-inducing injectors which utilize an external source of energy, such as an air blast, to start the eddy action which promotes transverse mixing. If this can be done with simple and reliable equipment, the problem of adequate mixing will be greatly simplified.

Considering all the factors involved in making any type of discharge determination, it may be seen that the radioisotope method shows promise of being developed into a simple procedure, requiring a minimum of time to execute, and providing maximum possibilities for being accurate. Eventually the radioisotope discharge determination development program will be expanded and injection equipment will be developed to introduce radioisotopes into pipelines or penstocks flowing under high heads. Pipe capacities, or turbine or pump efficiencies could be determined as an ultimate goal of the radioisotope discharge method development program.

Acoustic Flowmeter

Commercial development of acoustic flowmeters has progressed rapidly since the practical nature of the method was realized about 1950. Systems for small pipes (up to 10 inches) have been available but in 1964 a system was installed and experimentally evaluated in a 24-foot-diameter steel penstock at Oahe Dam on the Missouri River with satisfactory results. An open channel acoustic flowmeter has been installed in the Delta-Mendota Canal of the Central Valley Project by Government agencies. Research and development of the system shows promise that the principle utilized in the pipe systems may be satisfactorily applied to most open channel discharge measurements. Comprehensive studies of both open-channel and closed-conduit types of acoustic meters are continuing with the expectation that the method can be applied to measuring large discharges in both open-channel and closed-conduit systems.

Acoustic flowmeter systems are expected to offer, eventually, a relatively inexpensive, rapid, and reliable method of measuring

discharges in large pressure conduits and in large canals. The system uses the principle that the difference in time of arrival of two acoustic (sound) pulses traveling in opposite directions through the water can be related to the water velocity. Figure 47 shows a schematic arrangement of an acoustic meter installation in a pipeline. In one direction the water flow velocity increases the speed of the acoustic plus ($C + V_w$) while in the other direction the flow velocity delays the arrival of the pulse ($C - V_w$). Acoustic transducers are used to transmit and receive the acoustic pressure energy along oblique upstream and downstream paths in the channel or conduit. The accuracy of the system depends on positioning the transducers to obtain a true average velocity in the pipe or canal. Several pairs of transducers may therefore be required to obtain the true average velocity if the velocity profile in the conduit is not symmetrical about the centerline of the conduit. In an open channel the transducers must be raised or lowered as the flow depth changes to compensate for a changing velocity profile.

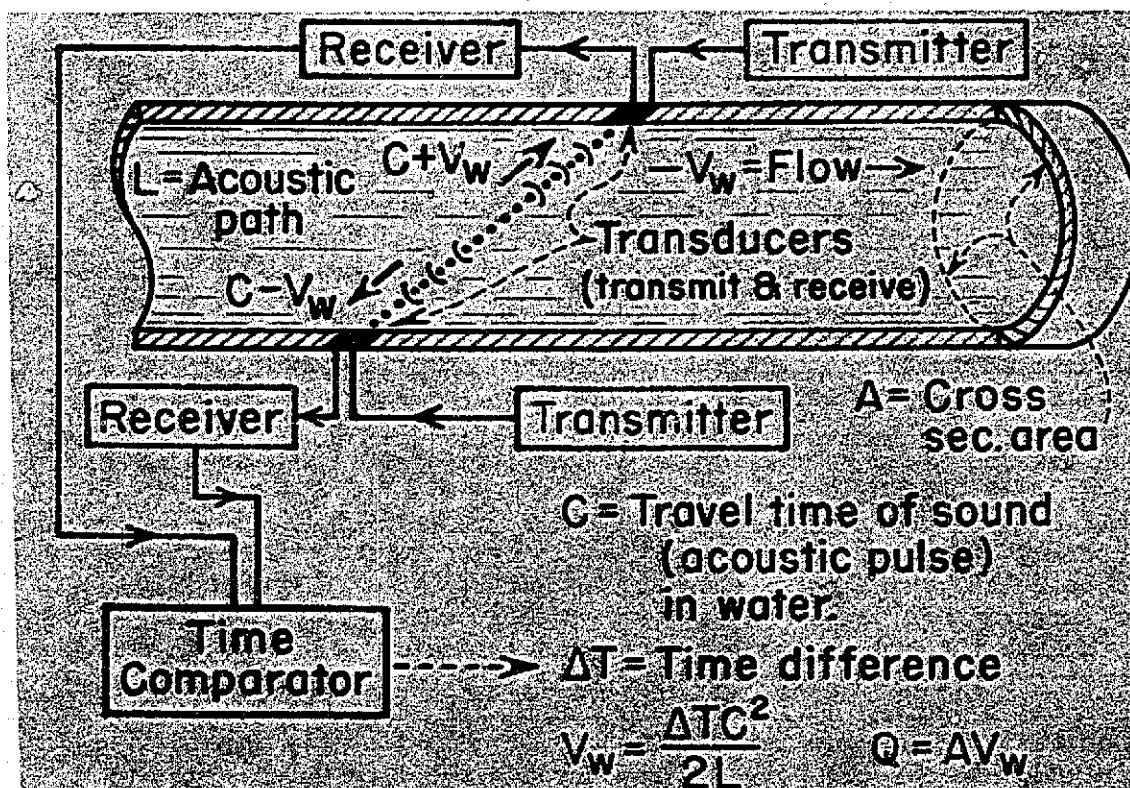


Figure 47

Acoustic systems are being developed that can operate over a range of conduit diameters or open-channel path lengths. The power supply, transducers, and velocity read-out components can be made compact for ease of installation in the structure. Power requirements have been reduced so that a 110-volt supply source can be used. There are indications that velocities can be measured with 1 percent accuracy. Consequently, discharges may be determined with considerable accuracy depending on the velocity profile at the measuring station.

Magnetic Flowmeter

Magnetic flowmeters are used commercially in chemical and process industries to measure and proportion liquids used in manufactured products. Recently with the increased cost of irrigation, municipal and industrial water, magnetic flowmeters are being considered for use as turnout measuring devices.

The operating principle of the meter is based on Faraday's law of induction, in that the voltage induced across any conductor moving at right angles through a magnetic field is proportional to the speed of the conductor. The principle is the same as used in direct and alternating-current generators.

In the flowmeter, water flows through a nonmagnetic tube which is surrounded by a magnetic field, produced by electronic circuitry contained in the flowing water, which induces an alternating-current voltage between two electrodes located in the tube walls. The voltage produced is proportional to the speed of the water in the tube and is used to indicate and record the rate or volume of flow.

Magnetic flowmeters are supplied in sizes ranging from an inch or less to several feet (diameter of the nonmagnetic flow tube). Development of the meter is continuing and considerations are being given to installing electromagnetic coils and electrodes on the inside surfaces of existing concrete pipes to form large flowmeters for use in pumping plants or distribution systems.

Accuracy of the smaller flowmeters has been shown by calibration to be relatively high. Calculations indicate that the accuracy of large meters should be high and attempts are being made to establish the accuracy of meters having diameters of 10 to 15 feet. The discharge measurement range of any particular meter can be extended by suitable switching in the electronic controls, to as much as 30 to 1, a definite advantage in most installations. A minimum velocity of about 0.5 fps through the flow tube is desirable for producing a sufficiently high voltage for an accurate discharge measurement. The meter will operate below the 0.5-fps range but with decreased accuracy.

Contrary to most meters little effect on the accuracy of the flow-meter is caused by elbows, gates, or valves located within a few pipe diameters upstream from the entrance to the meter flow tube, or near the outlet of the tube. The head loss in the system caused by the meter is negligible; is no more than the loss produced by the same length of pipe of similar roughness.

CONCLUSIONS

It is difficult, if not impossible, to establish definite rules which apply generally to water measurement procedures and equipment. Similarly, one measurement device cannot be recommended over any other device until all variables at the particular installation site are considered and properly weighted. It is therefore necessary for each operator to learn as much as possible about the device he is using and to evaluate the effect of each variable (at the particular site) on the measurement he is making.

Each operator must learn to look objectively at his equipment and procedures. He must be able to "see" that his equipment is run down and in need of maintenance or that his measurement procedures are not compatible with what he is trying to measure. He should become familiar with various types of measuring equipment, learn the advantages and disadvantages of each, and decide whether the existing equipment is the best for the job at hand. He should try to find fault with his equipment and every step he uses to make a discharge measurement, and try to improve wherever possible. This means that he must understand the basic measurement he is trying to make and then modify, if necessary, his methods of getting it. He should try to understand why he is doing the things he does and develop confidence in his knowledge. He should read available literature as much as possible to get background information on water measurement. He will thereby not only obtain more meaningful information, but will also have the satisfaction of knowing his job is well done.

REFERENCES

The following publications are suggested as an aid in acquiring background in water measurement practices. The items have been selected to provide practical help or background information, or both, and should be of value to both new and experienced personnel. Copies may be obtained from a public library or from the sources listed. The textbook chapters referred to are not difficult to read and will supply background material in gage reading problems and examples, orifice theory, gate and tube problems, and information on head losses and other flow phenomena.

The Bureau reports contain practical information pertaining to discharge measurements through metergates and constant-head turnout orifices which can be applied to field problems directly. In fact, a complete analysis of the flow through screw lift vertical metergates is contained in these reports and may cover specific problems encountered in your area. The report on the constant-head orifice turnout contains calibration data and operating instructions.











The textbooks are available in most public libraries and the reports should be on file in your Bureau regional office or project office, or can be obtained from the Technical and Foreign Services Branch, Bureau of Reclamation, Denver Federal Center, Denver, Colorado, 80225.

Items 1, 2, and 8 are valuable as handbooks and would be of permanent value as reference books. The principles discussed will be found helpful in understanding and operating almost every type of measuring device.

1. Water Measurement Manual, United States Department of the Interior, Bureau of Reclamation, First Edition, Denver, Colorado, May 1953
2. Handbook of Hydraulics, H. W. King, Third Edition, McGraw-Hill Book Company, Incorporated, New York City, New York
3. The Discharge of Three Commercial Cipoletti Weirs, R. B. Van Horn, Engineering Experiment Station Series Bulletin No. 85, University of Washington, Seattle, Washington, November 1935
4. Precise Weir Measurements, E. W. Schoder and K. B. Turner
5. Accuracy of the V-Notch Weir Method of Measurement, Transactions ASME, Volume 48, 1926, page 939
6. Weir Experiments, Coefficients, and Formulas, R. E. Horton, Water Supply Paper 200, Geological Survey, U. S. Department of the Interior, Washington, D.C.
7. Stream-gaging Procedure, D. M. Corbett, United States Department of the Interior, Geological Survey Water Supply, Paper 888, 1945, U.S. Government Printing Office, Washington, D.C.

8. Parshall Flumes of Large Size, R. L. Parshall, Bulletin 426-A, March 1953, U.S. Department of Agriculture, Colorado State University, Fort Collins, Colorado
9. Improving the Distribution of Water to Farmers by Use of the Parshall Measuring Flume, R. L. Parshall, Bulletin 488, U.S. Department of Agriculture, Colorado State University, Fort Collins, Colorado
10. Measurement of Debris-laden Stream Flow with Critical Depth Flumes, H. G. Wilm, V. S. Cotton, and H. S. Storey, Transactions ASCE, Volume 103, 1938, page 1237
11. World Practices in Water Measurement at Turnouts, C. W. Thomas, Proceedings ASCE, Journal of the Irrigation and Drainage Division, Volume 86, June 1960, Part 1
12. Common Errors in the Measurement of Irrigation Water, C. E. Thomas, Proceedings ASCE, Journal of the Irrigation and Drainage Division, Volume 83, September 1957
13. Hydraulics, Fifth Edition, King, Wisler and Woodburn, John Wiley and Sons, New York, Chapters II and VI
14. Hydraulics, R. L. Daugherty, McGraw-Hill Book Company, Chapters II, VI, and VII
15. Hydraulics for Engineers, Robert W. Angus, Sir Isaac Pitman and Sons, Canada, Chapters II and V
16. Hydraulics, George E. Russell, Henry Holt and Company, New York, Chapters V and VII
17. Flow Characteristics and Limitations of Armco Metergates, J. B. Summers, Hydraulic Laboratory Report No. Hyd-314
18. Flow Characteristics in a Pipeline Downstream from a Square-cornered Entrance, H. A. Babcock and W. P. Simmons, Jr., Hydraulic Laboratory Report No. Hyd-422
19. Flow Characteristics and Limitations of Screw Lift Vertical Metergates, J. W. Ball, Hydraulic Laboratory Report No. Hyd-471
20. Calibration of the Constant-head Orifice Turnout, B. R. Blackwell, Hydraulic Laboratory Report No. Hyd-216

21. Flow Characteristics of 8-, 10-, 12-, and 18-inch Concrete Fresno Irrigation Flowmeters, J. B. Summers, Hydraulic Laboratory Report No. Hyd-340
22. Study of the Effects of Turnout Design on Registration Accuracy of Propeller Meters Placed in Downstream Ends of Turnout Pipes, Hydraulic Laboratory Report No. Hyd-478
23. Investigation of the Effect of Turnout Geometry on the Registration Accuracy of a Propeller-type Open Flowmeter, Hydraulics Branch Report No. Hyd-545
24. Builders-Providence, Division of BIF Industries, Catalog Engineering Information
25. Principles and Practice of Flowmeter Engineering, L. K. Spink, 8th Edition, The Foxboro Company, Foxboro, Massachusetts

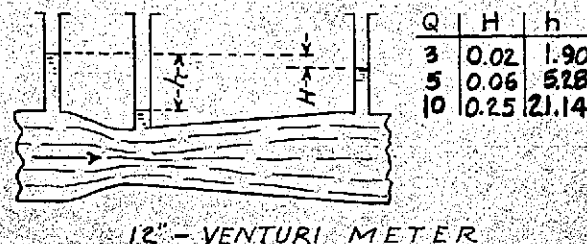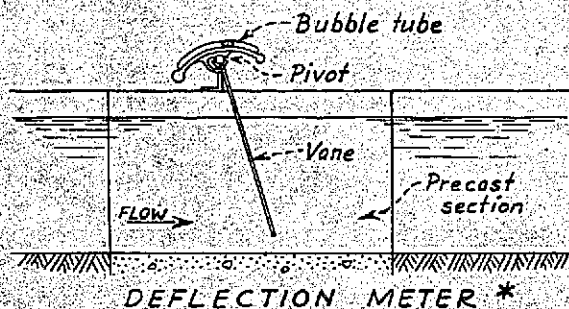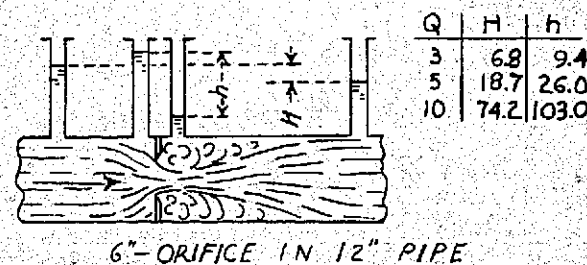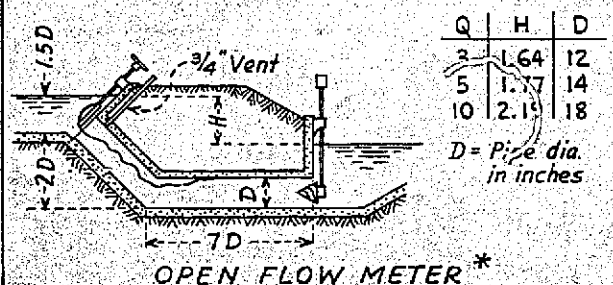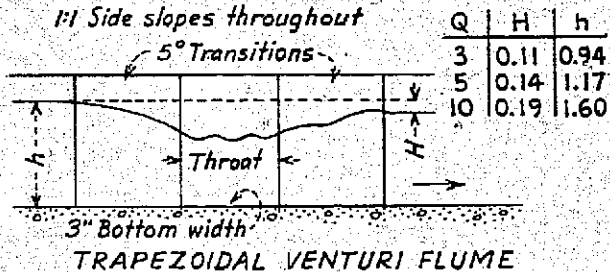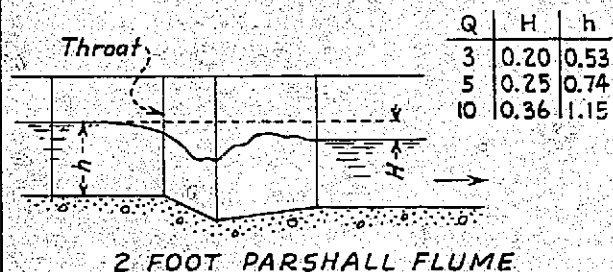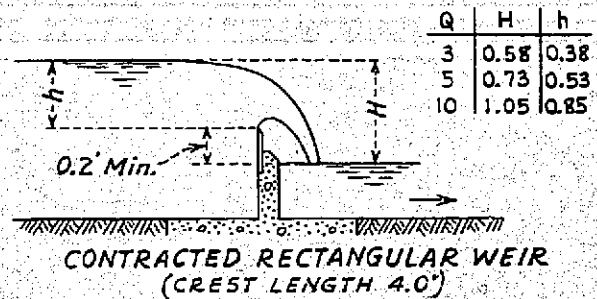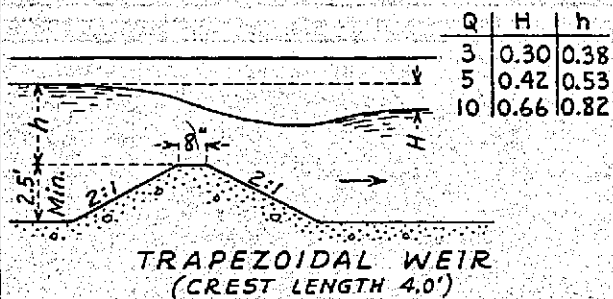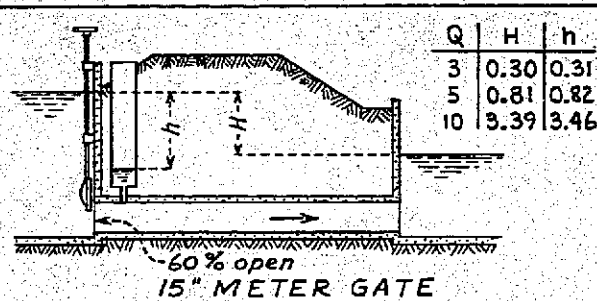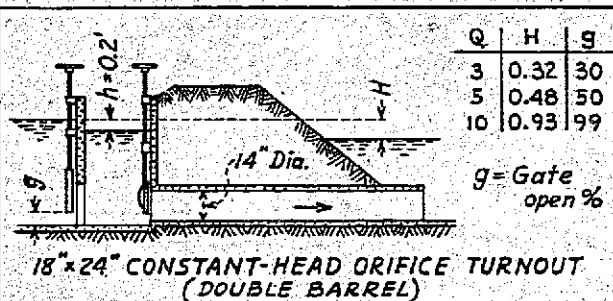

NOTES
 Q = Discharge in c.f.s.
 H = Head required in feet.
 h = Measuring head in feet.
 * - Substantially no head required to operate.

COMPARISON OF OPERATING AND MEASURING HEADS FOR VARIOUS WATER MEASURING SYSTEMS

CONVERSION FACTORS—BRITISH TO METRIC UNITS OF MEASUREMENT

The following conversion factors adopted by the Bureau of Reclamation are those published by the American Society for Testing and Materials (ASTM Metric Practice Guide, January 1964) except that additional factors (*) commonly used in the Bureau have been added. Further discussion of definitions of quantities and units is given on pages 10-11 of the ASTM Metric Practice Guide.

The metric units and conversion factors adopted by the ASTM are based on the "International System of Units" (designated SI for Systeme International d'Unités), fixed by the International Committee for Weights and Measures; this system is also known as the Giorgi or MESA (meter-kilogram (mass)-second-ampere) system. This system has been adopted by the International Organization for Standardization in ISO Recommendation R-31.

The metric technical unit of force is the kilogram-force; this is the force which, when applied to a body having a mass of 1 kg, gives it an acceleration of 9.80665 m/sec/sec, the standard acceleration of free fall toward the earth's center for sea level at 45 deg latitude. The metric unit of force in SI units is the newton (N), which is defined as that force which, when applied to a body having a mass of 1 kg, gives it an acceleration of 1 m/sec/sec. These units must be distinguished from the (inconstant) local weight of a body having a mass of 1 kg; that is, the weight of a body is that force with which a body is attracted to the earth and is equal to the mass of a body multiplied by the acceleration due to gravity. However, because it is general practice to use "pound" rather than the technically correct term "pound-force," the term "kilogram" (or derived mass unit) has been used in this guide instead of "kilogram-force" in expressing the conversion factors for forces. The newton unit of force will find increasing use, and is essential in SI units.

Table 1

QUANTITIES AND UNITS OF SPACE

Multiply	By	To obtain
LENGTH		
Mil.	25.4 (exactly)	Millim
Inches	25.4 (exactly)	Millimeters
Feet	2.54 (exactly)*	Centimeters
Feet	30.48 (exactly)	Centimeters
Feet	0.3048 (exactly)*	Meters
Feet	0.0003048 (exactly)*	Kilometers
Yards	0.9144 (exactly)	Meters
Miles (statute)	1,609.344 (exactly)*	Meters
Miles (statute)	1.609344 (exactly)	Kilometers
AREA		
Square inches	6.4516 (exactly)	Square centimeters
Square feet	929.03 (exactly)*	Square centimeters
Square feet	0.092903 (exactly)	Square meters
Square yards	0.836127	Square meters
Acres	0.404699	Hectares
Acres	4,046.9	Square meters
Acres	0.0040469	Square kilometers
Square miles	2.58999	Square kilometers
VOLUME		
Cubic inches	16.3871	Cubic centimeters
Cubic feet	0.0283168	Cubic meters
Cubic yards	0.764555	Cubic meters
CAPACITY		
Fluid ounces (U.S.)	29.5737	Cubic centimeters
Fluid ounces (U.S.)	29.5729	Milliliters
Liquid pints (U.S.)	0.473179	Cubic decimeters
Liquid pints (U.S.)	0.473166	Liters
Quarts (U.S.)	9.46358	Cubic centimeters
Quarts (U.S.)	0.946358	Liters
Gallons (U.S.)	3.78543	Cubic centimeters
Gallons (U.S.)	3.78543	Cubic decimeters
Gallons (U.S.)	3.78533	Liters
Gallons (U.S.)	0.00378543	Cubic meters
Gallons (U.K.)	4.54609	Cubic decimeters
Gallons (U.K.)	4.54596	Liters
Cubic feet	28.3160	Liters
Cubic yards	764.55	Liters
Acres-feet	1,233.5	Cubic meters
Acres-feet	1,233,500	Liters

Table II

QUANTITIES AND UNITS OF MECHANICS

Multiply	By	To obtain	Multiply	By	To obtain
MASS					
Grains (1/7,000 lb)	64.79891 (exactly)	Milligrams	Pounds	0.453592*	Kilograms
Troy ounces (480 grains)	31.1035	Grams	Btu per hour	4.4482*	Newtons
Ounces (avdp)	28.3495	Grams	Foot-pounds per second	1.35582	Watts
Pounds (avdp)	0.45359237 (exactly)	Kilograms	WORK AND ENERGY		
Short tons (2,000 lb)	907.185	Metric tons	British thermal units (Btu)	0.252*	Kilogram calories
Long tons (2,240 lb)	1,016.05	Kilograms	Btu per pound	1,095.06	Joules
			Foot-pounds	2.326 (exactly)	Joules per gram
				1.35582*	Joules
FORCE/AREA					
Pounds per square inch	0.070307	Kilograms per square centimeter	Horsepower	745.700	Watts
Pounds per square foot	0.689476	Newtons per square centimeter	Foot-pounds per second	0.293071	Watts
	4.88243	Kilograms per square meter		1.35582	Watts
	47.8803	Newtons per square meter	HEAT TRANSFER		
MASS/VOLUME (DENSITY)					
Ounces per cubic inch	1.72999	Grams per cubic centimeter	Btu in./hr ft ² deg F (k, thermal conductivity)	1.442	Milliwatts/cm deg C
Pounds per cubic foot	16.0185	Kilograms per cubic meter	Btu ft/hr ft ² deg F	0.1240	Kg cal/hr m deg C
Tons (long) per cubic yard	0.0160185	Grams per cubic centimeter	Btu/hr ft ² deg F (C, thermal conductivity)	1.4880*	Kg cal/hr m ² deg C
	1.32824	Grams per cubic centimeter	Deg F hr ft ² /Btu (R, thermal resistance)	0.568	Milliwatts/cm ² deg C
Ounces per gallon (U.S.)	7.4893	Grams per liter	Deg F hr ft ² /Btu (R, thermal resistance)	4.882	Kg cal/hr m ² deg C
Pounds per gallon (U.S.)	6.2362	Grams per liter	Btu/lb deg F (C, heat capacity)	1.761	Deg C cm ² /milliwatt
Pounds per gallon (U.S.)	119.829	Grams per liter	Btu/lb deg F	4.1868	J/g deg C
	99.1779	Grams per liter	ft ² /hr (thermal diffusivity)	1.000*	Cal/gram deg C
				0.2181	cm ² /sec
				0.09290*	m ² /hr
BENDING MOMENT OR TORQUE					
Inch-pounds	0.011921	Meter-kilograms	Grains/hr ft ² (water vapor transmission)	16.7	Grams/24 hr m ²
Foot-pounds	1.12985 x 10 ⁶	Centimeter-dynes	Petres (permeance)	0.699	Metric petres
	1.35582	Meter-kilograms	Form-inches (permeability)	1.67	Metric petre-centimeters
Foot-pounds per inch	1.35582 x 10 ⁹	Centimeter-dynes	OTHER QUANTITIES AND UNITS		
Ounce-inches	5.4431	Centimeter-kilograms	Multiply	By	To obtain
	72.008	Gram-centimeters	Cubic feet per square foot per day (seepage)	304.8*	Liters per square meter per day
			Pound-seconds per square foot (viscosity)	4.8824*	Kilogram second per square meter
			Square feet per second (viscosity)	0.09303* (exactly)	Square meters per second
			Fahrenheit degrees (change)*	5/9 exactly	Celsius or Kelvin degrees (change)*
			Volts per mil	0.001	Kilovolts per millivolt
			Lumens per square foot (foot-candles)	0.09307	Kilolumens per millilumen
			Non-circular mils per foot	10.764	Lumens per square meter
			Milliarcseconds per cubic foot	0.001662	Ohm-square millimeters per meter
			Milliamps per square foot	35.3147*	Milliamps per cubic meter
			Liters per square foot	10.7639*	Milliliters per square meter
			Gallons per square yard	4.52721*	Liters per square meter
			Pounds per inch	0.17848*	Kilograms per centimeter

ABSTRACT

"Water Measurement Procedures" was written primarily for use in the Irrigation Operators' Workshop classes as a teaching aid in presenting the fundamentals of water measurement to field personnel engaged in irrigation work. Technical material has been simplified to an ultimate degree to provide a clearer understanding of water measurement devices and procedures. Basic hydraulics presented includes the discharge equation, velocity head concept, orifice and weir relationships, and the effect of submergence. Weirs are used to indicate the influence on accuracy of approach flow, turbulence, rough water surface, and poor flow patterns. Factors affecting the accuracy of measurement such as worn equipment, infrequent head measurement, use of wrong measuring device, and others are analyzed. Commonly used devices and methods are discussed including orifices, weirs, venturi meters, flumes, meter gates, constant head turnouts and propeller meters; new devices and methods include vane deflection meters, acoustic and magnetic meters, and the dilution and radioisotope methods of measurement. Hints for troubleshooting poorly operating devices, suggestions to operators on how to do a good job, and a selected reading list for operators are given.

ABSTRACT

"Water Measurement Procedures" was written primarily for use in the Irrigation Operators' Workshop classes as a teaching aid in presenting the fundamentals of water measurement to field personnel engaged in irrigation work. Technical material has been simplified to an ultimate degree to provide a clearer understanding of water measurement devices and procedures. Basic hydraulics presented includes the discharge equation, velocity head concept, orifice and weir relationships, and the effect of submergence. Weirs are used to indicate the influence on accuracy of approach flow, turbulence, rough water surface, and poor flow patterns. Factors affecting the accuracy of measurement such as worn equipment, infrequent head measurement, use of wrong measuring device, and others are analyzed. Commonly used devices and methods are discussed including orifices, weirs, venturi meters, flumes, meter gates, constant head turnouts and propeller meters; new devices and methods include vane deflection meters, acoustic and magnetic meters, and the dilution and radioisotope methods of measurement. Hints for troubleshooting poorly operating devices, suggestions to operators on how to do a good job, and a selected reading list for operators are given.

ABSTRACT

"Water Measurement Procedures" was written primarily for use in the Irrigation Operators' Workshop classes as a teaching aid in presenting the fundamentals of water measurement to field personnel engaged in irrigation work. Technical material has been simplified to an ultimate degree to provide a clearer understanding of water measurement devices and procedures. Basic hydraulics presented includes the discharge equation, velocity head concept, orifice and weir relationships, and the effect of submergence. Weirs are used to indicate the influence on accuracy of approach flow, turbulence, rough water surface, and poor flow patterns. Factors affecting the accuracy of measurement such as worn equipment, infrequent head measurement, use of wrong measuring device, and others are analyzed. Commonly used devices and methods are discussed including orifices, weirs, venturi meters, flumes, meter gates, constant head turnouts and propeller meters; new devices and methods include vane deflection meters, acoustic and magnetic meters, and the dilution and radioisotope methods of measurement. Hints for troubleshooting poorly operating devices, suggestions to operators on how to do a good job, and a selected reading list for operators are given.

ABSTRACT

"Water Measurement Procedures" was written primarily for use in the Irrigation Operators' Workshop classes as a teaching aid in presenting the fundamentals of water measurement to field personnel engaged in irrigation work. Technical material has been simplified to an ultimate degree to provide a clearer understanding of water measurement devices and procedures. Basic hydraulics presented includes the discharge equation, velocity head concept, orifice and weir relationships, and the effect of submergence. Weirs are used to indicate the influence on accuracy of approach flow, turbulence, rough water surface, and poor flow patterns. Factors affecting the accuracy of measurement such as worn equipment, infrequent head measurement, use of wrong measuring device, and others are analyzed. Commonly used devices and methods are discussed including orifices, weirs, venturi meters, flumes, meter gates, constant head turnouts and propeller meters; new devices and methods include vane deflection meters, acoustic and magnetic meters, and the dilution and radioisotope methods of measurement. Hints for troubleshooting poorly operating devices, suggestions to operators on how to do a good job, and a selected reading list for operators are given.

Ryd-552

Peterka, Alvin J.

WATER MEASUREMENT PROCEDURES--IRRIGATION OPERATORS WORKSHOP LECTURE NOTES,
VOL II, 1965

Bureau of Reclamation, Denver, November 1965, 90 p, (including 47 fig,
25 ref)

DESCRIPTIONS-- *hydraulics/ *hydraulic structures/ *discharge measurement/
*irrigation/ water delivery/ water measurement/ open channel flow/ errors/
closed conduit flow/ discharge coefficients/ weirs/ orifices/ water meters/
water metering/ irrigation O&M/ turbulent flow/ venturi meters/ instruction/
venturi flumes/ submerged orifices/ radioactive isotopes/ velocity/ field
investigations/ flow meters/ bibliographies/ submergence/ instrumentation
IDENTIFIERS-- textbooks/ Irrigation Operators Workshop/ dilution method/
acoustic flow meters/ magnetic flow meters/ constant-head orifices/ vane
deflection meters

Ryd-552

Peterka, Alvin J.

WATER MEASUREMENT PROCEDURES--IRRIGATION OPERATORS WORKSHOP LECTURE NOTES,
VOL II, 1965

Bureau of Reclamation, Denver, November 1965, 90 p, (including 47 fig,
25 ref)

DESCRIPTIONS-- *hydraulics/ *hydraulic structures/ *discharge measurement/
*irrigation/ water delivery/ water measurement/ open channel flow/ errors/
closed conduit flow/ discharge coefficients/ weirs/ orifices/ water meters/
water metering/ irrigation O&M/ turbulent flow/ venturi meters/ instruction/
venturi flumes/ submerged orifices/ radioactive isotopes/ velocity/ field
investigations/ flow meters/ bibliographies/ submergence/ instrumentation
IDENTIFIERS-- textbooks/ Irrigation Operators Workshop/ dilution method/
acoustic flow meters/ magnetic flow meters/ constant-head orifices/ vane
deflection meters

Ryd-552

Peterka, Alvin J.

WATER MEASUREMENT PROCEDURES--IRRIGATION OPERATORS WORKSHOP LECTURE NOTES,
VOL II, 1965

Bureau of Reclamation, Denver, November 1965, 90 p, (including 47 fig,
25 ref)

DESCRIPTIONS-- *hydraulics/ *hydraulic structures/ *discharge measurement/
*irrigation/ water delivery/ water measurement/ open channel flow/ errors/
closed conduit flow/ discharge coefficients/ weirs/ orifices/ water meters/
water metering/ irrigation O&M/ turbulent flow/ venturi meters/ instruction/
venturi flumes/ submerged orifices/ radioactive isotopes/ velocity/ field
investigations/ flow meters/ bibliographies/ submergence/ instrumentation
IDENTIFIERS-- textbooks/ Irrigation Operators Workshop/ dilution method/
acoustic flow meters/ magnetic flow meters/ constant-head orifices/ vane
deflection meters

Ryd-552

Peterka, Alvin J.

WATER MEASUREMENT PROCEDURES--IRRIGATION OPERATORS WORKSHOP LECTURE NOTES,
VOL II, 1965

Bureau of Reclamation, Denver, November 1965, 90 p, (including 47 fig,
25 ref)

DESCRIPTIONS-- *hydraulics/ *hydraulic structures/ *discharge measurement/
*irrigation/ water delivery/ water measurement/ open channel flow/ errors/
closed conduit flow/ discharge coefficients/ weirs/ orifices/ water meters/
water metering/ irrigation O&M/ turbulent flow/ venturi meters/ instruction/
venturi flumes/ submerged orifices/ radioactive isotopes/ velocity/ field
investigations/ flow meters/ bibliographies/ submergence/ instrumentation
IDENTIFIERS-- textbooks/ Irrigation Operators Workshop/ dilution method/
acoustic flow meters/ magnetic flow meters/ constant-head orifices/ vane
deflection meters